

# Double Door Plastic Cabinet

Thank you for purchasing this Croydex product. Please follow the fixing and care instructions to ensure your cabinet is fitted safely and retains its high quality finish.  
Please retain this leaflet for future reference.

This installation guide applies to the following cabinets:

WC262122 - Double Door Plastic Cabinet

## Tools required - not supplied

Pencil; Tape Measure; Cross Head Screwdriver; Drill; 6mm Drill Bit (Ceramic drill bit optional).

## KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN

### Home Safety Advice

- It is recommended that two people fit this product to ensure that it is fitted safely.
- Always take care when using power tools, particularly in the bathroom.
- Always check for hidden cables and pipework before drilling and take extreme care if there is any water in the working area.
- It is advisable to use a residual current circuit breaker (RCCB).
- Always wear suitable eye protection when drilling.
- If the product is to be fitted on a ceramic tiled wall, a ceramic drill bit should be used.
- Always ensure that the drill hole passes through the central tiled area rather than through the grouted area. To prevent damage to the tile, mask the area around the hole with tape before drilling.
- Do not strike the product with hard or sharp objects.

## Product Care


To retain the best quality finish, clean product regularly with a soft damp cloth.


Do not use abrasive or chemical cleaners as these will damage the product.

Do not overload the cabinet. Maximum safe working load is 10kg evenly distributed if mounted on to a solid wall. If mounted on to a cavity wall reduce the load to 5kg evenly distributed.


The cabinet doors should be opened and closed together by holding both handles and rotating the doors either outwards for opening or inwards for closing.

## Fixing Pack Contents

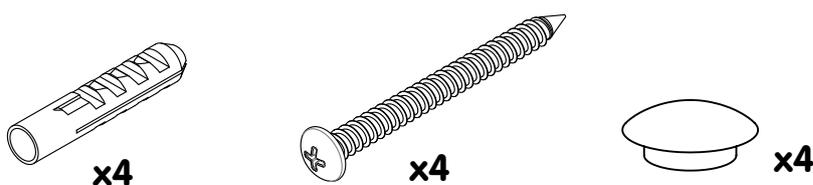


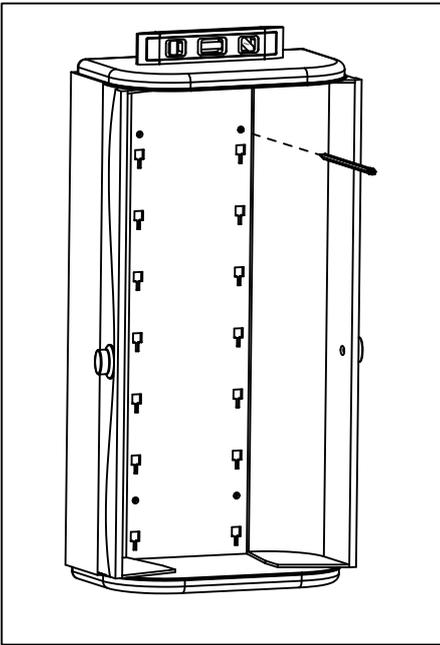


**Door opening - Grasp both door handles and rotate the doors carefully outwards. Place the cabinet in the desired location, level and mark screw hole positions.**

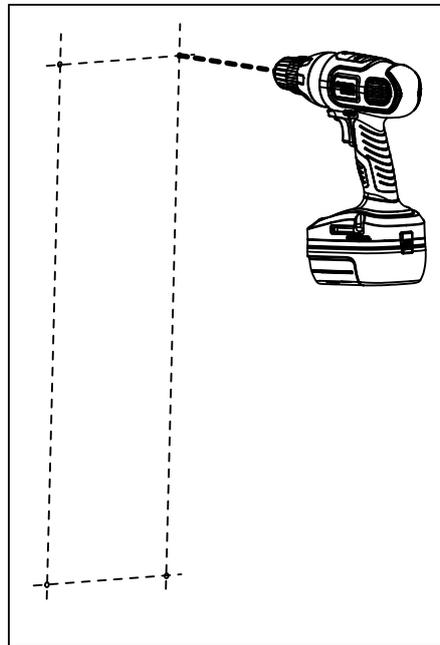


**Drill the holes using a 6mm drill bit to a suitable depth for the wall plugs.**

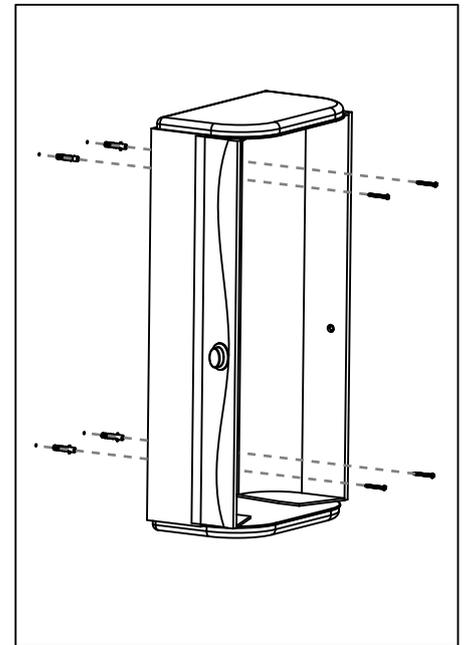

**Insert the wall plugs into the wall then screw the cabinet into position. Do not over-tighten the screws.**

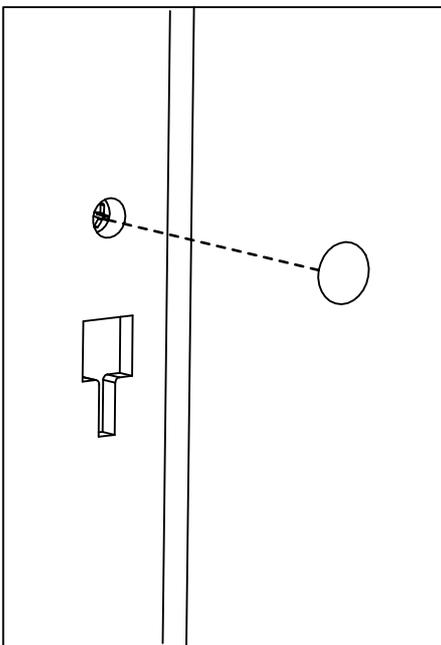

**Insert the cover caps in place to hide the screw heads.**

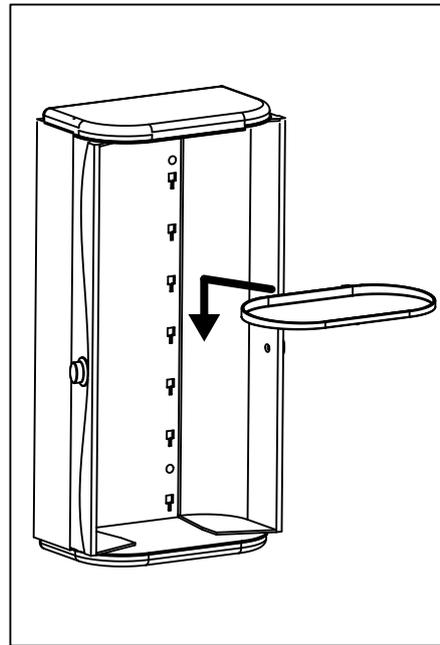

**Assemble the shelves into the cabinet to finish the installation.**