

## ERBD - BI FOLD DOOR ENCLOSURE (Note this is a 2 person assembly)

1. Fit the shower tray ensuring it is level across all areas. (Fig 1)

Fig 1



2. Apply silicone sealant to the edges of the tray after tiling. (Fig 2)

Fig 2



3. Take the wall channels (A) and position them 10mm from the front edge of the tray making sure they are vertical and plumb. Mark the fixing positions and drill for the wall plugs (x3) with an appropriate drill bit. Fit the wall plugs. Take care to avoid any hidden pipes or electrical cables. (Fig 3)

Fig 3



4. Slide the wall channels onto either side of the Bi-Fold Door frame (Fig 4) carefully lift the frame into position and fix to the wall using the 30mm screws. **NOTE! The Bi-Fold Door is reversible so the door opening can be LH or RH.**

Fig 4



5. Once aligned, drill x2 holes 150mm from the top & bottom on the inside of the enclosure with a 3.2mm drill bit, through the wall channel and frame (Fig 6). Secure by using the 10mm screws making sure the support cups are used. Fit the handle supplied.

Fig 5




6. Apply silicone down the vertical edges of the wall channel and along the bottom edge of the Bi-Fold Door frame (Fig6).


Fig 6



**DO NOT SEAL THE ENCLOSURE ON THE INSIDE OF THE TRAY!**

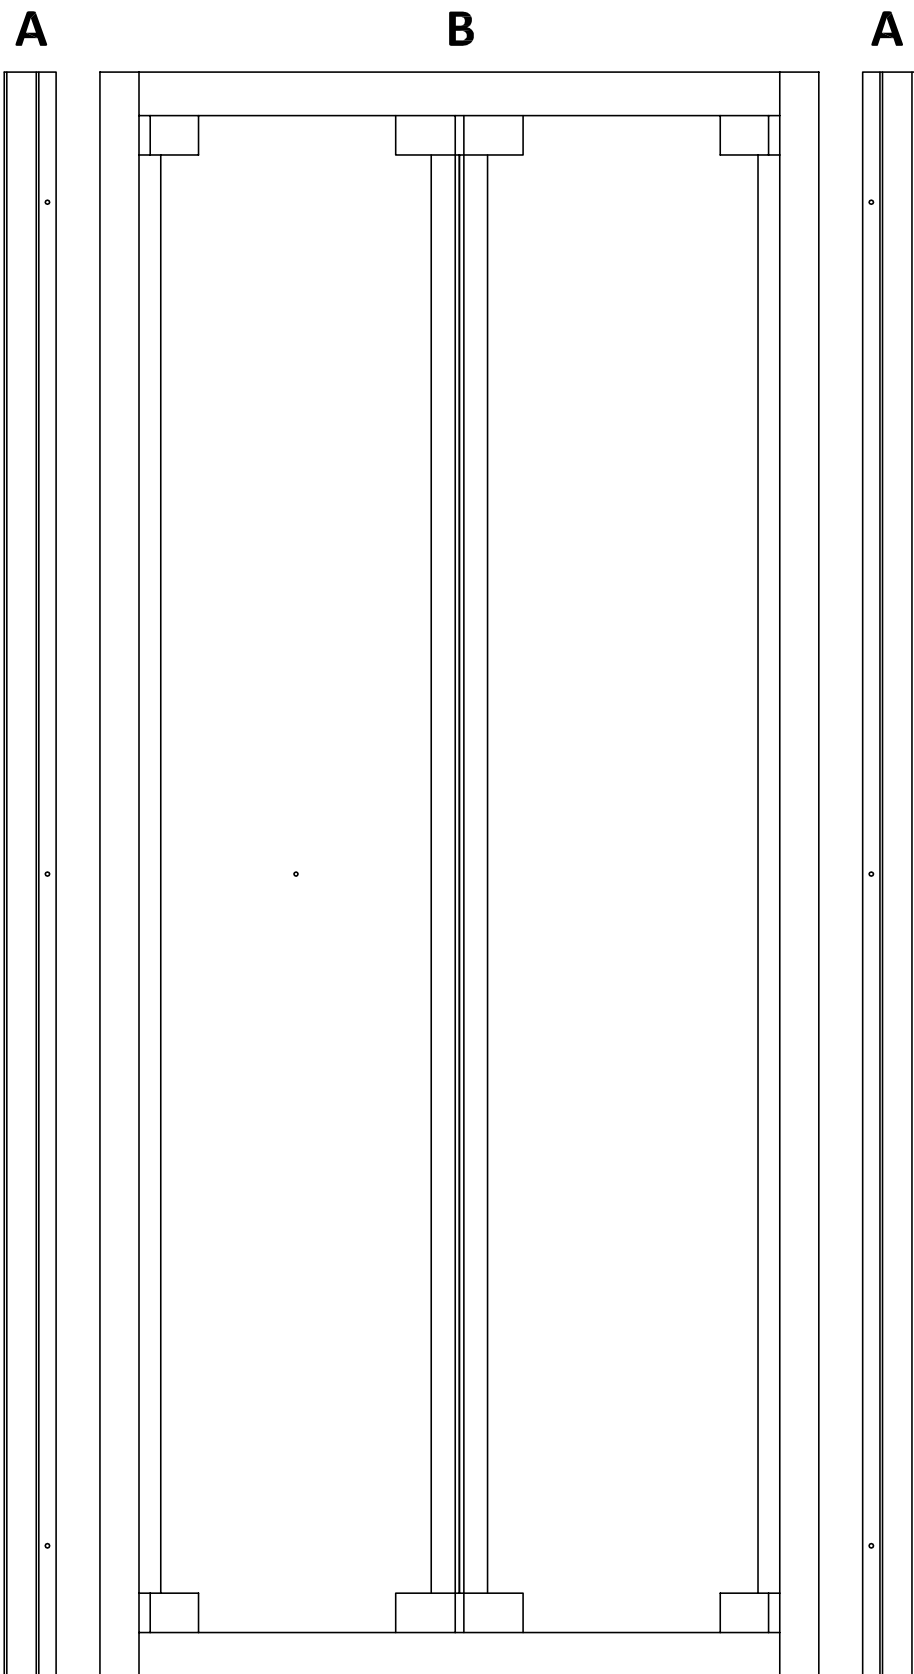

| PARTS LIST |                    |   |
|------------|--------------------|---|
| A          | WALL CHANNEL       | 2 |
| B          | BI-FOLD DOOR FRAME | 1 |

| FITTINGS LIST                                                                         |                    |    |
|---------------------------------------------------------------------------------------|--------------------|----|
|  | 10mm SCREWS        | 4  |
|  | 30mm SCREWS        | 6  |
|  | WALL PLUGS         | 6  |
|  | INNER SUPPORT CUPS | 10 |
|  | SCREW COVER CAP    | 10 |
|  | HANDLE             | 2  |

WHEN THIS ENCLOSURE IS TO BE FITTED WITH A SIDE PANEL, REFER TO THE SIDE PANEL INSTRUCTION IN CONJUNCTION WITH THESE.