
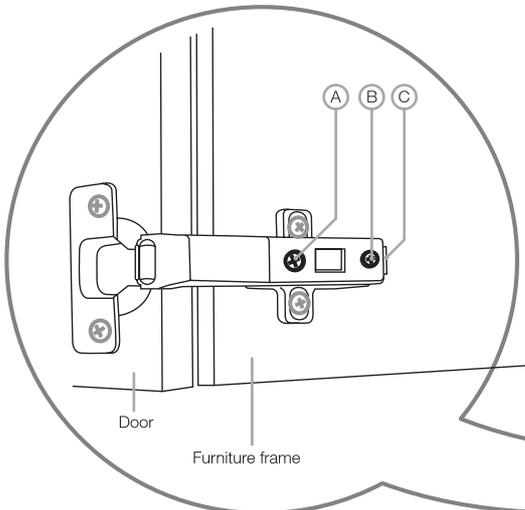
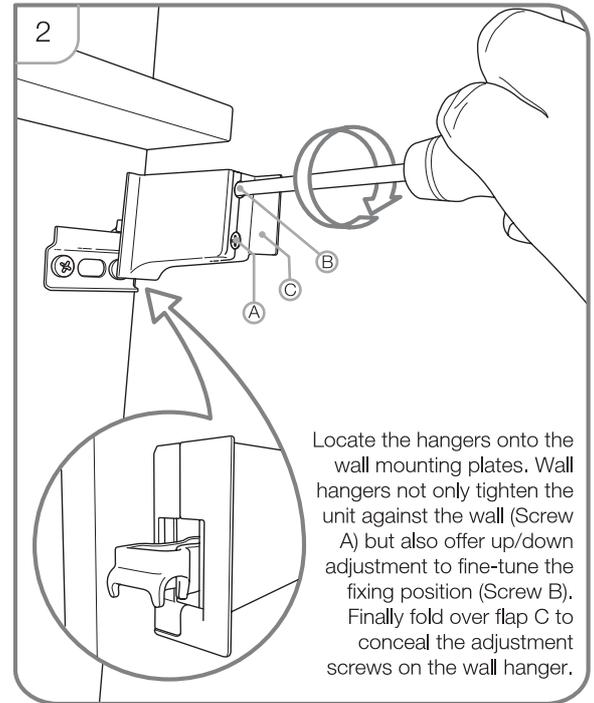


Please retain for future reference

### Before you start

It is recommended that the column is secured to a suitably reinforced wall to ensure stability. The wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs along with supplementary wall strengthening as units can be very heavy. Seek advice from a specialist about the suitability of fixings to be used.

Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling tiled surfaces as the drill might slip. Use a piece of masking tape to prevent the drill from wandering.

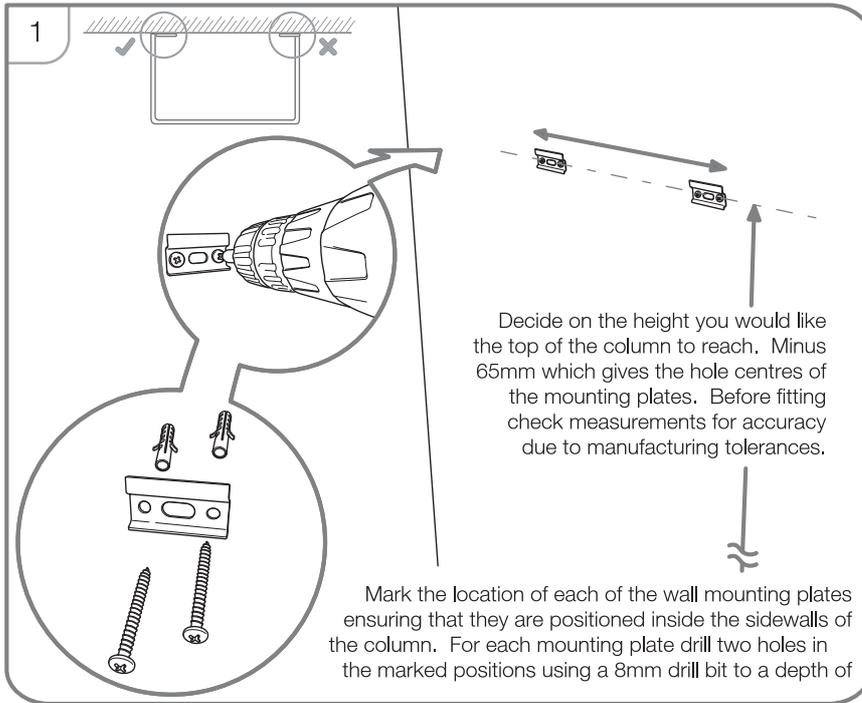


### Door adjustment

Screw A offers left / right adjustment for levelling up the doors.

Screw B offers forward / back adjustment (see Fig. 3).


Button C is the quick release, press this on both hinges to remove a door by releasing the hinges from their mounting plates.

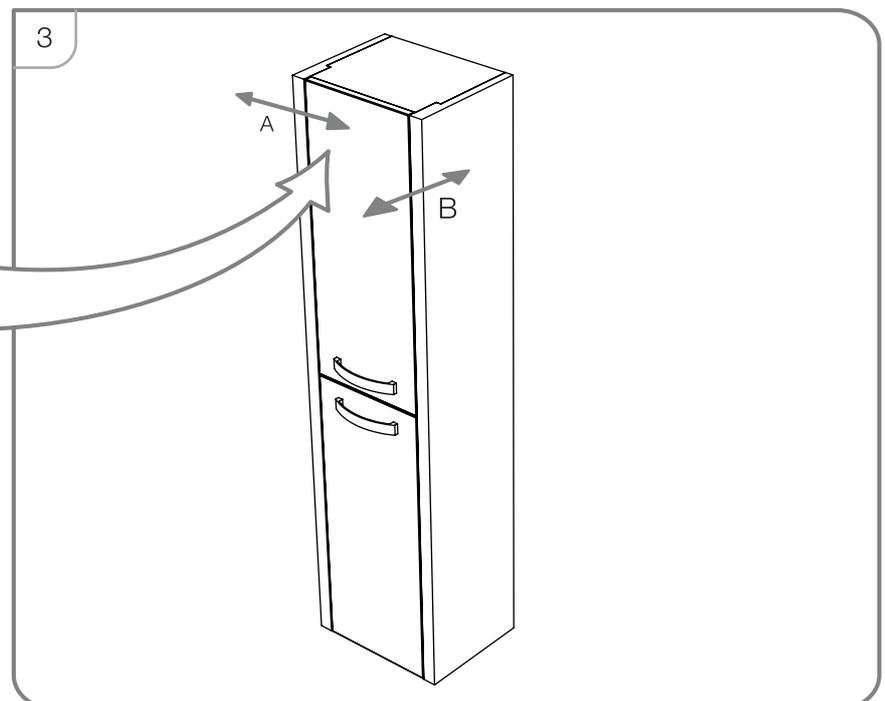

Please retain for future reference

#### Door reversal

The doors of the column can be altered to open left handed or right handed. There are pre-drilled holes for the hinge plates on either side. Simply unscrew the hinge plates, rotate the door 180 and refit on the opposite side. Use the supplied self adhesive cover caps to cover the unused hinge

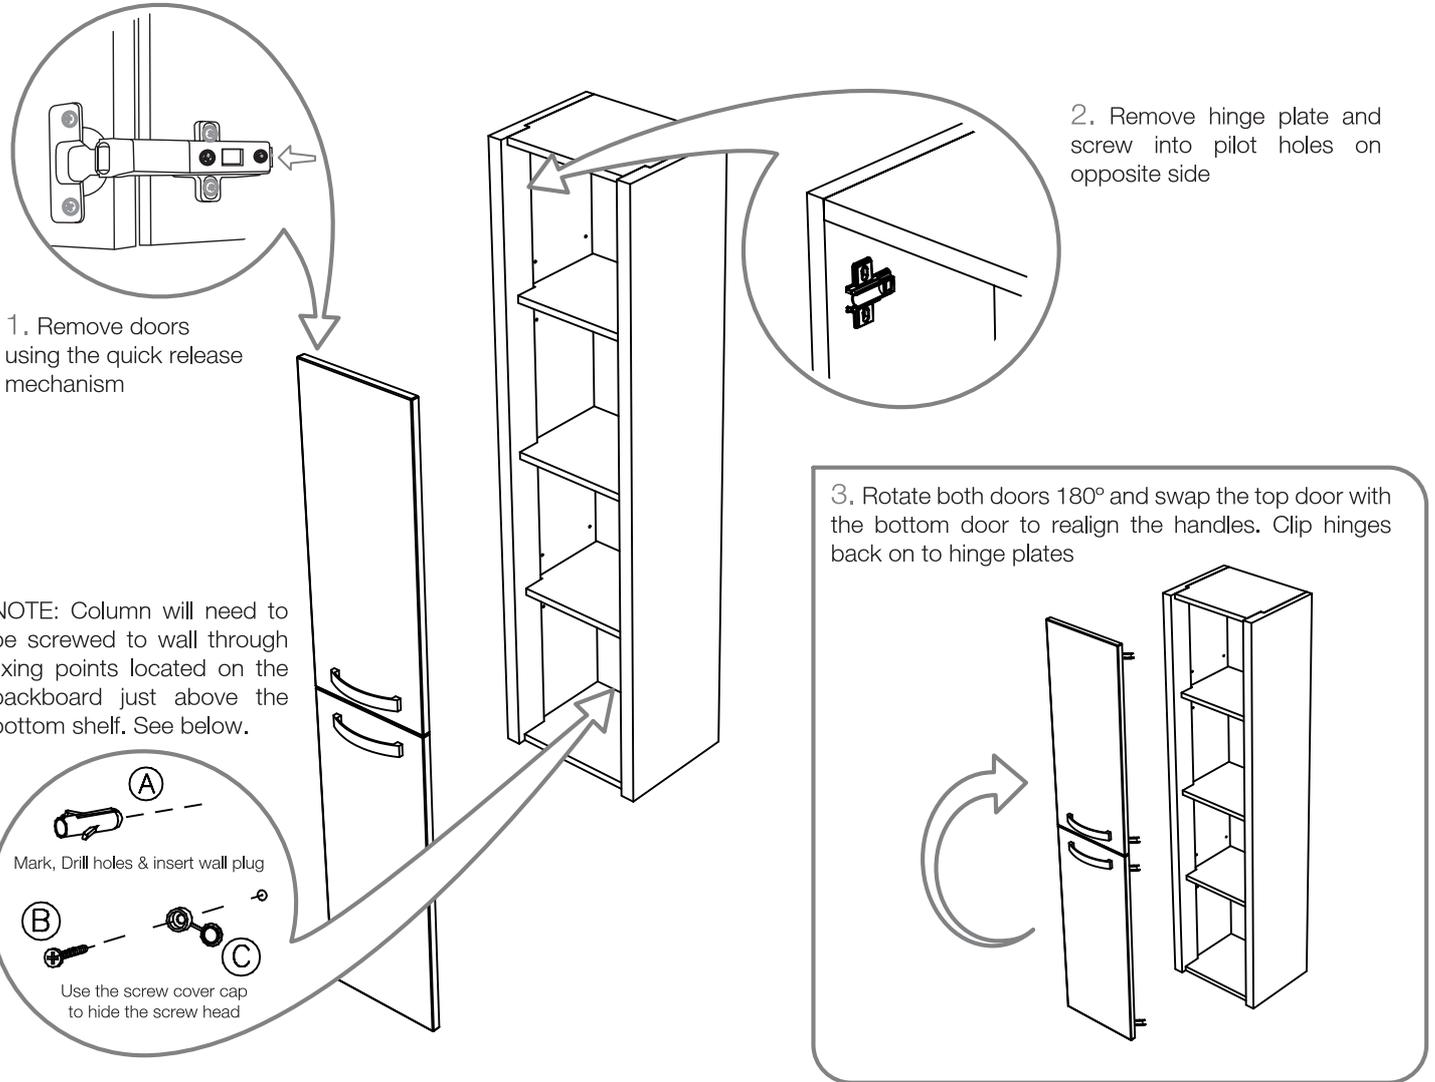


1. Remove doors using the quick release mechanism

2. Remove hinge plate and screw into pilot holes on opposite side

3. Rotate both doors 180° and swap the top door with the bottom door to realign the handles. Clip hinges back on to hinge plates

NOTE: Column will need to be screwed to wall through fixing points located on the backboard just above the bottom shelf. See below.

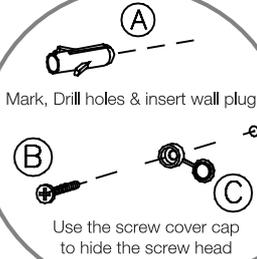

#### All wooden furniture should be treated with care...

##### We recommend



Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.



All bathrooms should be well ventilated with a suitable extractor fan.



Clean with a soft damp cloth only.



Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.

##### Please DO NOT...



Do not scrub or scour



Do not use abrasive cleaning agents

#### Replacement components

Should you require any replacement components for this product please contact Roper Rhodes using the contact details below.