







**Hinged Shower Door
Left and Right Side**
















Fitting Instructions

Please follow them carefully and
leave this manual with end user


Fitting list:

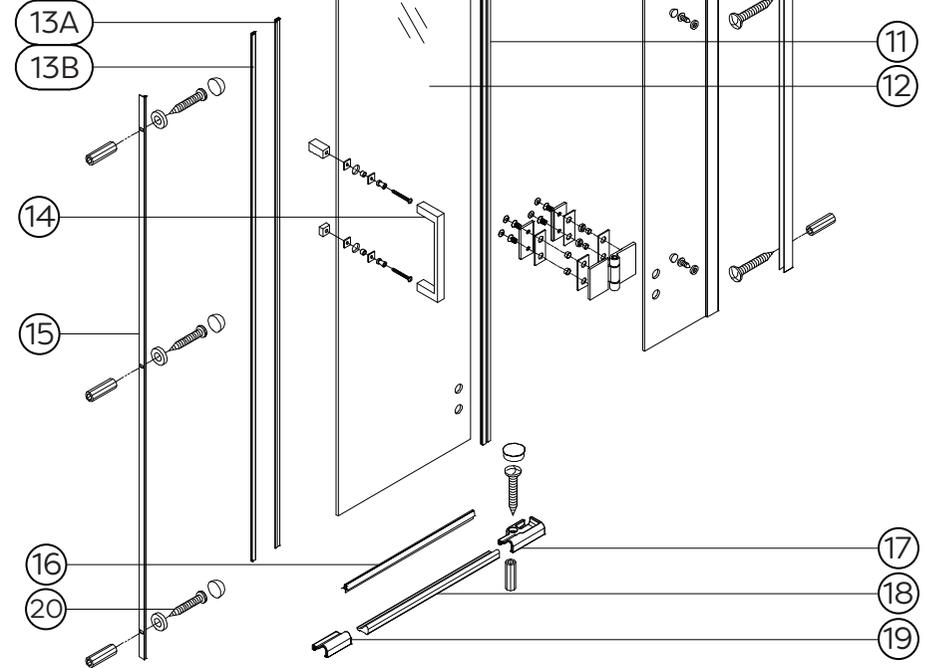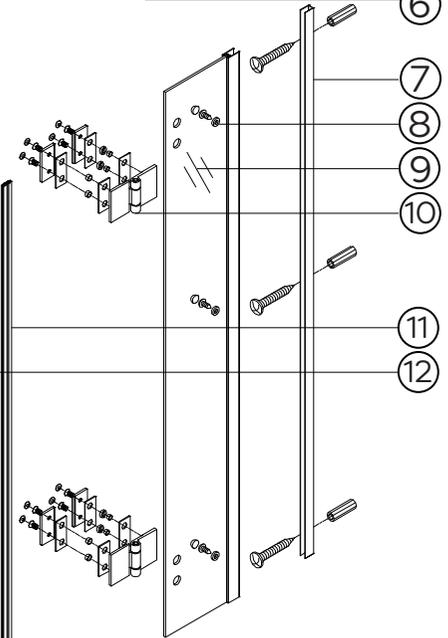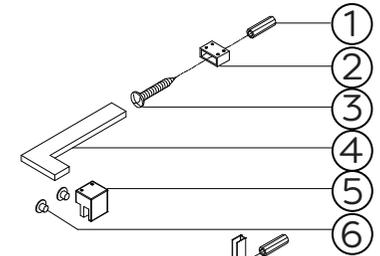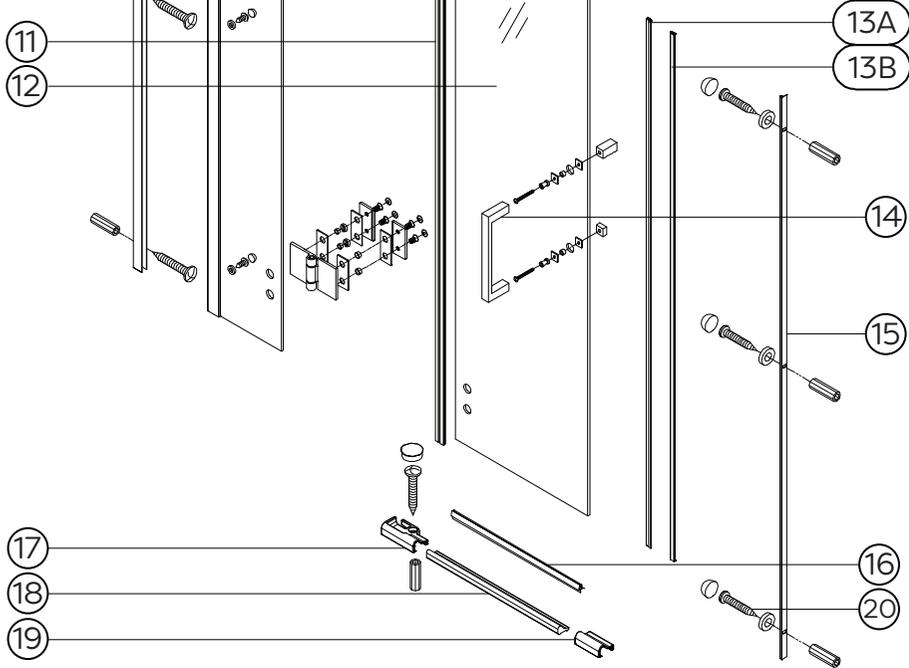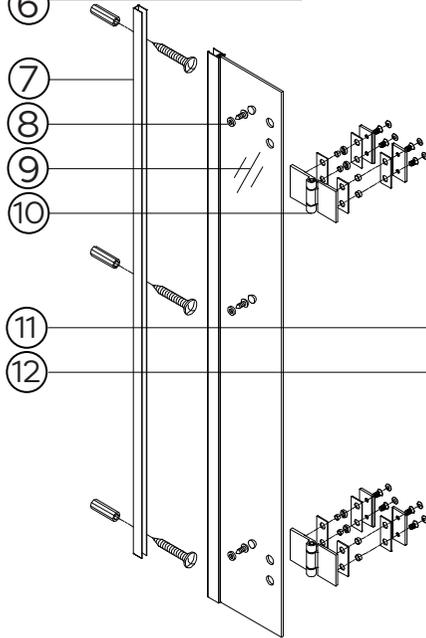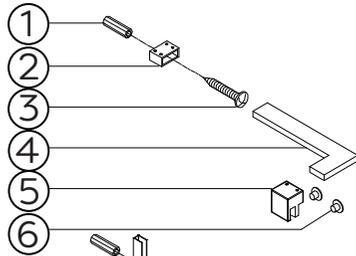

L R

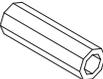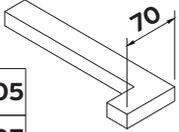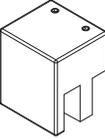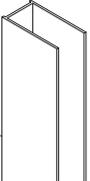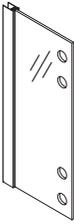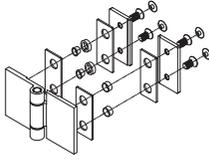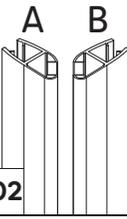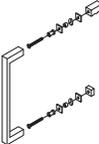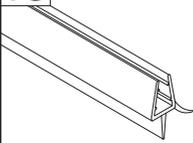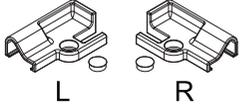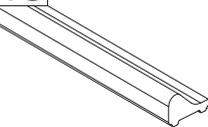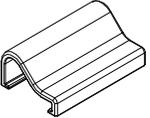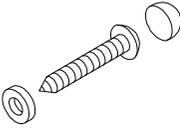1  D6X25 8Pcs	2  WX-D01 1Pc	3  ST4X30 8Pcs	4  WX-D05 WX-D07 WX-D09 1Pc	5  WX-D02 1Pc	6  D4X4 2Pcs										
7  WX-B01 1Pc	8  ST4X12 3Pcs	9  WX-D03 1Pc	10  WX-H01 2Pcs	11  WX-H02 1Pc	12  WX-B03 1Pc										
13  WX-H02 1Pair	14  WX-D04 1Pc	15  WX-H03 1Pc	16  WX-S01 2Pcs	17  L R WX-B03 1Pc	18  WX-S04 2Pcs										
19  WX-S04 2Pcs	20  ST4X30-1 3Pcs	<table border="1"> <tr> <td></td> <td>700 760</td> <td>800 900</td> <td>1000</td> <td>1200</td> </tr> <tr> <td>4</td> <td>WX-D05</td> <td>WX-D07</td> <td>WX-D09</td> <td></td> </tr> </table>					700 760	800 900	1000	1200	4	WX-D05	WX-D07	WX-D09	
	700 760	800 900	1000	1200											
4	WX-D05	WX-D07	WX-D09												


Tools:

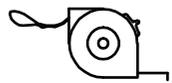


Tape Measure




Pencil

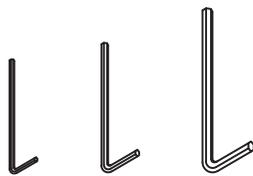

2mm 2.5mm 4mm
Allen Key

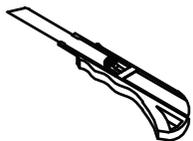


Safety Blade

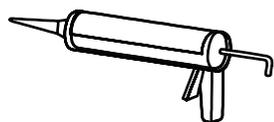

Silicone Sealant




Screw Driver


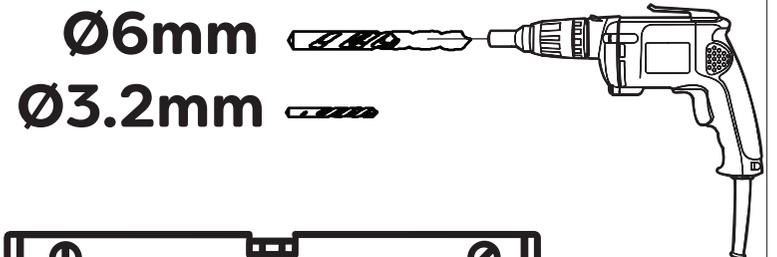


Power Drill




Spirit Level

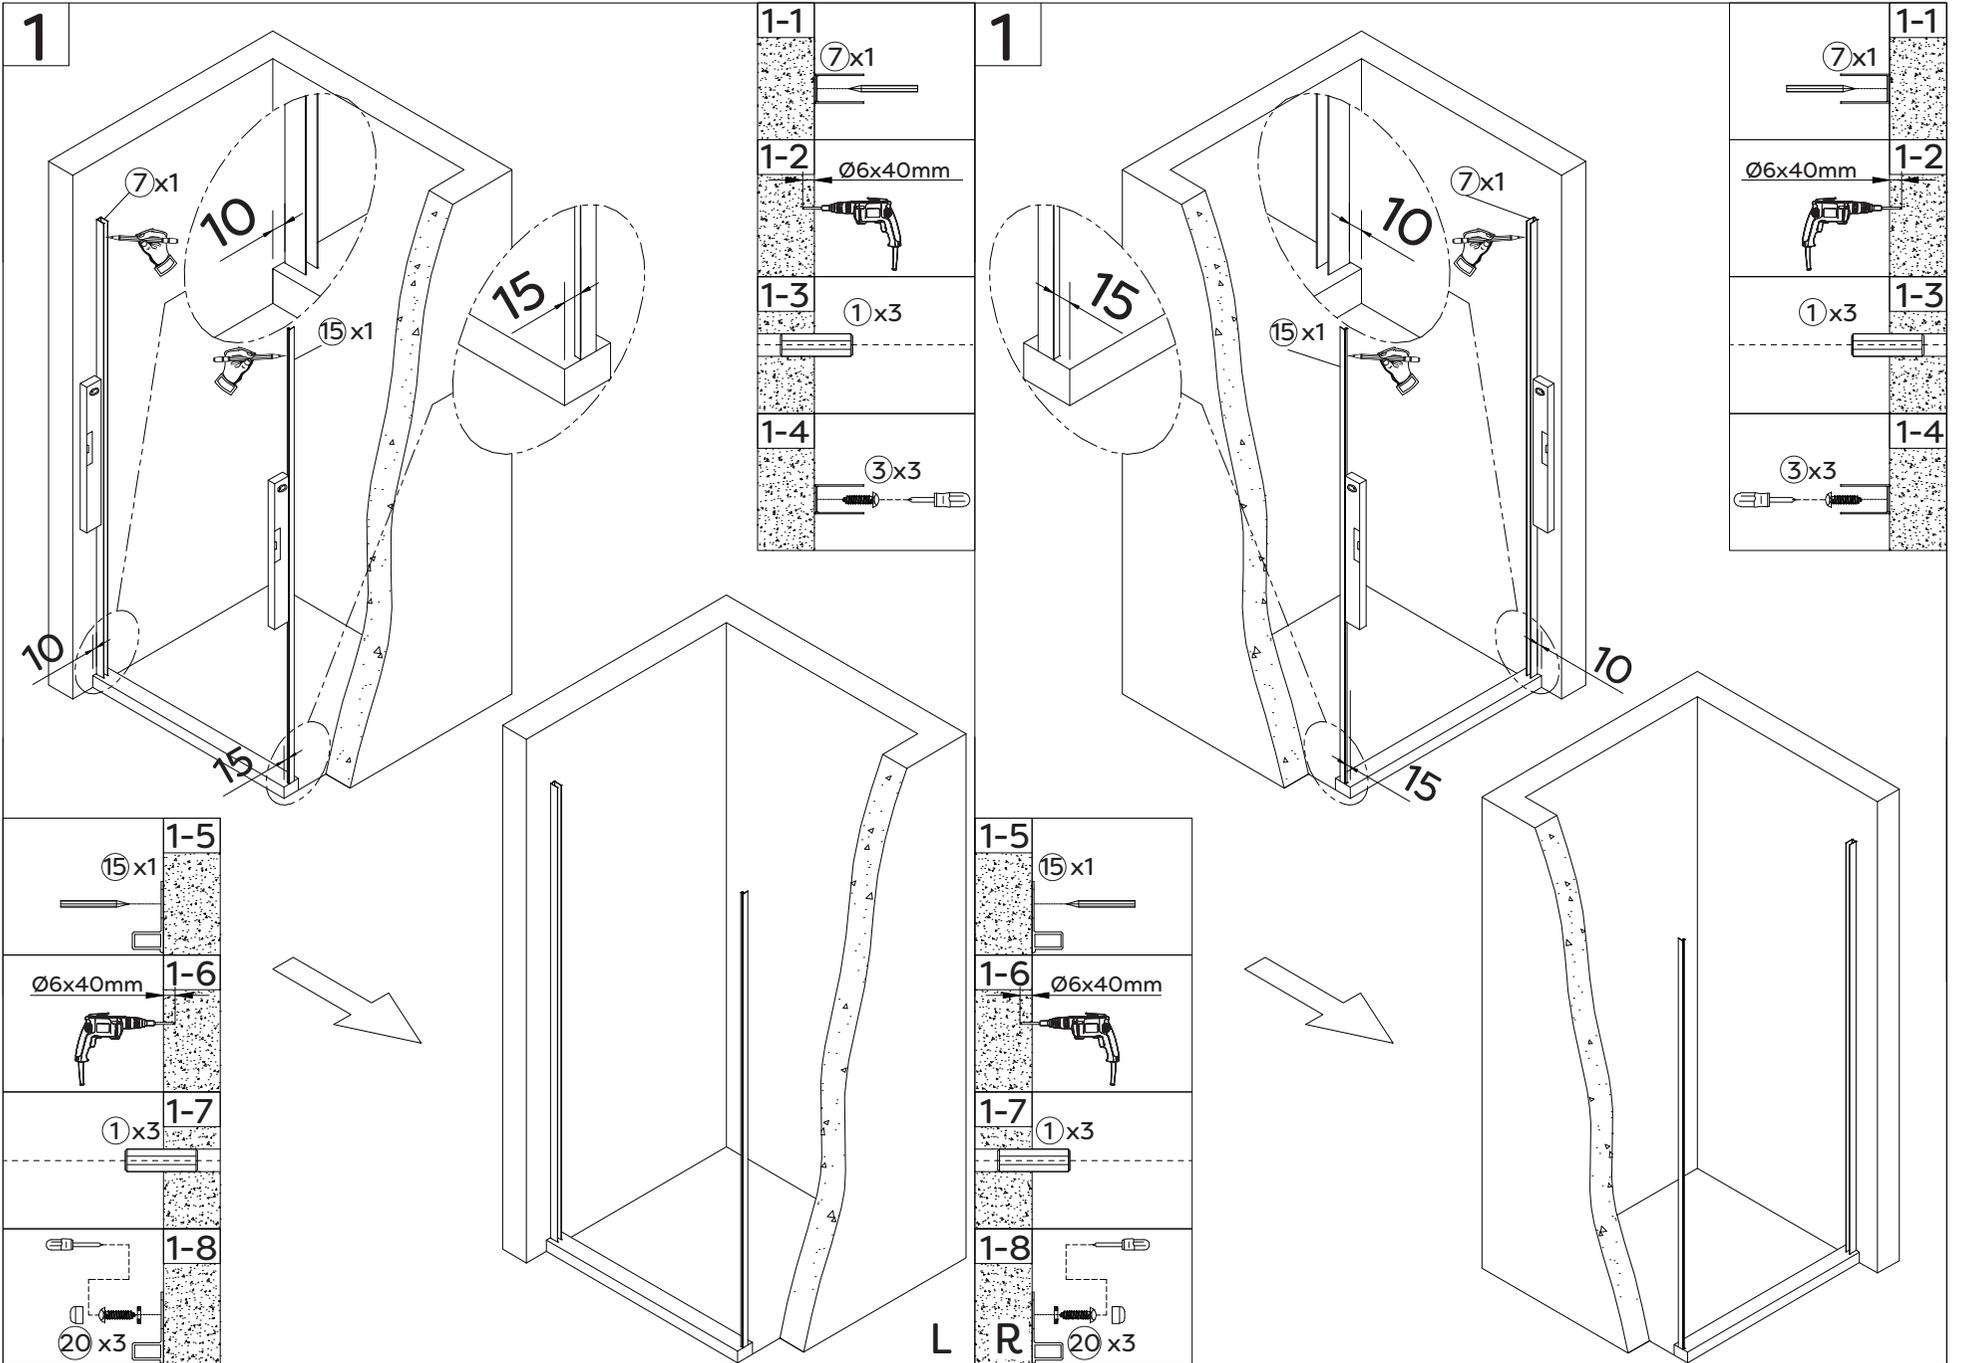

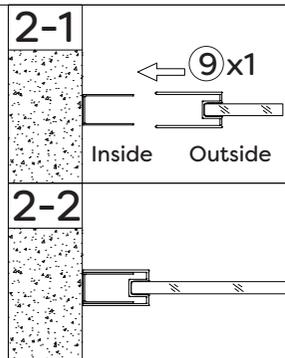
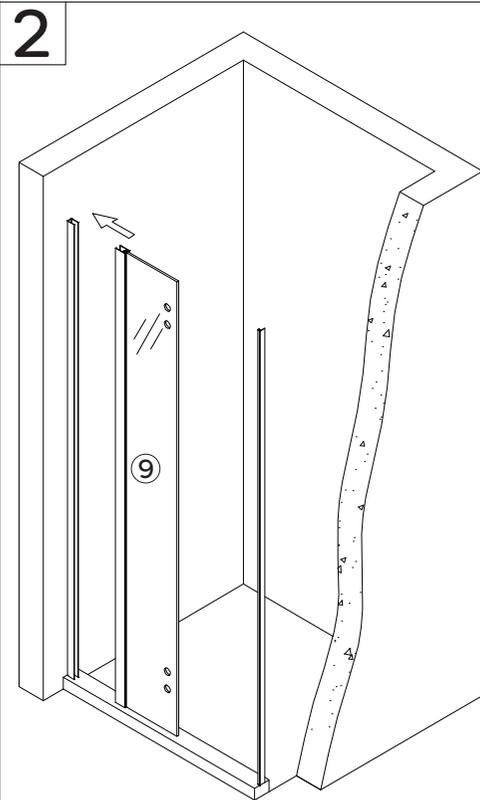


	X	Y
700	460	460
760	520	520
800	560	560
900	630	630
1000	630	630
1200	630	630

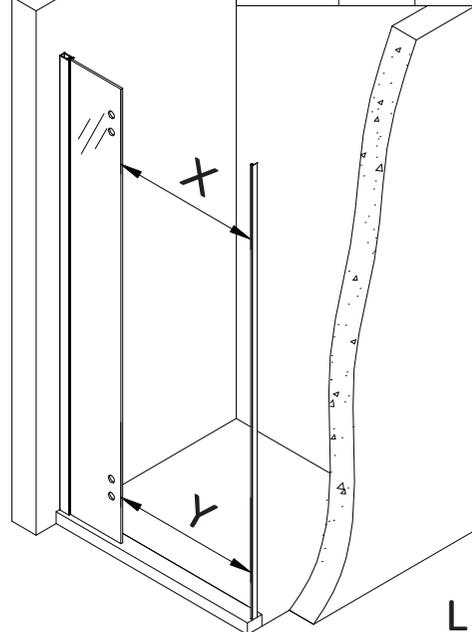


Using a spirit level: Ensure the profiles and the glass is set true and level.

L R

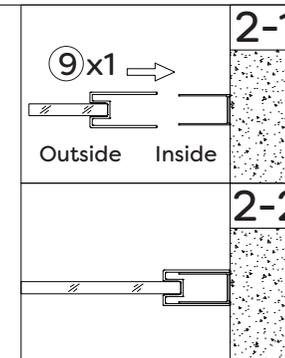
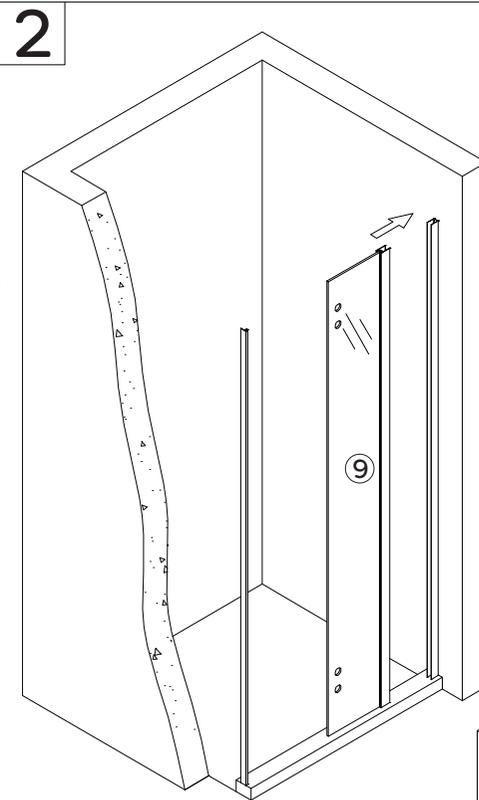


	X	Y
700	460	460
760	520	520
800	560	560
900	630	630
1000	630	630
1200	630	630

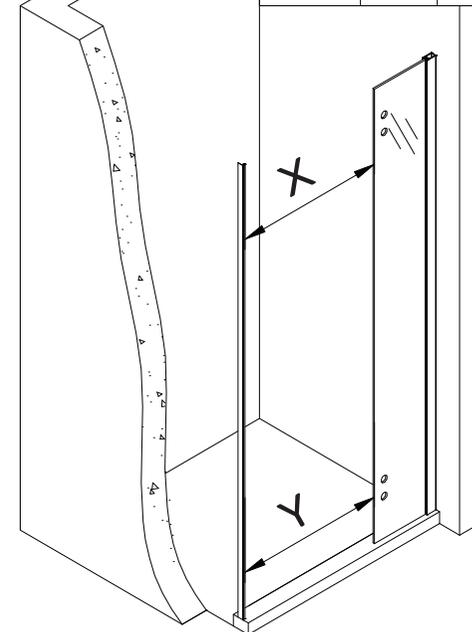


Using a spirit level: Ensure the profiles and the glass is set true and level.

3

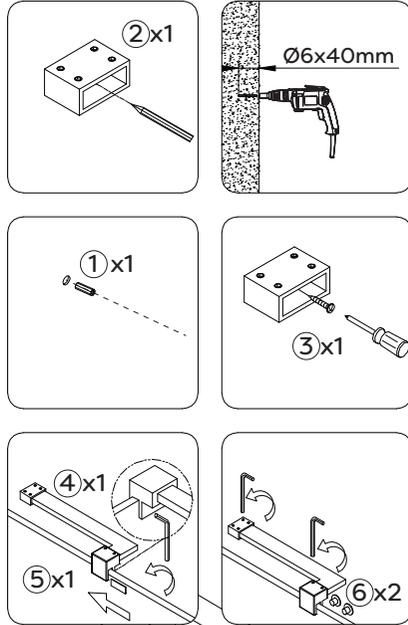
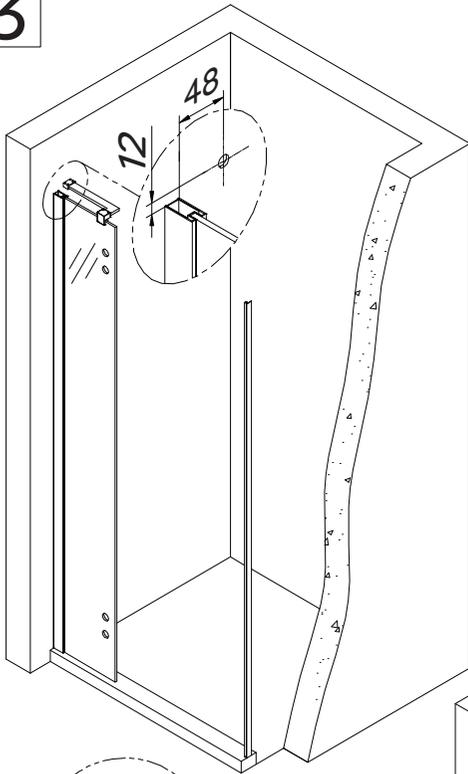


Matching rings

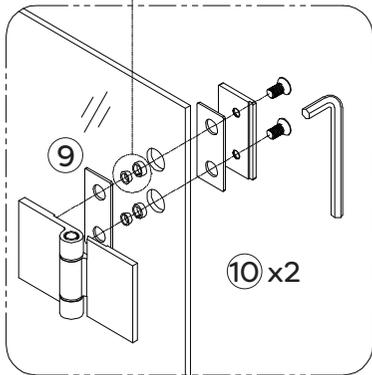


L

3

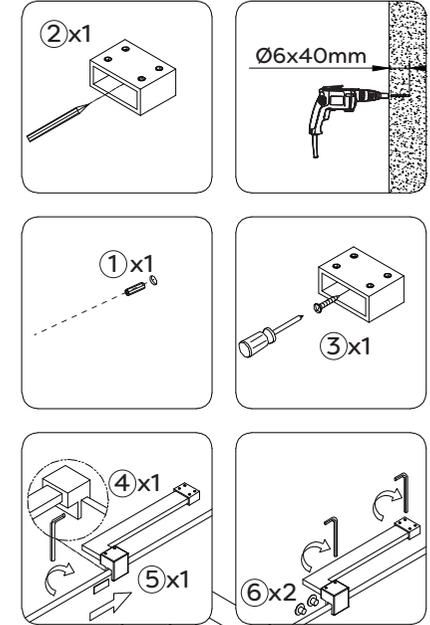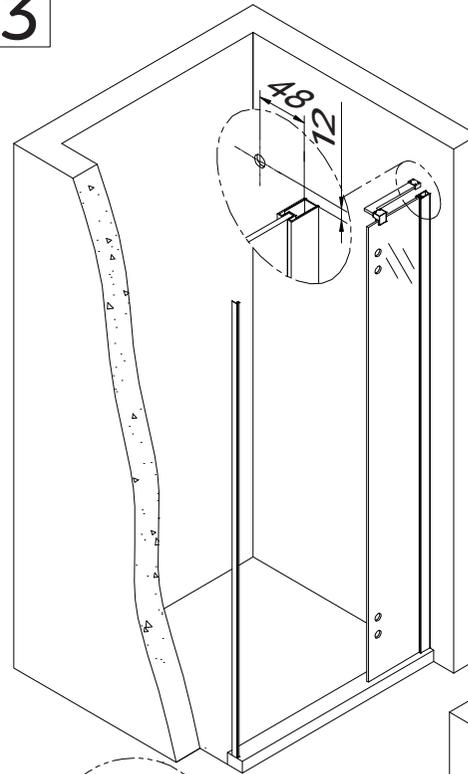


Matching rings

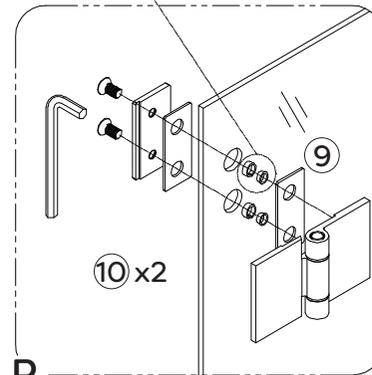


R

4

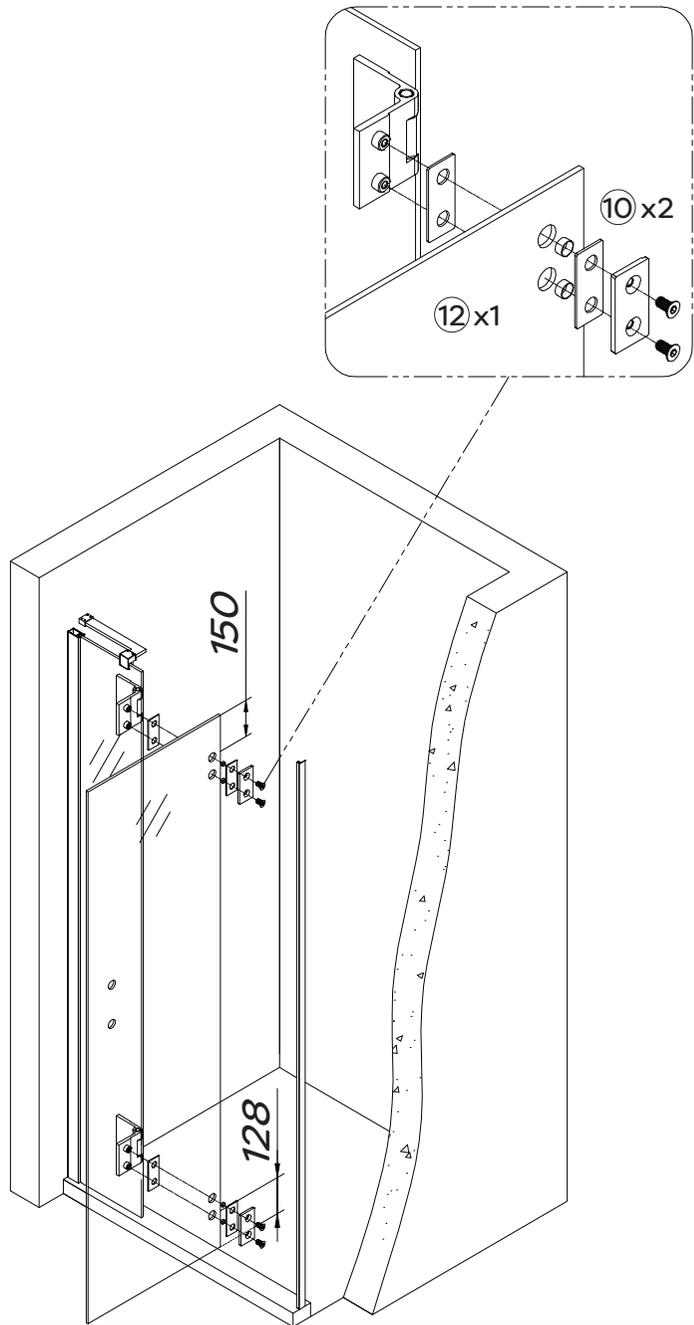




L

4

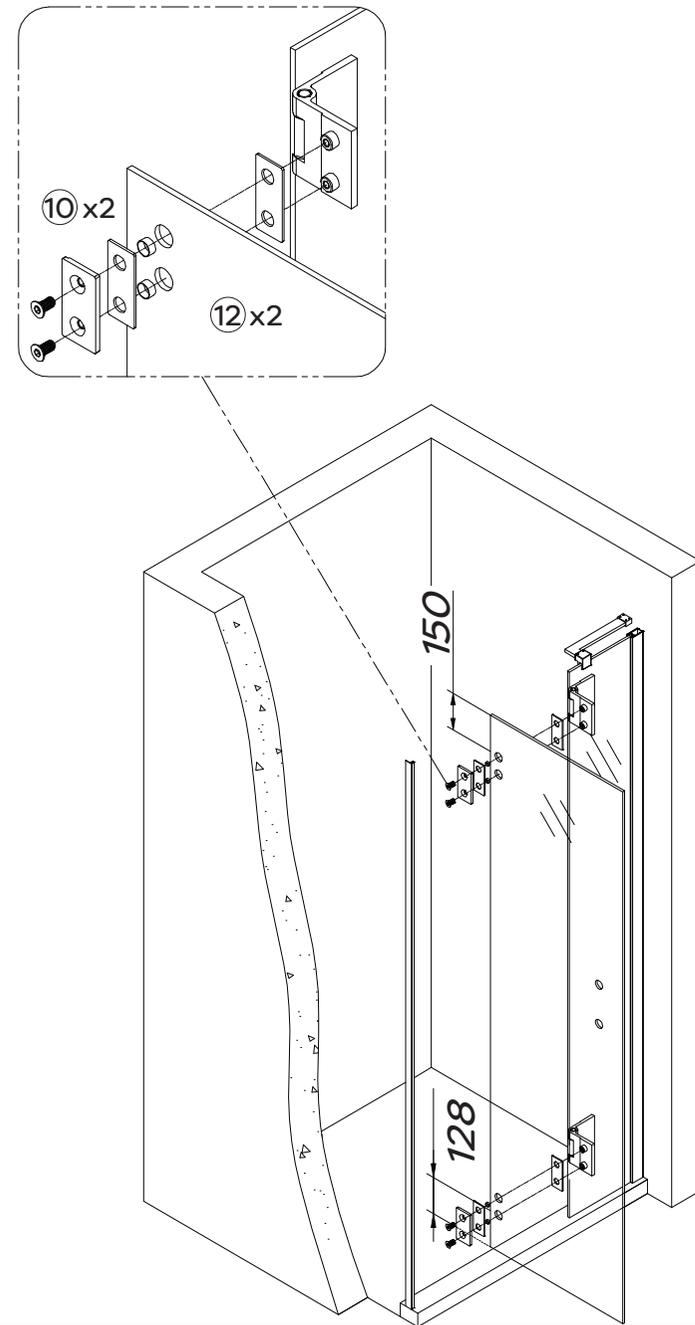

R




5

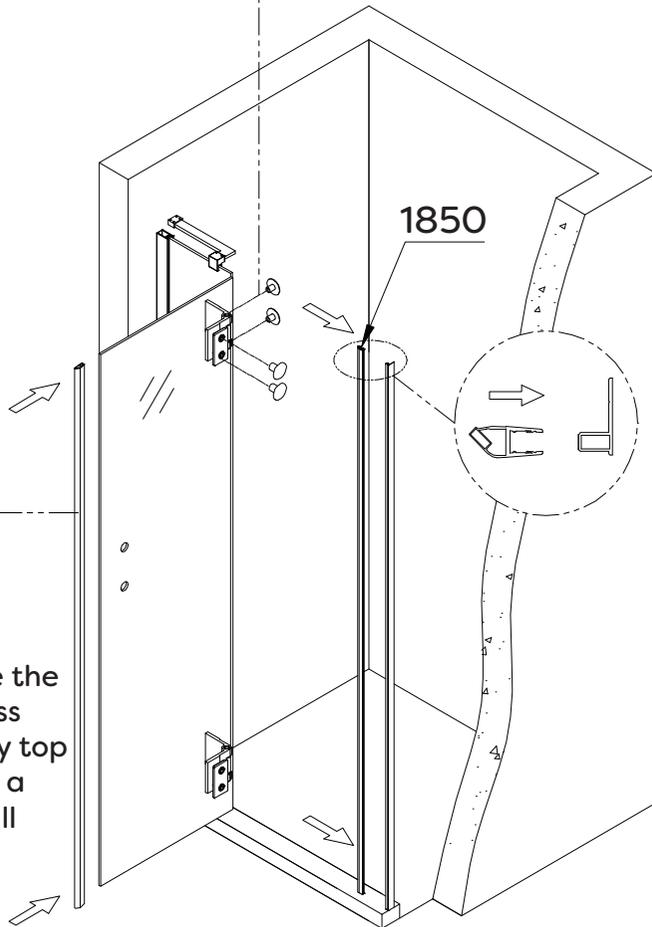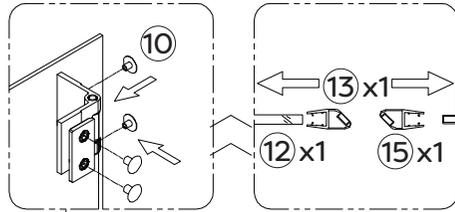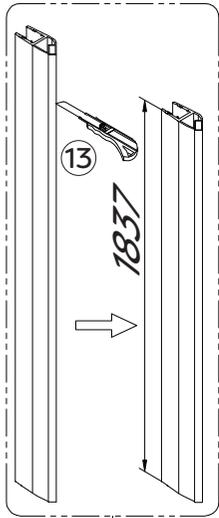

Note: It is very important to have the bottom of the glass parallel to the tray top face. It must have a 22mm even gap all the way along.

L

5

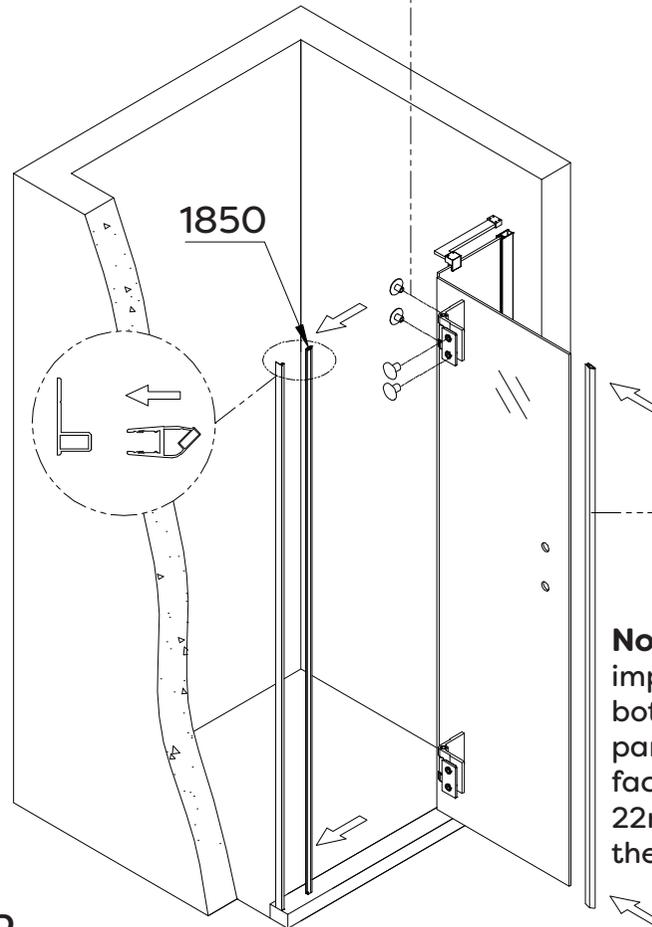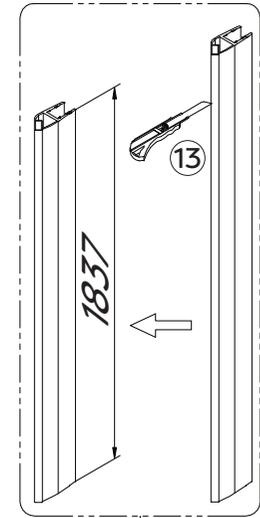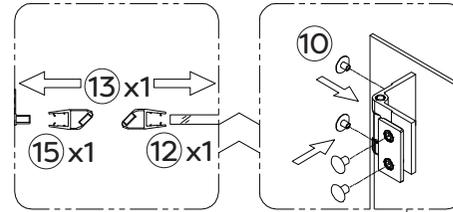


Note: It is very important to have the bottom of the glass parallel to the tray top face. It must have a 22mm even gap all the way along.





R

6

Fixed Glass
Door Glass

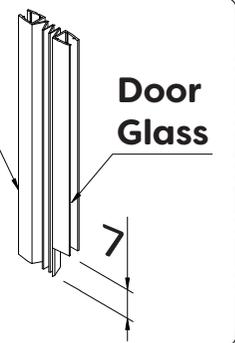


Drill through the pre-drilled holes in the wall profiles (Shown right). Use a 3mm drill bit making sure you only drill through one wall thickness.

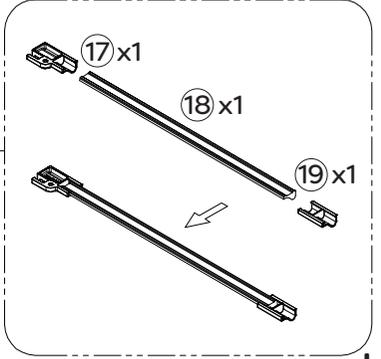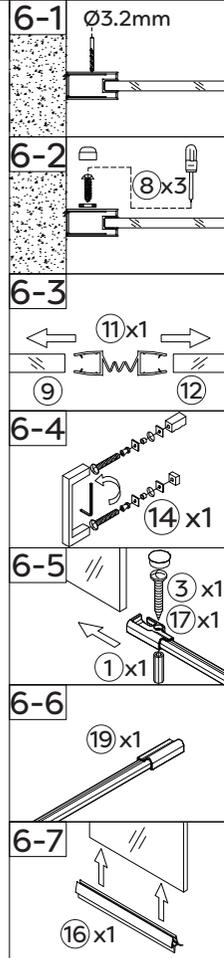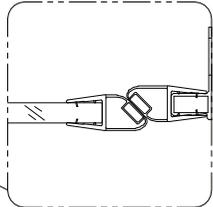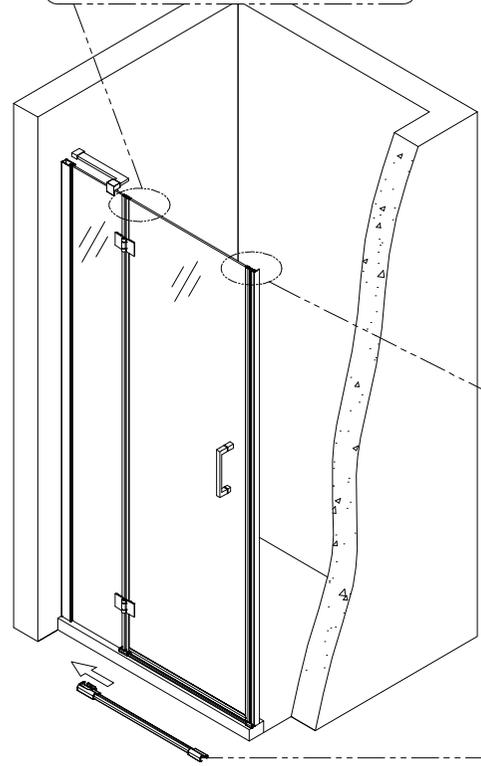





L

6

Door Glass
Fixed Glass

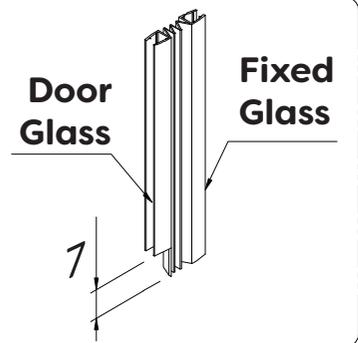

Drill through the pre-drilled holes in the wall profiles (Shown right). Use a 3mm drill bit making sure you only drill through one wall thickness.

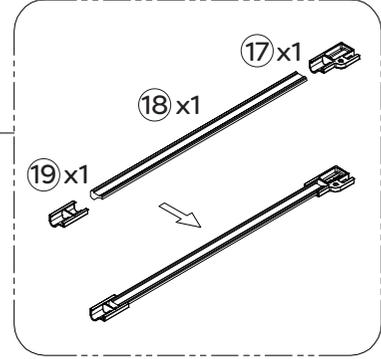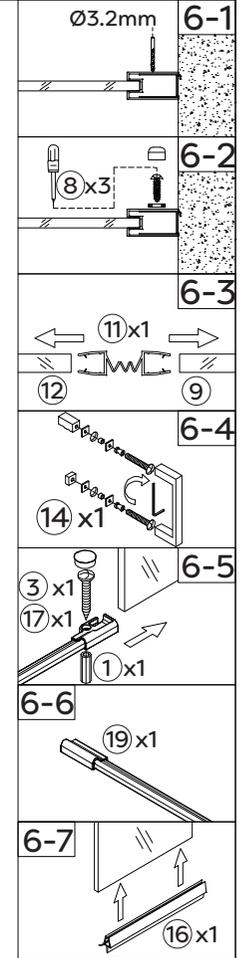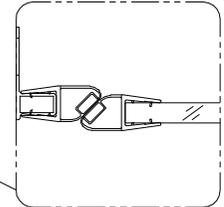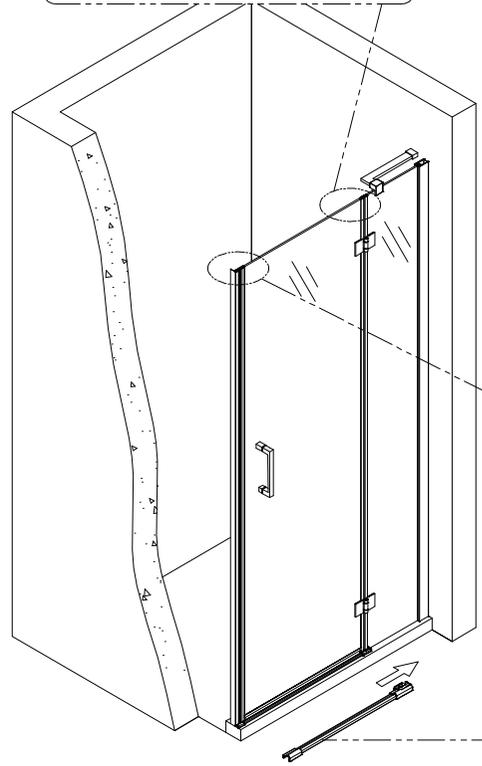

R


7

Attention:


Do not use your shower enclosure within 24 hours of assembly. Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.



7

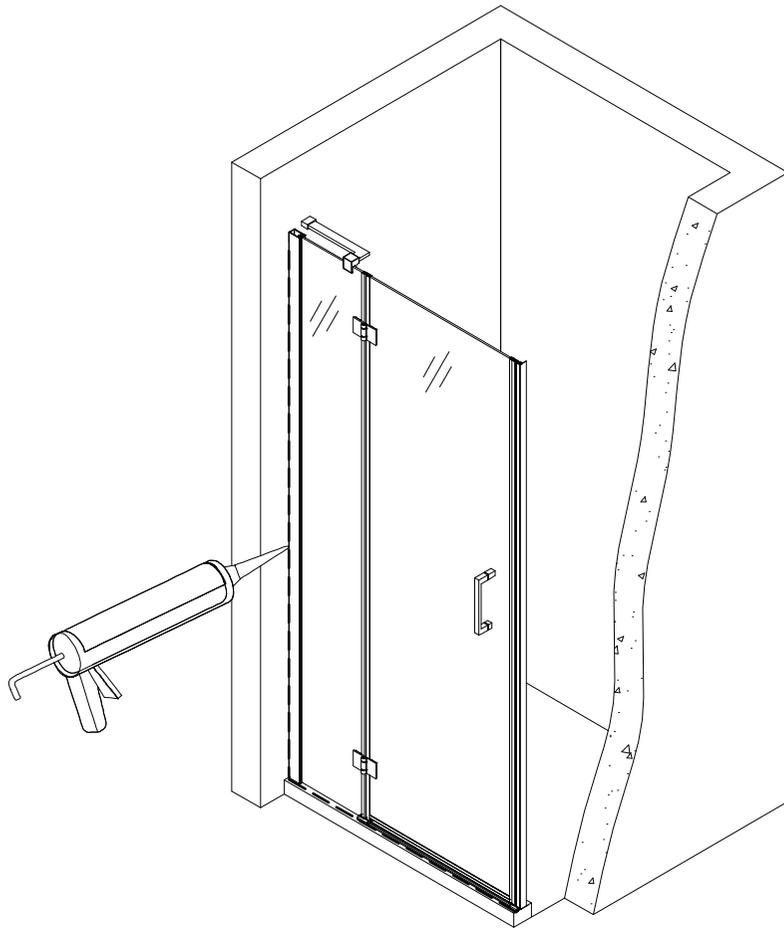

L R

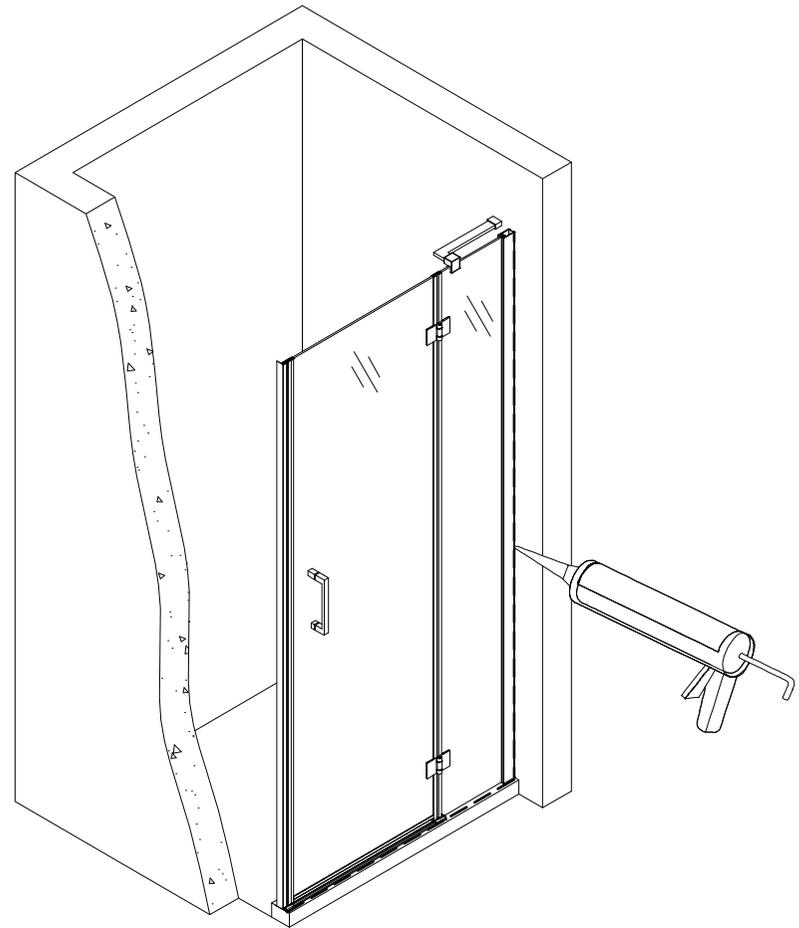

Safety Information for User & Installer

Important information for fitter:

- We recommend that this product is installed by a qualified tradesperson, Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in consequential damage.
- Incorrect installation of the enclosure will invalidate guarantee.

Important information for fitter:

- Carefully check the product for transport damage prior to installation.
- Never install damaged panels as there is a risk of spontaneous glass breakage. The supplied fixings/wall plugs are only for mounting directly on solid walls.
- It is essential that the solid, masonry/walls be inspected for adequate load-bearing capacity prior to every installation. The supplied fixings/wall plugs are not for use with stud walls such as plaster board, wood, metal or fiber board.
- Always seek professional advice to confirm wall type and appropriate type of fixing to be used for installation. Always check walls for concealed utility lines (power, gas, and water) prior to drilling the fixing holes.

Special information on handling glass:

- Always protect all glass edges from damage.
- Never stand the glass on its corners throughout the installation! Place the packing material beneath the glass panel; never place the glass on tiles, concrete floors or similarly hard surfaces.
- It is mandatory to check each glass panel for damage prior to installation. Never install damaged glass panels as this could cause spontaneous glass breakage!
- If the glass panel is damaged during use it must be replaced without delay. (Failure could cause a risk of spontaneous glass breakage!)

Prevent damage to glass or operation of the product:

- Ensure fittings do not hinder the movement of the door.
- Ensure that no objects are within the range of the door opening/ closing area.
- Avoid hitting the panels with hard objects such as mops when cleaning or tools during assembly. Damaged panels must be replaced as failures may cause latent glass breakage.
- Do not hit against the glass edge with hard or pointed objects (e.g. with mop handle) Damaged panels must be replaced; damage may cause spontaneous glass breakage.
- Do not use panels or handles to hang or support items such as drying towels or clothes.

Maintenance Information

Service/repair and inspection for safety

- After cleaning, check all the moving elements are sufficiently greased, re-grease if necessary, only use acid-free grease.

Cleaning

Do not use steam cleaners, caustic or aggressive cleaning and scouring agents, cleaners that corrode plastics, or solvents containing acetone, turpentine or neat bleach.

- Do not use any cleaning agents, which according to the manufacturer's specifications may corrode aluminium or light alloys.
- Do not use glass cleaning pastes and micro-fibre cloths to prevent damage to glass coating system.
- In order to prevent the build-up of lime scale, remove any remaining drops of water after showering using a squeegee, soft cloth without any cleaning agent.
- After use, carefully rinse off all residue such as; liquid soaps, shampoos, shower gels or similar cosmetic product with water to avoid deposits.

Important: Never apply the cleaning agent for longer than necessary. After cleaning, check all the moving elements are sufficiently greased, re-grease if necessary.

Recycling and Disposal

Please recycle the packaging in accordance with your local government regulations on waste handling, and follow the same advice at the end of the products life.

For more Information

Visit: victorianplumbing.co.uk

www.victorianplumbing.co.uk