
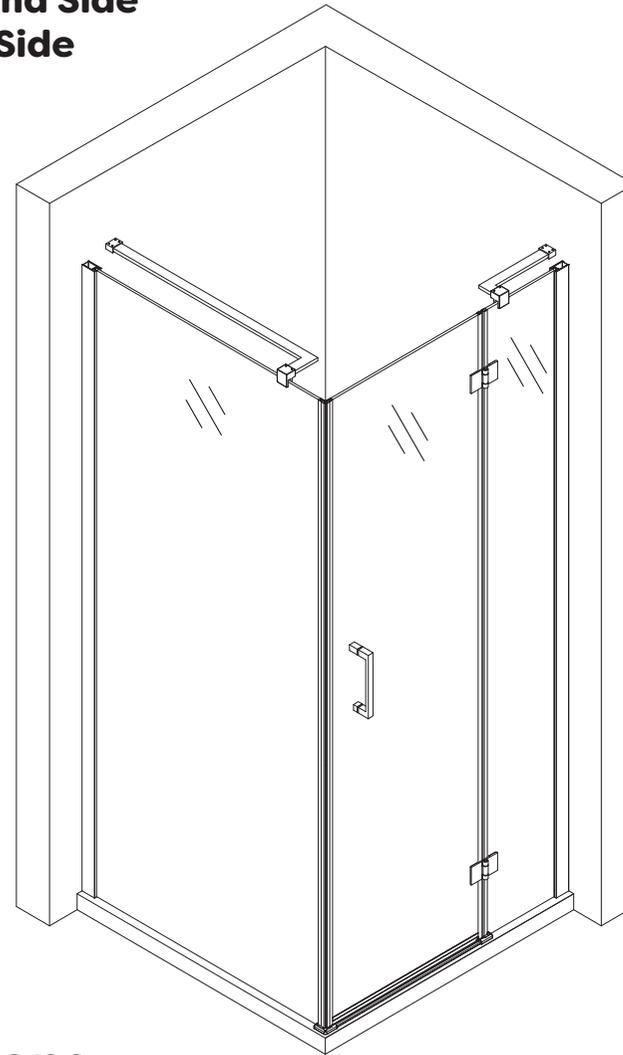


**Frameless Hinged Door and Side
Panel Left and Right Side**

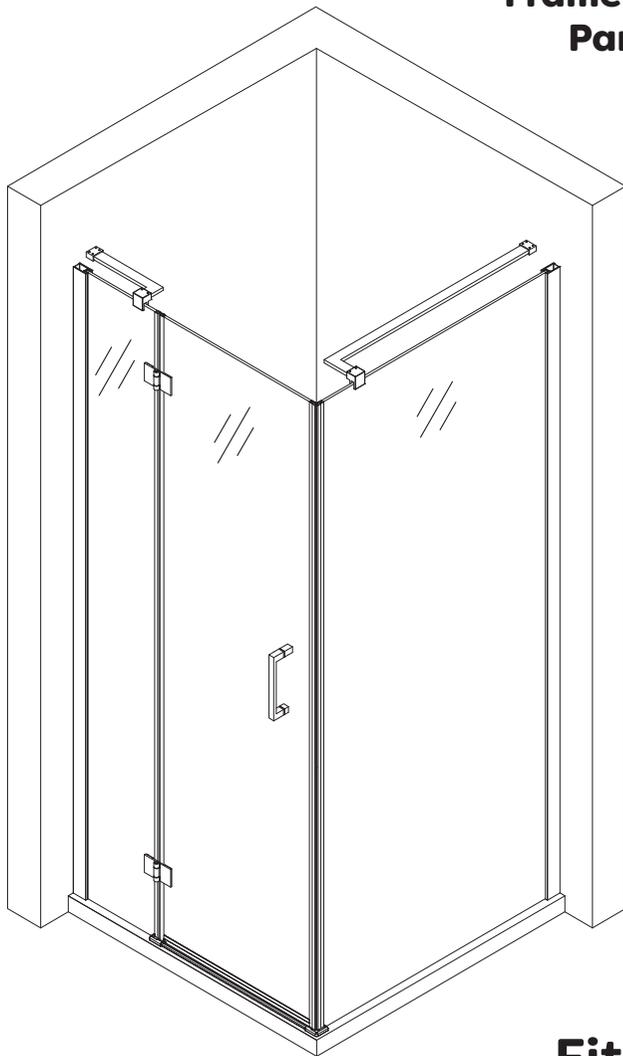
















Fitting Instructions

Please follow them carefully and
leave this manual with end user


Fitting list:

Diagrams are for illustration purposes only. Your Shower Door and Screen may superficially differ from this drawing however the installation guide steps still apply.

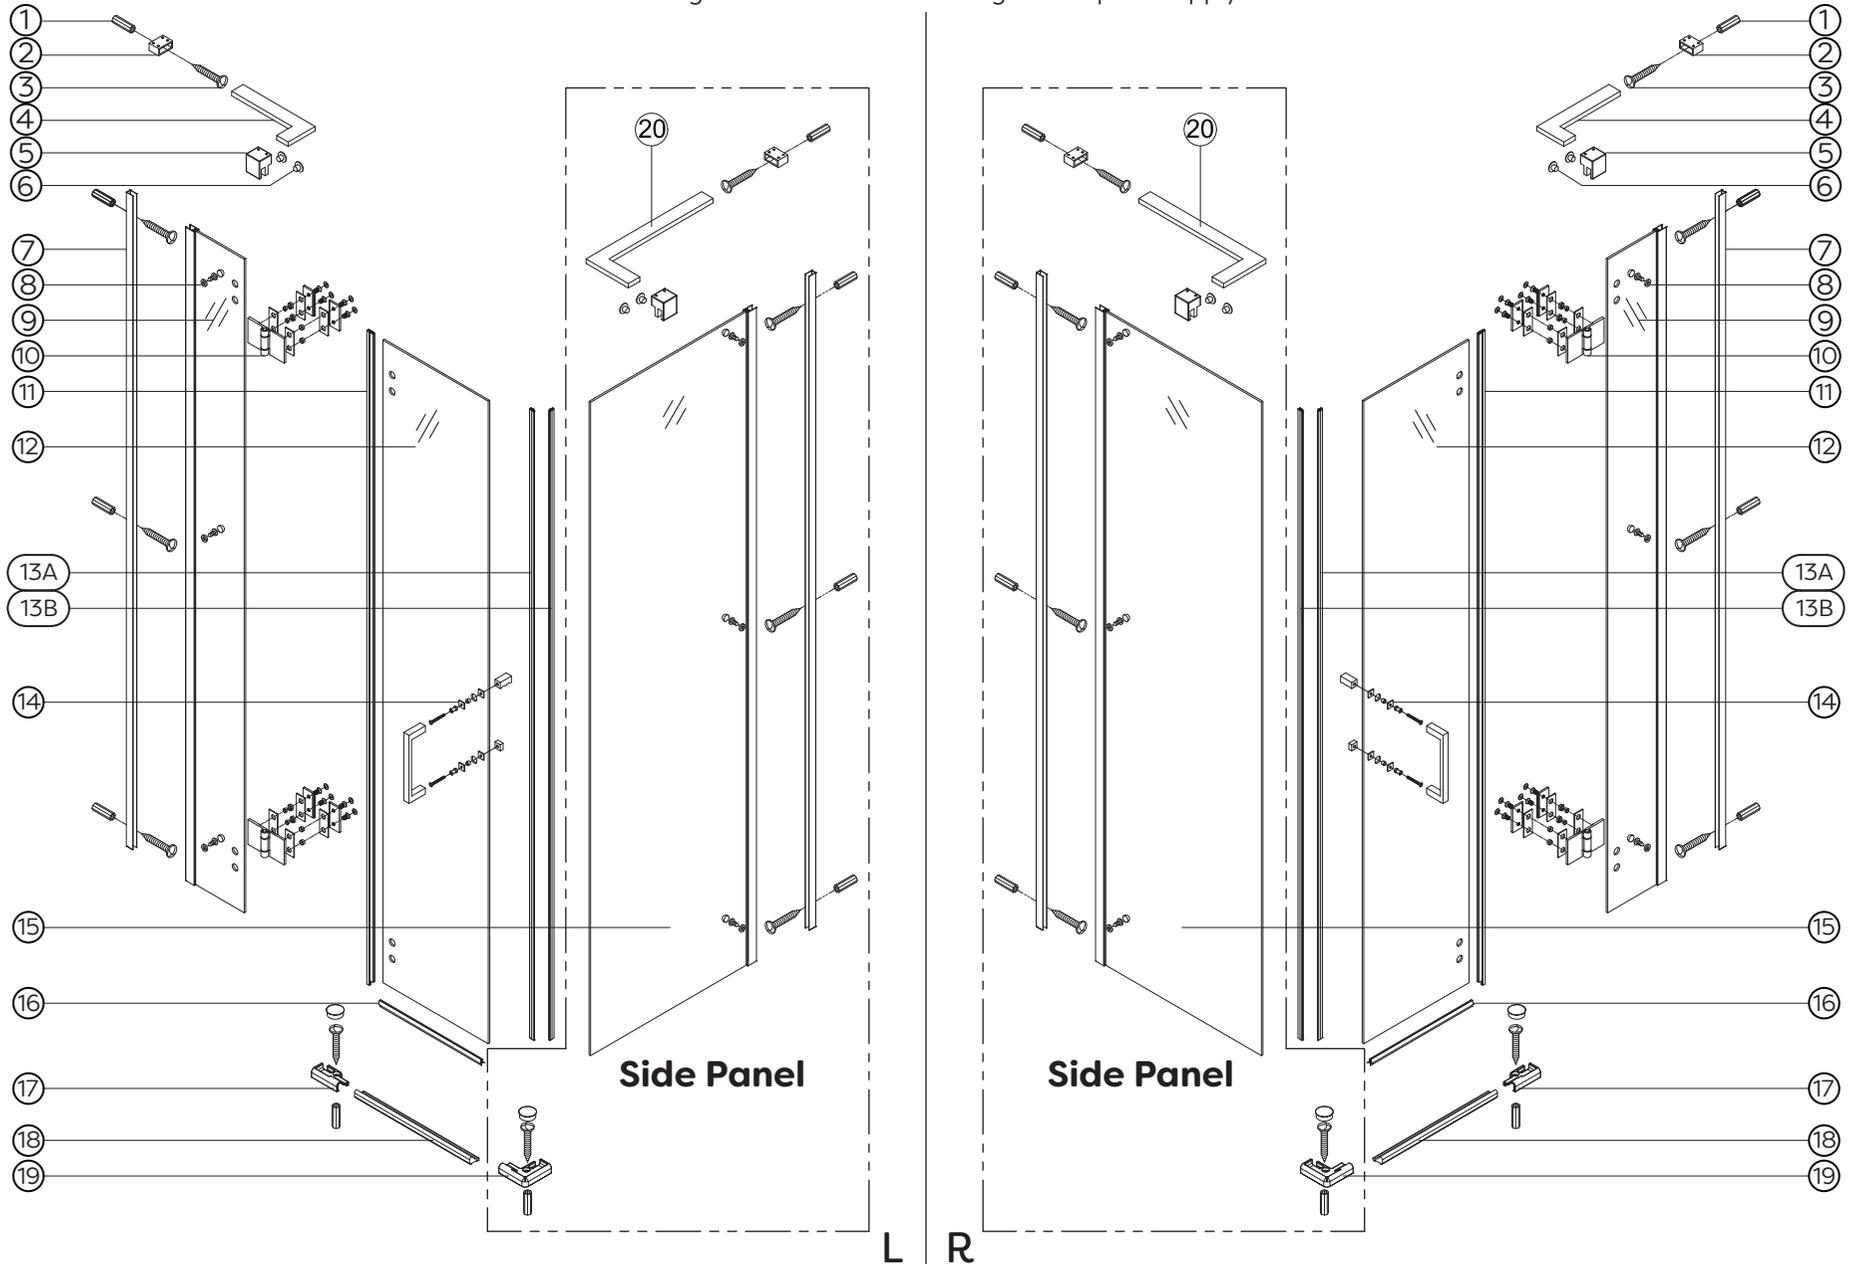

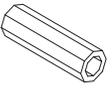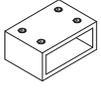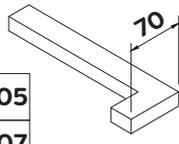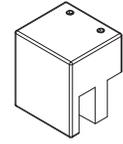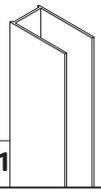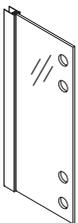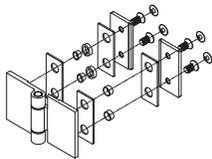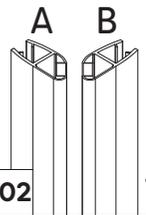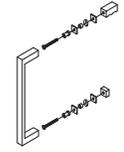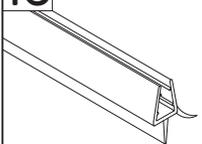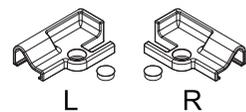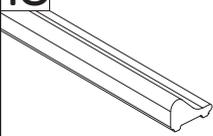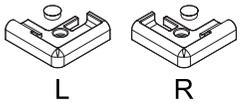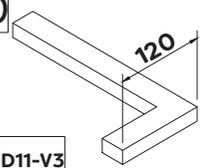1  D6X25 10Pcs	2  WX-D01 2Pcs	3  ST4X30 10Pcs	4  WX-D05 WX-D07 WX-D09 1Pc	5  WX-D02 2Pcs	6  D4X4 4Pcs			
7  WX-B01 2Pcs	8  ST4X12 6Pcs	9  WX-D03 1Pc	10  WX-D03 2Pcs	11  WX-H01 1Pc	12  WX-B03 1Pc			
13  WX-H02 1Pair	14  WX-D04 1Pc	15  WX-D05 1Pc	16  WX-H03 1Pc	17  WX-S01 2Pcs	18  WX-B03 1Pc			
19  WX-S03 2Pcs	20  WX-D11-V3 WX-D12-V3 1Pc	700 800 760 900		1000	1200	700 800 760		900 1000
		4	WX-D05	WX-D07	WX-D09	20	WX-D11-V3	WX-D12-V3


Tools:

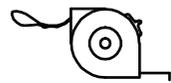

Tape Measure




Pencil

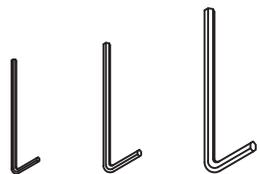

2mm 2.5mm 4mm
Allen Key




Safety Blade

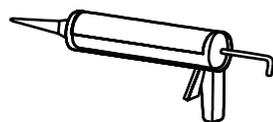

Silicone Sealant



Screw Driver

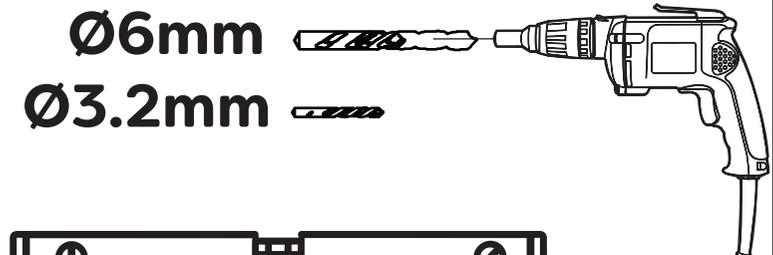


Power Drill



Spirit Level

1


		W1	W2	L1	L2
1	700	652-672	660-680	652-672	660-680
2	760	712-732	720-740	712-732	720-740
3	800	752-772	760-780	752-772	760-780
4	900	852-872	860-880	852-872	860-880
5	1000	952-972	960-980	952-972	960-980
6	1200			1152-1172	1160-1180
				Side Panel	Door

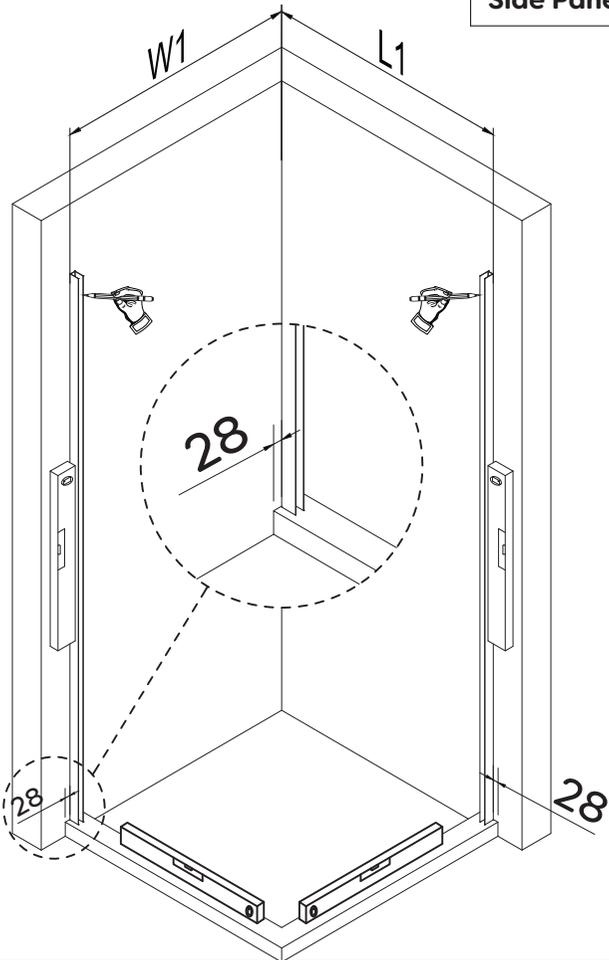


L R

1

		L1	L2	W1	W2
1	700	652-672	660-680	652-672	660-680
2	760	712-732	720-740	712-732	720-740
3	800	752-772	760-780	752-772	760-780
4	900	852-872	860-880	852-872	860-880
5	1000	952-972	960-980	952-972	960-980
6	1200	1152-1172	1160-1180		
			Door	Side Panel	

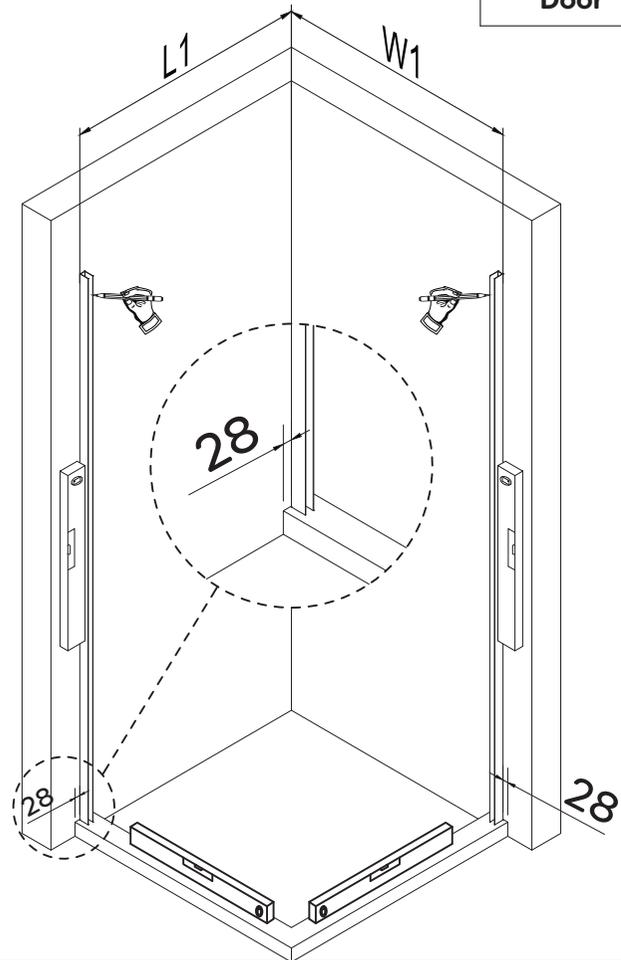


2

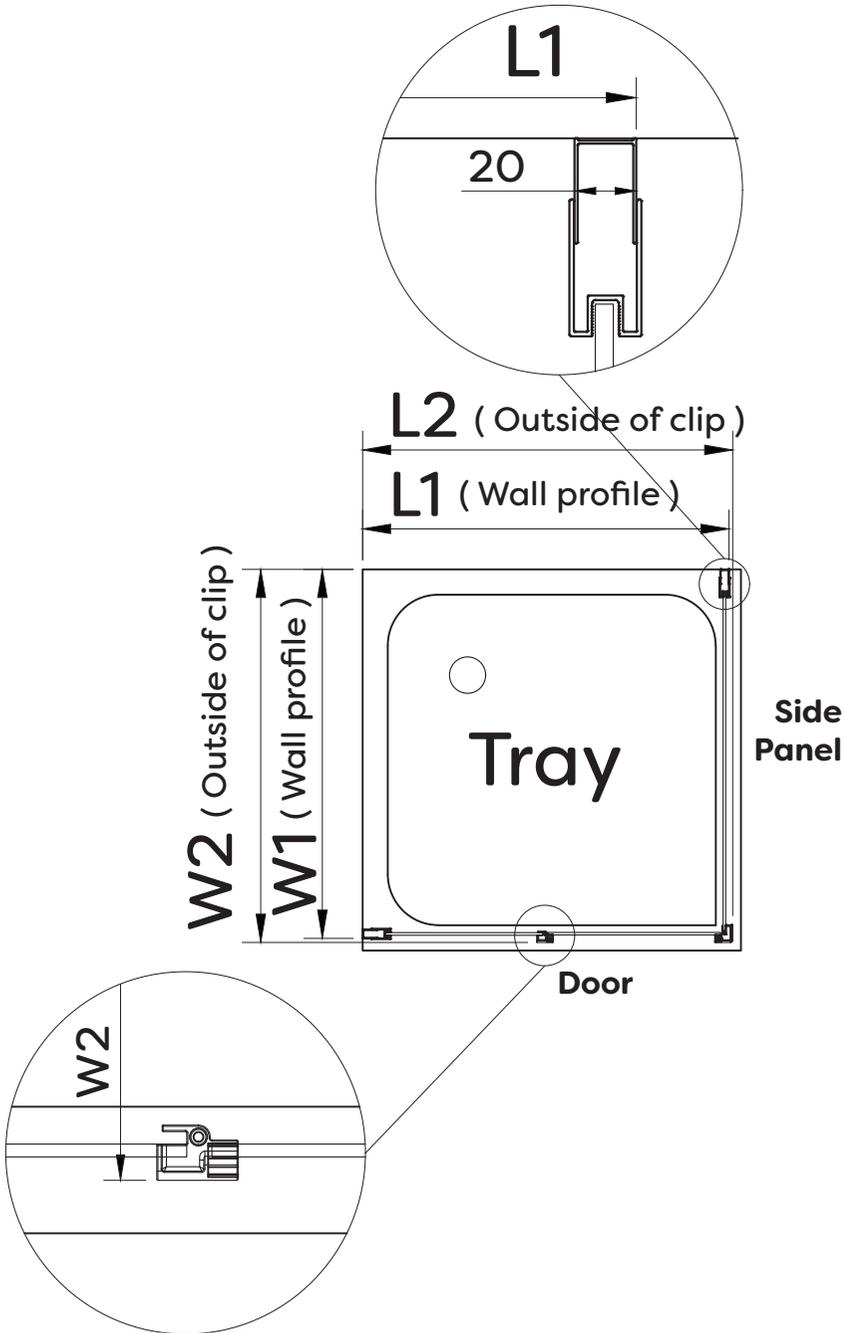

L

2


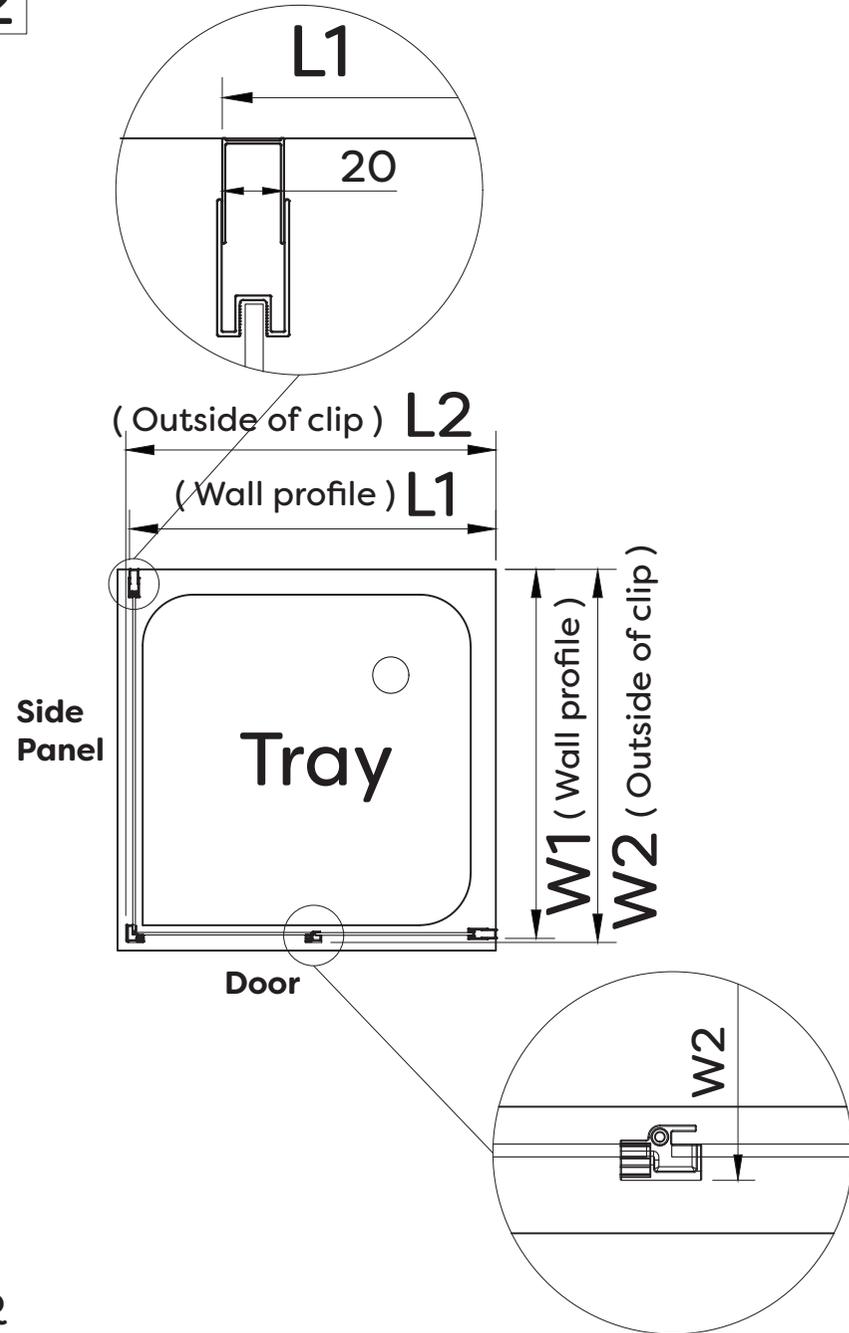


R

3-a

Please measure the hinge hole on the fixed glass before installation.




If 135mm / 160mm:

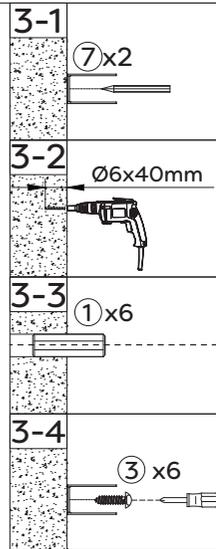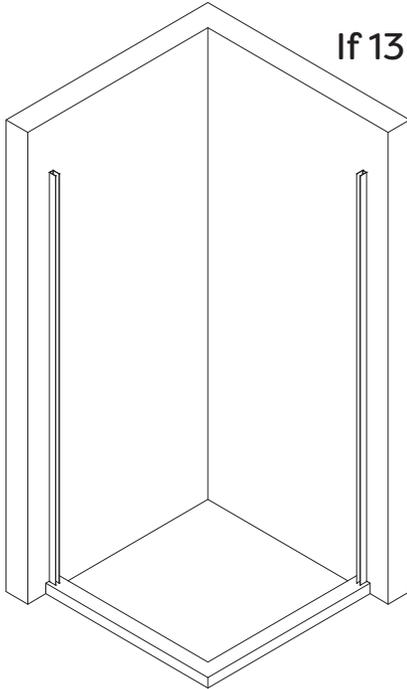


3-a

Please measure the hinge hole on the fixed glass before installation.


If 135mm / 160mm:

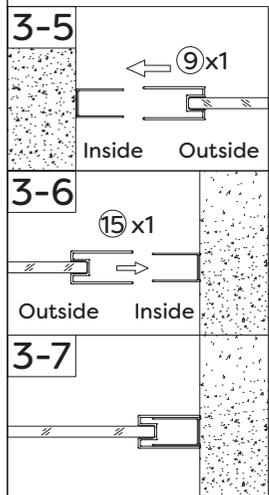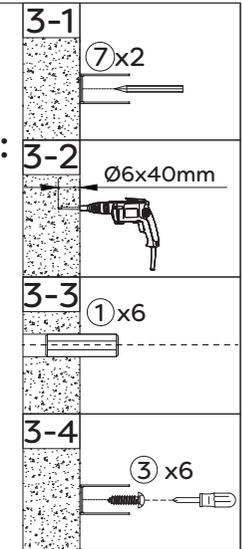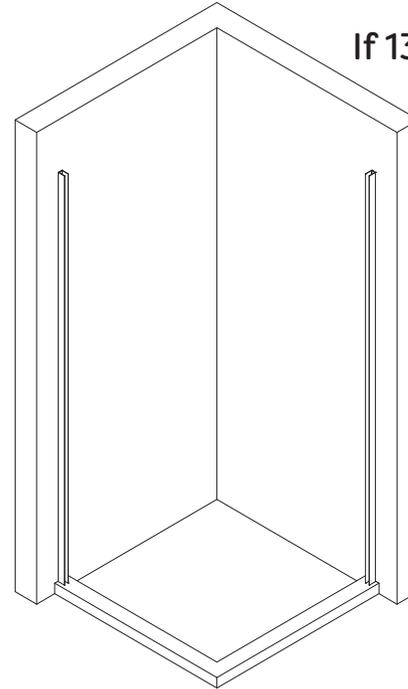


Using a spirit level: Ensure the profiles and the glass is set true and level.

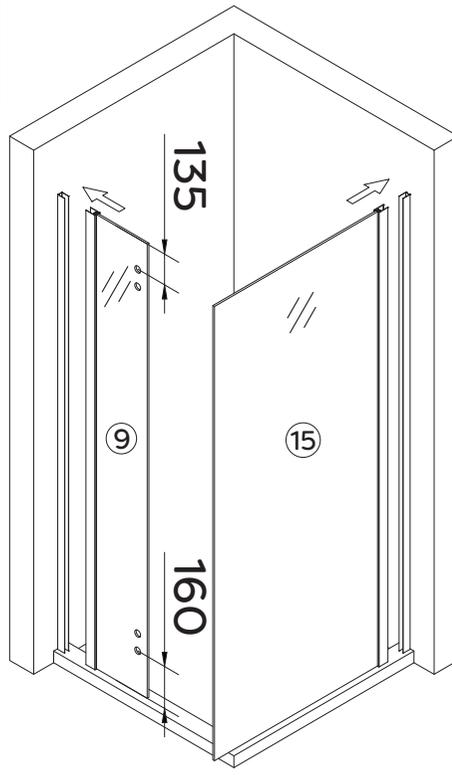

L R

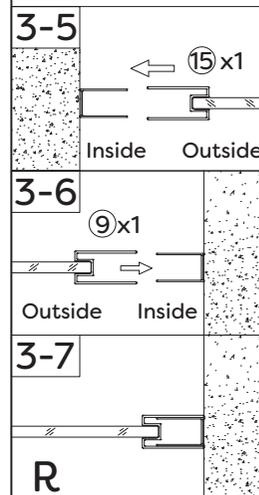



Using a spirit level: Ensure the profiles and the glass is set true and level.

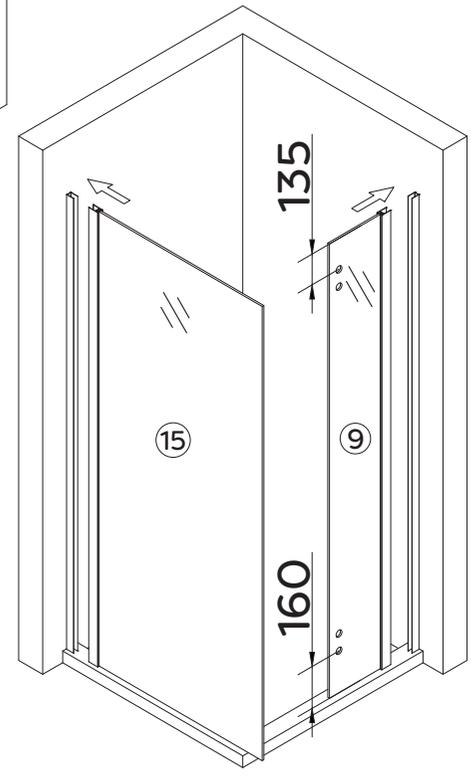

3-b

Please measure the hinge hole on the fixed glass before installation.




If 150mm / 150mm:

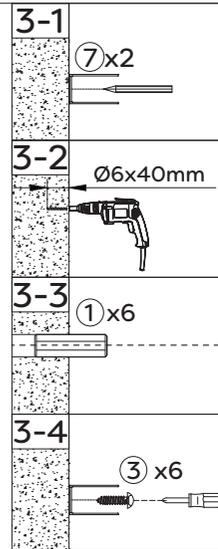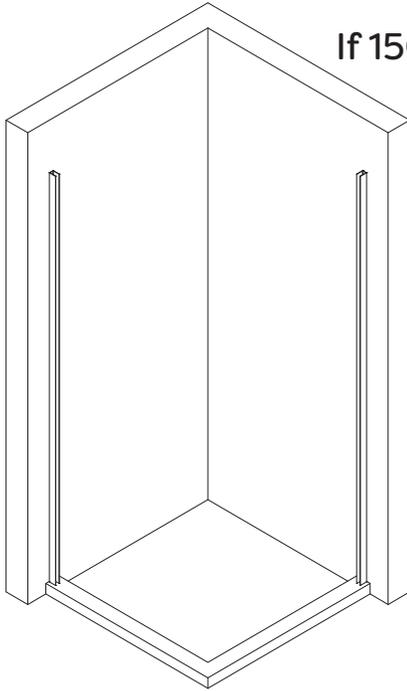


3-b

Please measure the hinge hole on the fixed glass before installation.


If 150mm / 150mm:

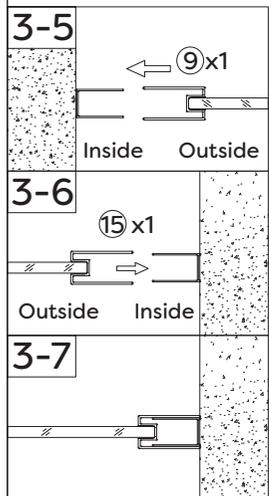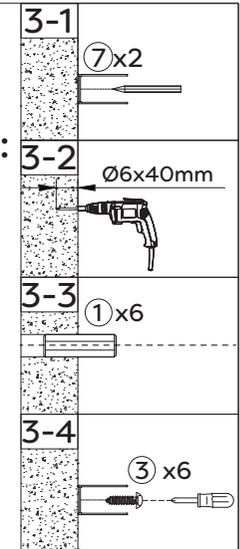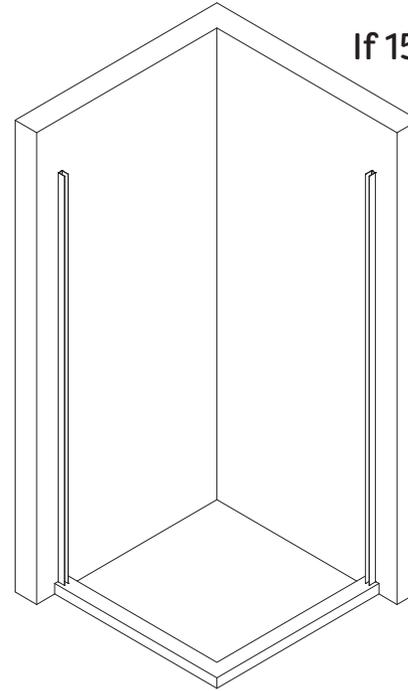


Using a spirit level: Ensure the profiles and the glass is set true and level.

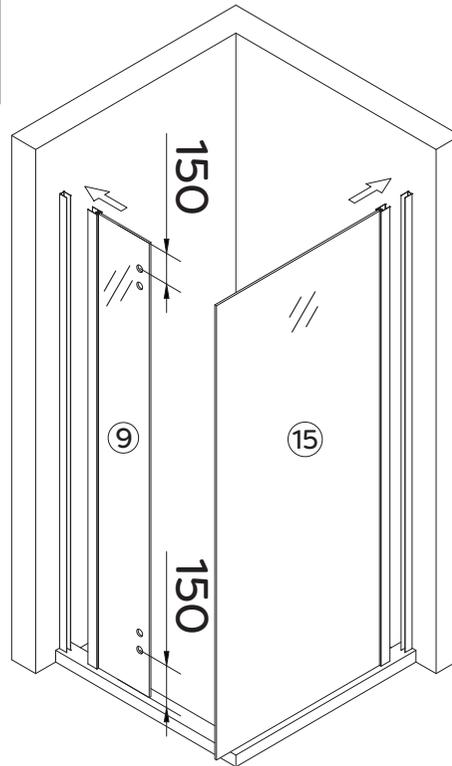








L R

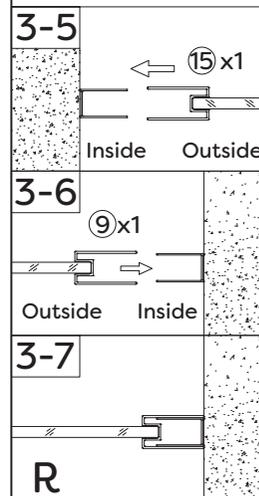

Using a spirit level: Ensure the profiles and the glass is set true and level.







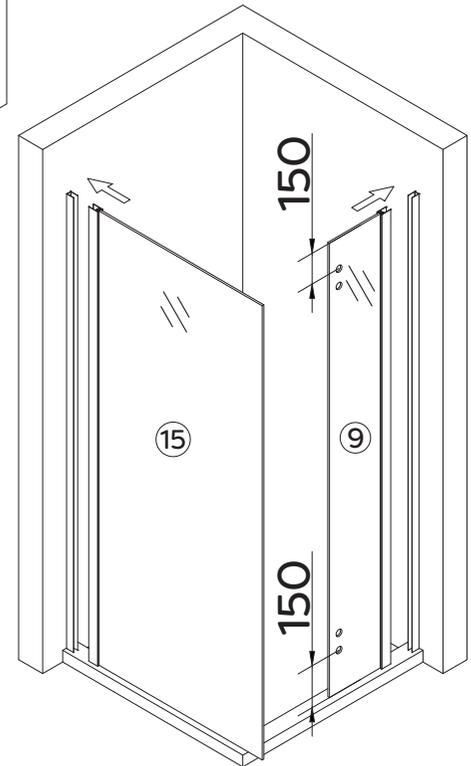


4

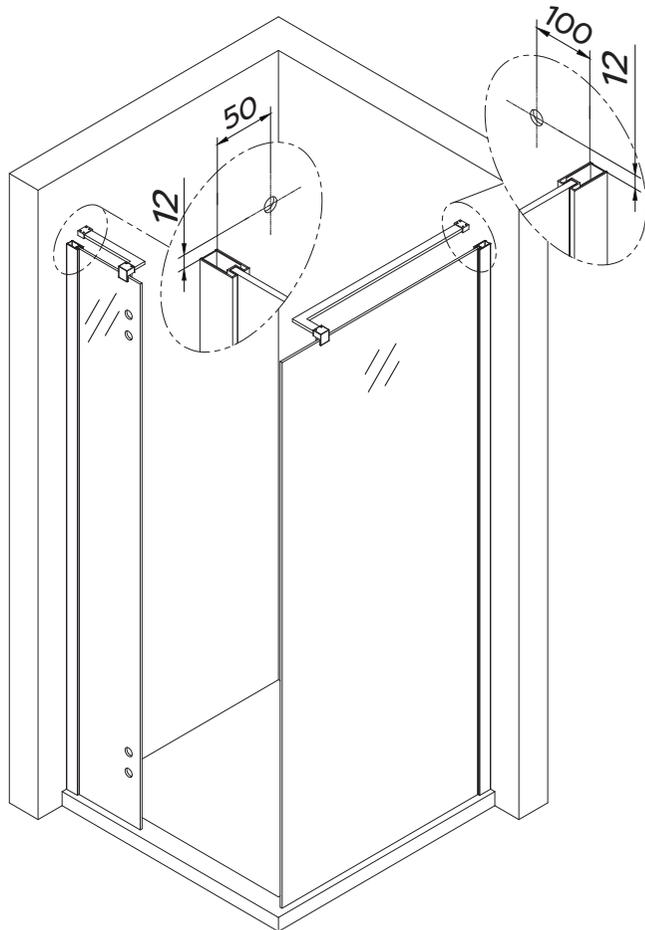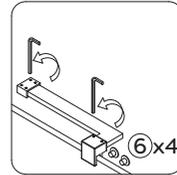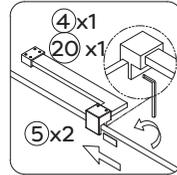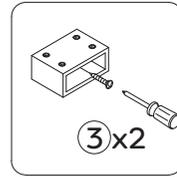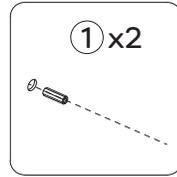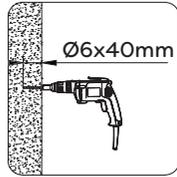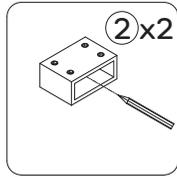



L R

4

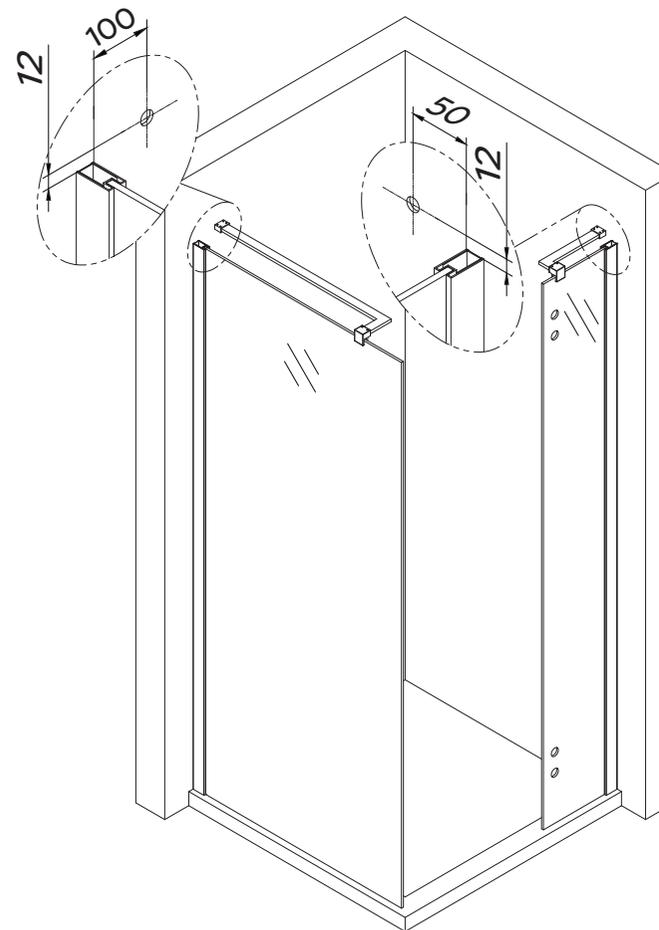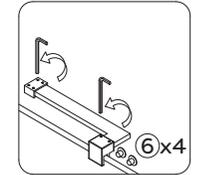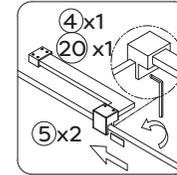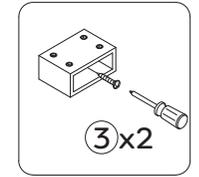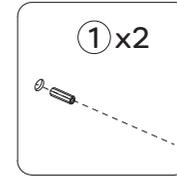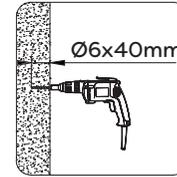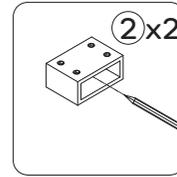

5

Matching rings

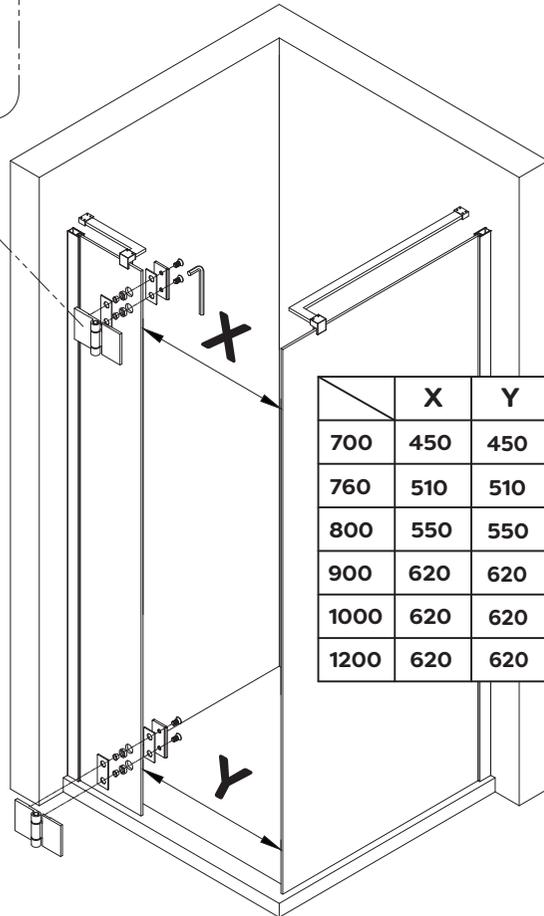
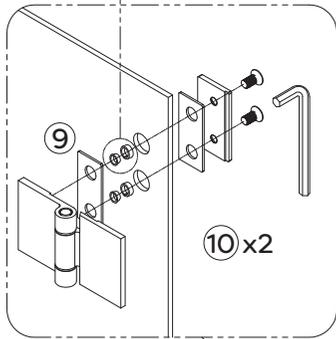


	X	Y
700	450	450
760	510	510
800	550	550
900	620	620
1000	620	620
1200	620	620

L


5

Matching rings

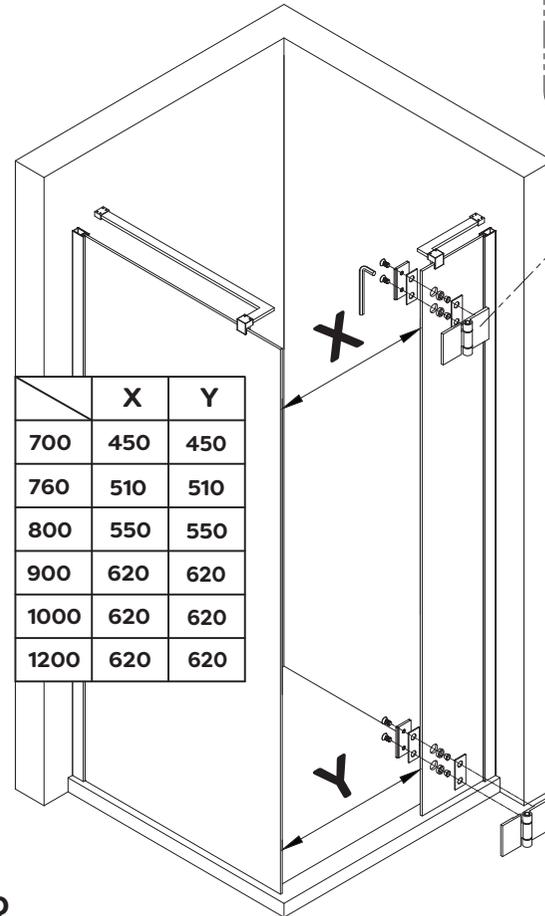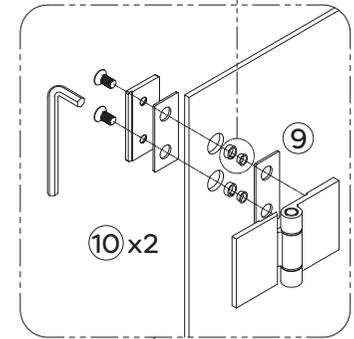


R

6-a Please measure the hinge hole on the door glass before installation, if the dimensions are the same:

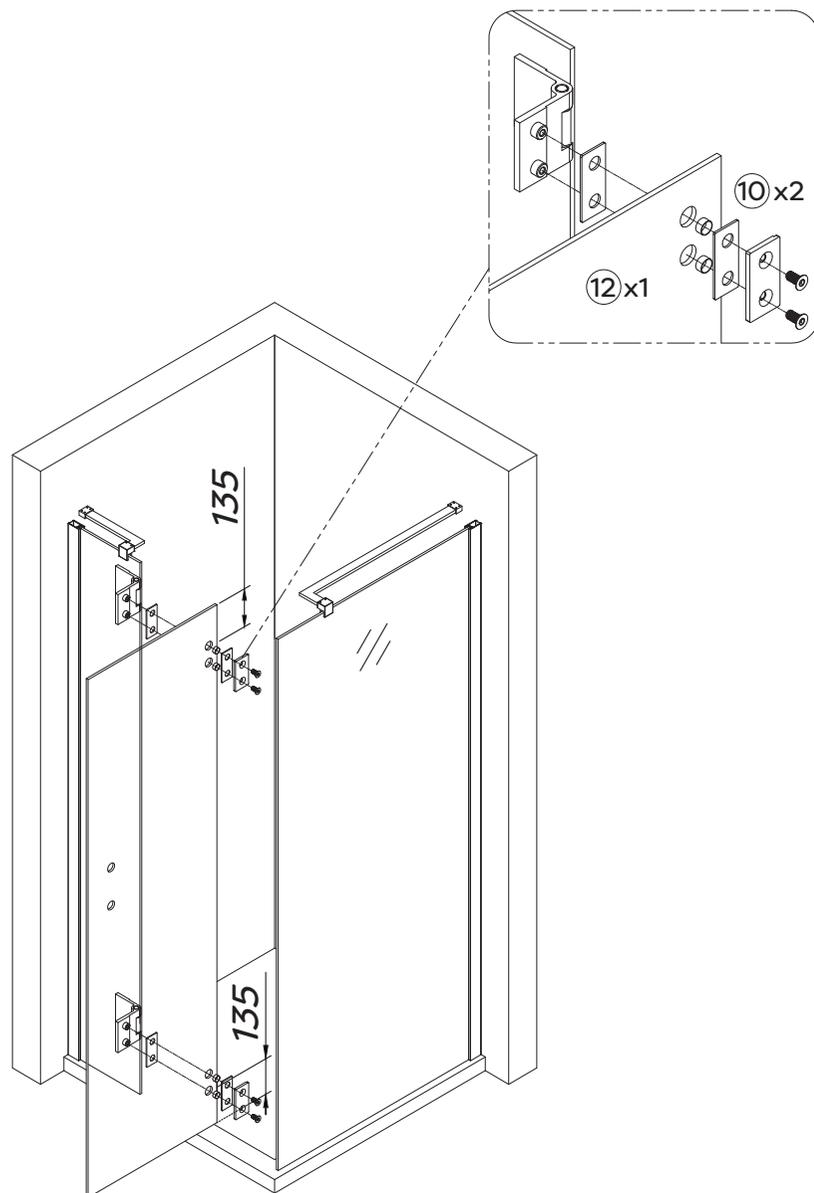


L R

6-a Please measure the hinge hole on the door glass before installation, if the dimensions are the same:

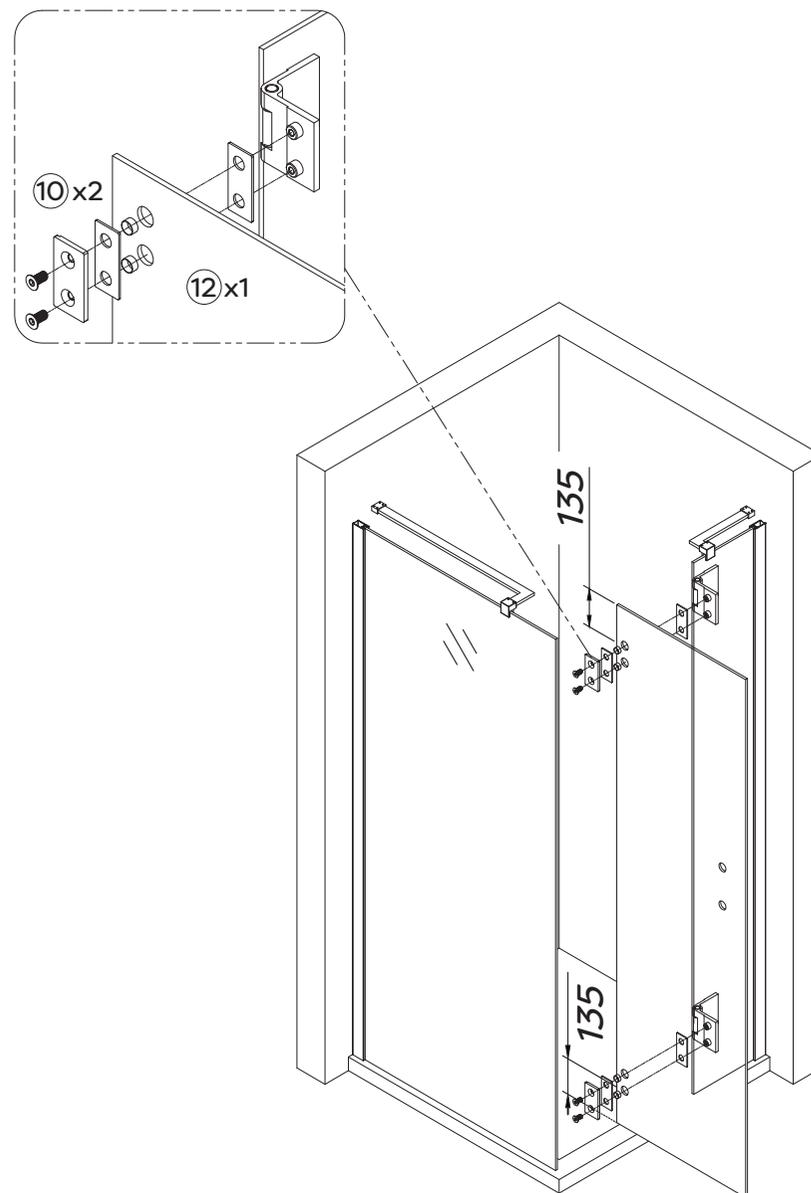


6-b Please measure the hinge hole on the door glass before installation, if the dimensions are different:


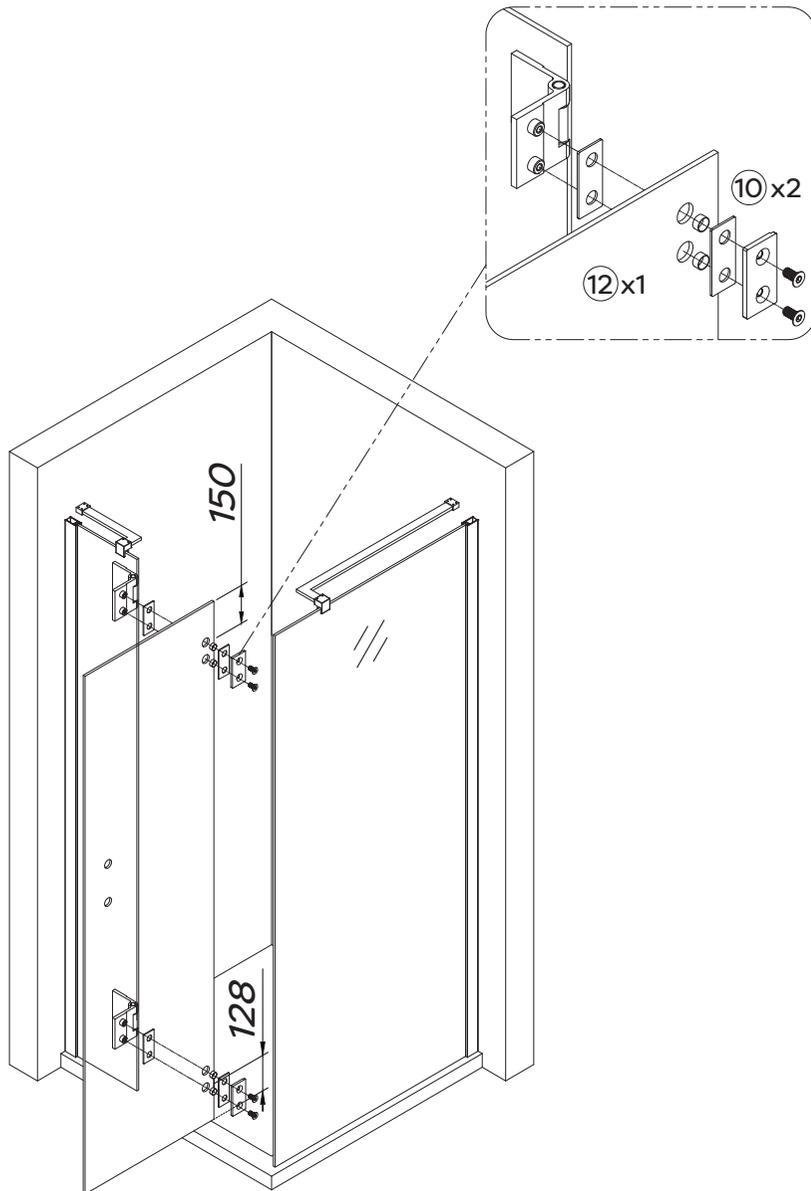


L R

6-b Please measure the hinge hole on the door glass before installation, if the dimensions are different:


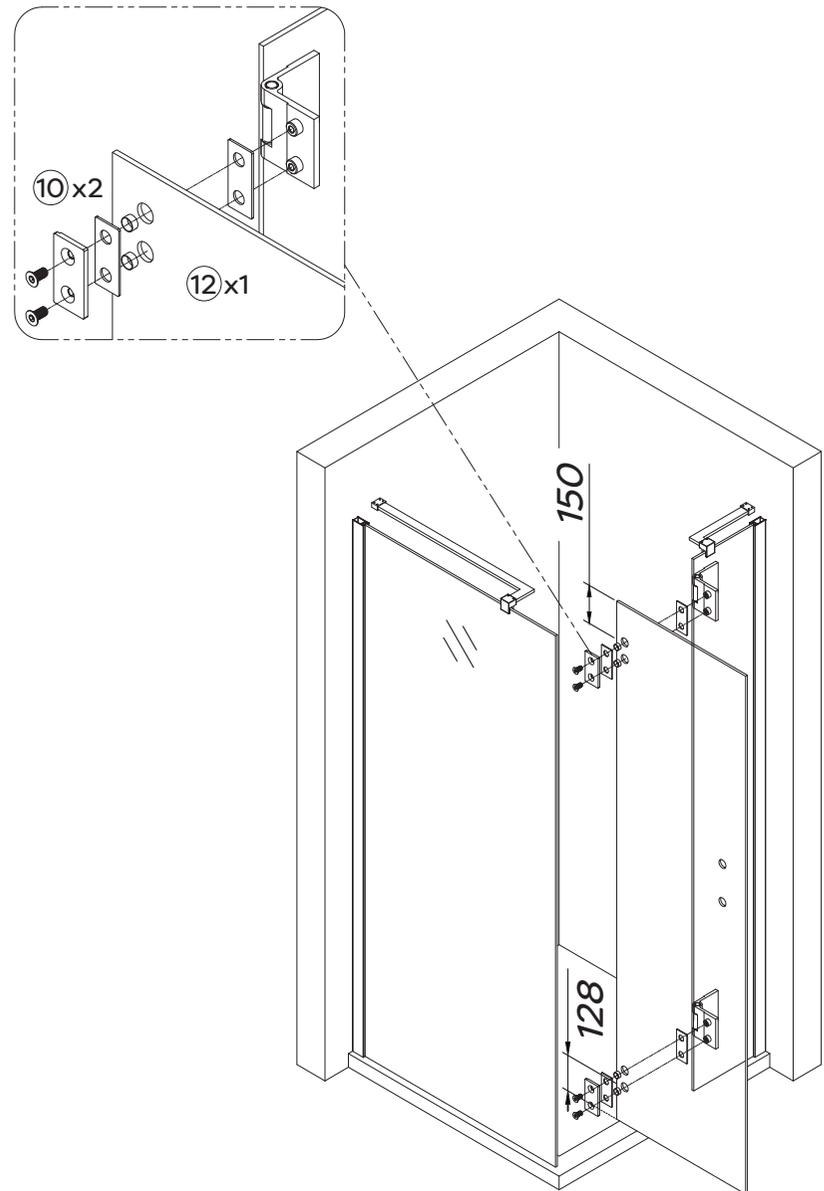


7

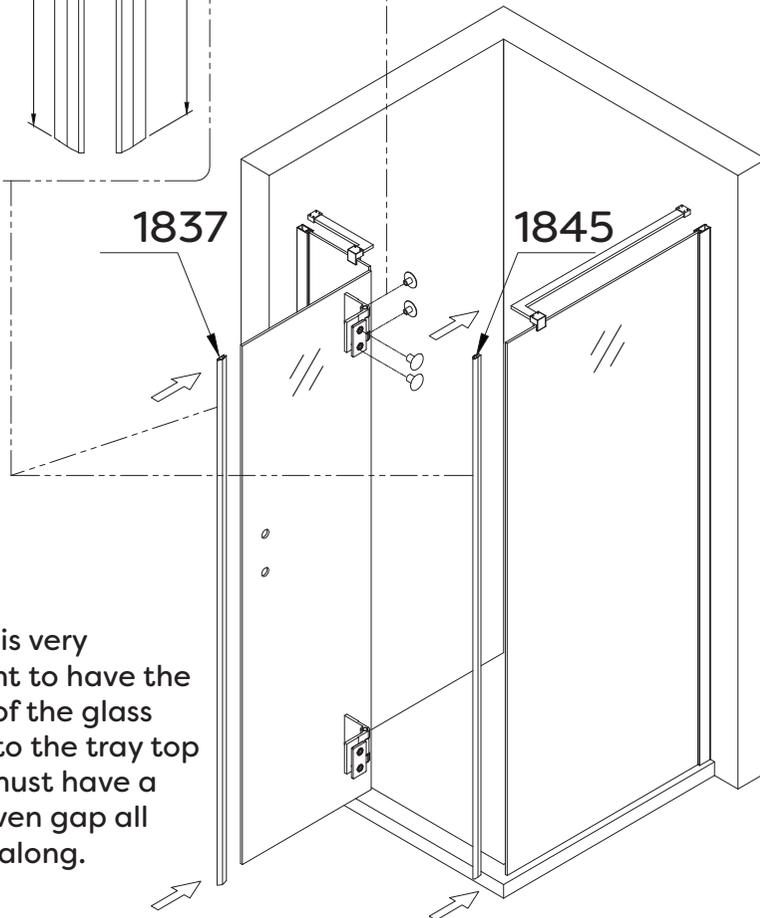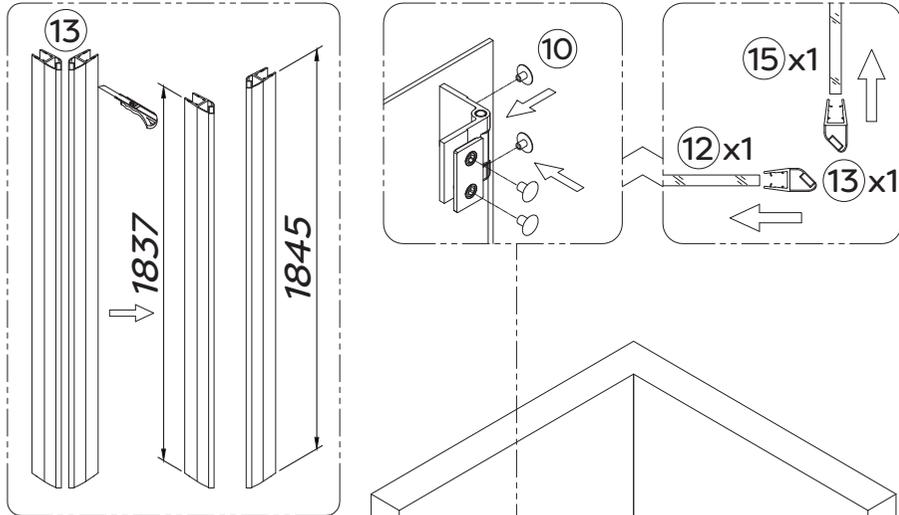

L

7

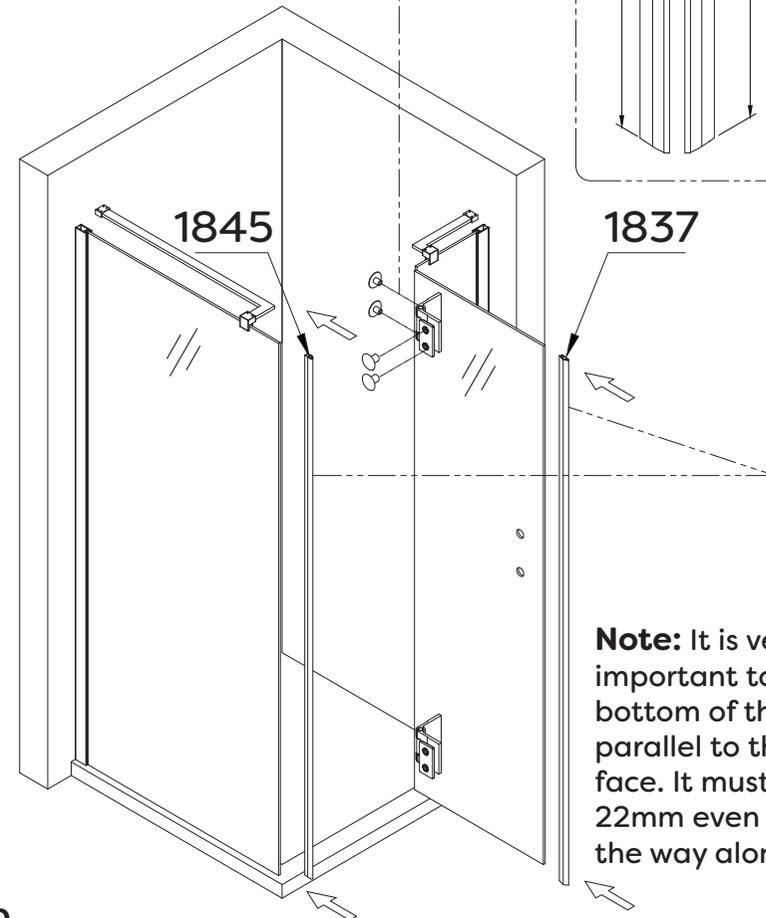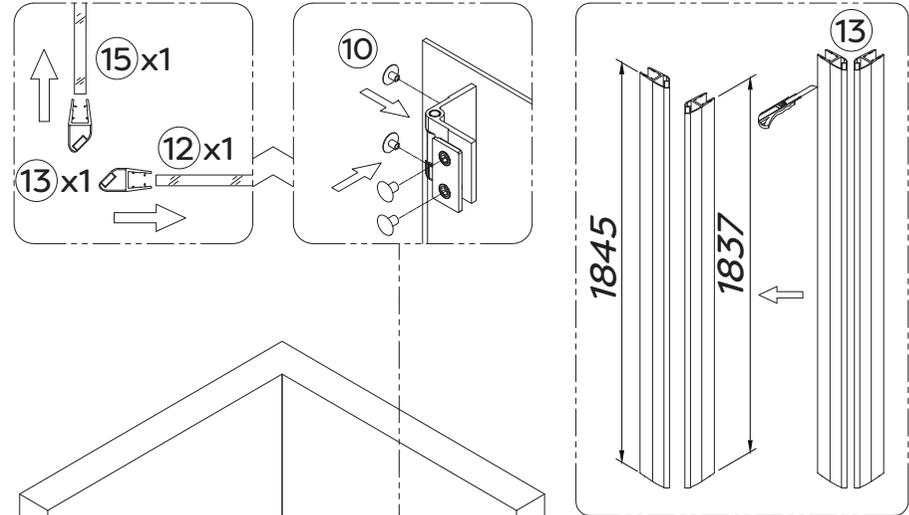



R

8


Fixed Glass
Door Glass

28

Drill through the pre-drilled holes in the wall profiles (Shown right). Use a 3mm drill bit making sure you only drill through one wall thickness.

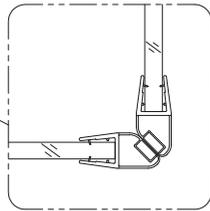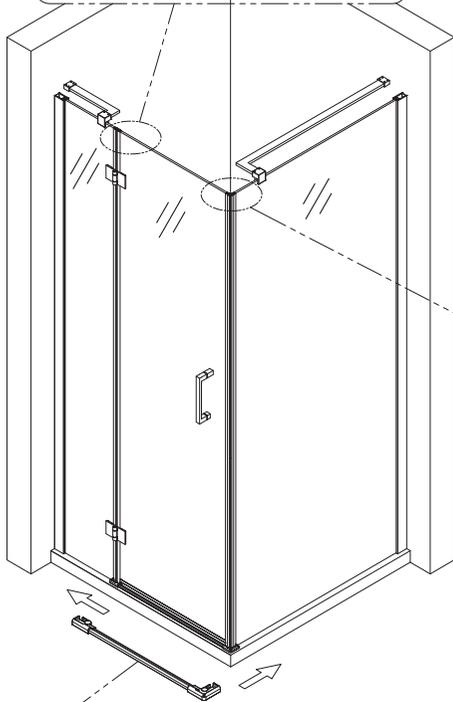

8-1

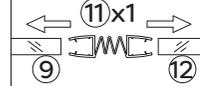

8-2



8-3




8-4




8-5



8-6

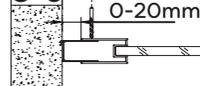

8-7


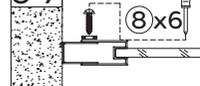


8


Door Glass
Fixed Glass

28

Drill through the pre-drilled holes in the wall profiles (Shown right). Use a 3mm drill bit making sure you only drill through one wall thickness.

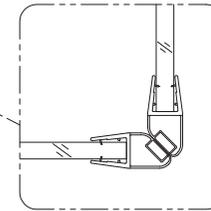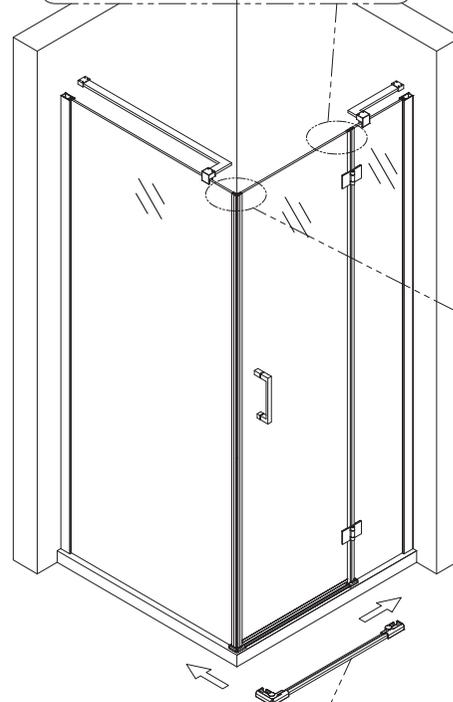

8-1

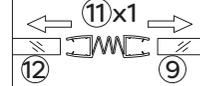

8-2




8-3




8-4





8-5

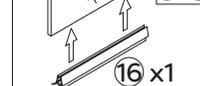


8-6

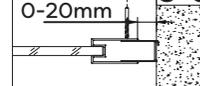


8-7

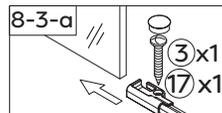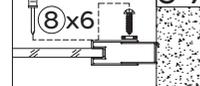


If the shower enclosure is installed with a tray, make holes in the tray with Ø3mm drill and the wall plugs are not required;

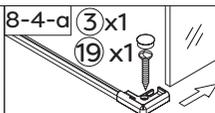


If the shower enclosure is installed with a tray, make holes in the tray with Ø3mm drill and the wall plugs are not required;

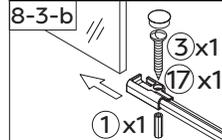


If not, make holes in the floor with Ø6mm drill and the wall plugs are required;

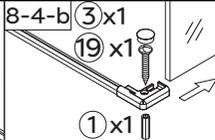


If not, make holes in the floor with Ø6mm drill and the wall plugs are required;

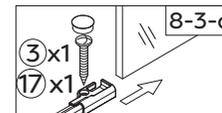


If the shower enclosure is installed with a tray, make holes in the tray with Ø3mm drill and the wall plugs are not required;

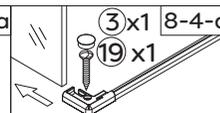


If the shower enclosure is installed with a tray, make holes in the tray with Ø3mm drill and the wall plugs are not required;

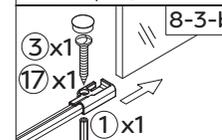

If not, make holes in the floor with Ø6mm drill and the wall plugs are required;

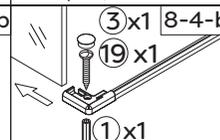


If not, make holes in the floor with Ø6mm drill and the wall plugs are required;

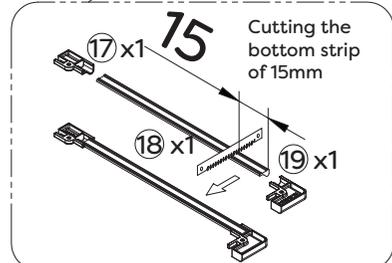

15

Cutting the bottom strip of 15mm

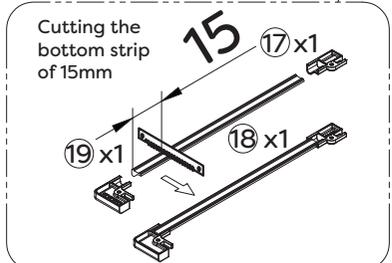

15

Cutting the bottom strip of 15mm


9

Attention:


Do not use your shower enclosure within 24 hours of assembly. Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.



9

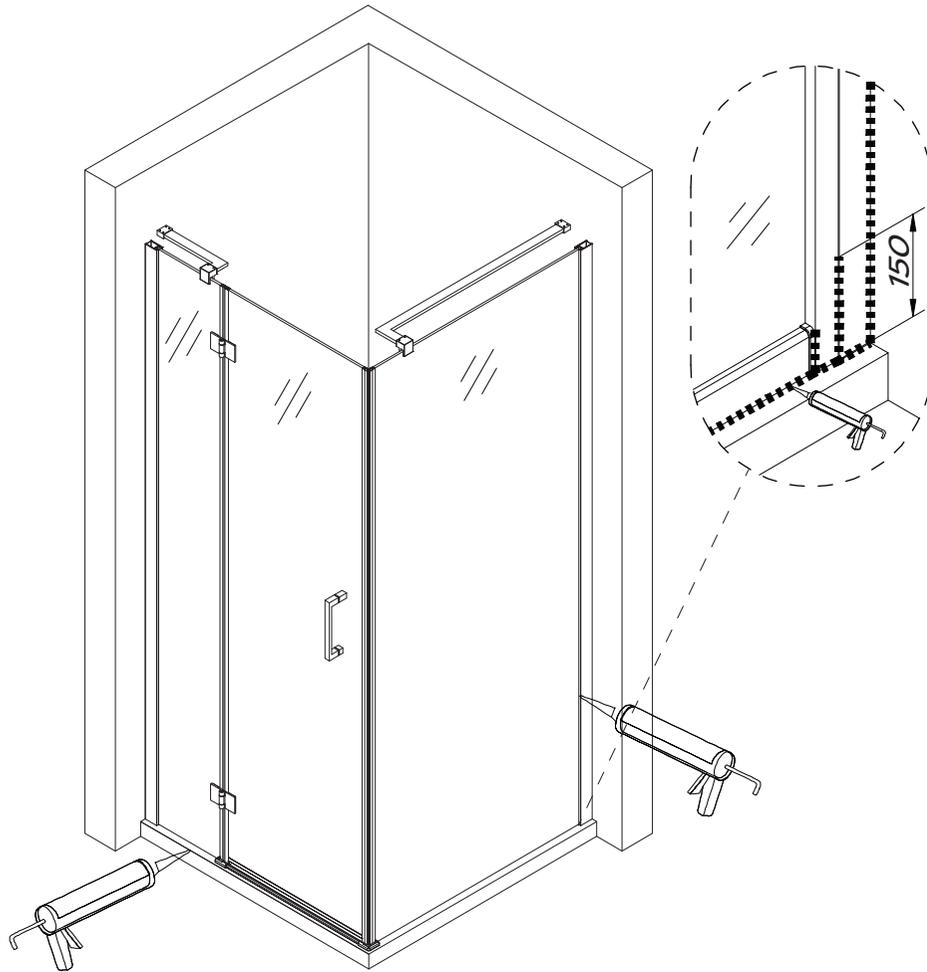

L R

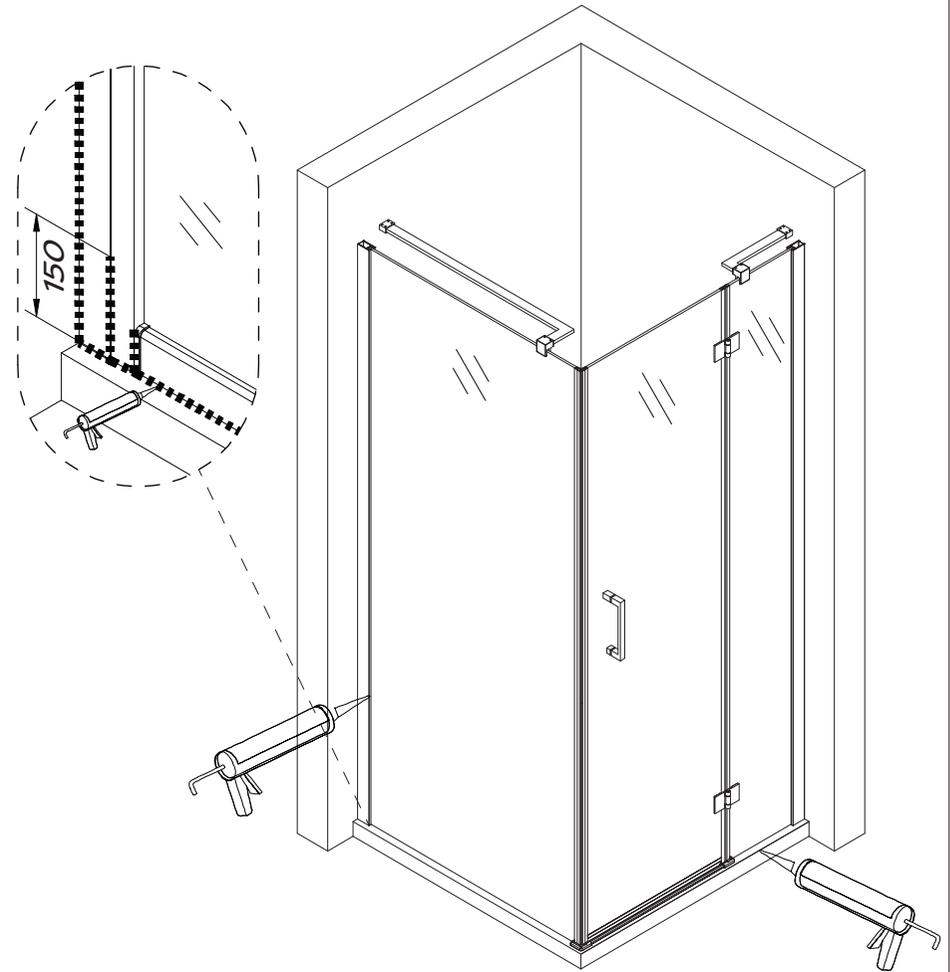

Safety Information for User & Installer

Important information for fitter:

- We recommend that this product is installed by a qualified tradesperson, Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in consequential damage.
- Incorrect installation of the enclosure will invalidate guarantee.

Important information for fitter:

- Carefully check the product for transport damage prior to installation.
- Never install damaged panels as there is a risk of spontaneous glass breakage. The supplied fixings/wall plugs are only for mounting directly on solid walls.
- It is essential that the solid, masonry/walls be inspected for adequate load-bearing capacity prior to every installation. The supplied fixings/wall plugs are not for use with stud walls such as plaster board, wood, metal or fiber board.
- Always seek professional advice to confirm wall type and appropriate type of fixing to be used for installation. Always check walls for concealed utility lines (power, gas, and water) prior to drilling the fixing holes.

Special information on handling glass:

- Always protect all glass edges from damage.
- Never stand the glass on its corners throughout the installation! Place the packing material beneath the glass panel; never place the glass on tiles, concrete floors or similarly hard surfaces.
- It is mandatory to check each glass panel for damage prior to installation. Never install damaged glass panels as this could cause spontaneous glass breakage!
- If the glass panel is damaged during use it must be replaced without delay. (Failure could cause a risk of spontaneous glass breakage!)

Prevent damage to glass or operation of the product:

- Ensure fittings do not hinder the movement of the door.
- Ensure that no objects are within the range of the door opening/ closing area.
- Avoid hitting the panels with hard objects such as mops when cleaning or tools during assembly. Damaged panels must be replaced as failures may cause latent glass breakage.
- Do not hit against the glass edge with hard or pointed objects (e.g. with mop handle) Damaged panels must be replaced; damage may cause spontaneous glass breakage.
- Do not use panels or handles to hang or support items such as drying towels or clothes.

Maintenance Information

Service/repair and inspection for safety

- After cleaning, check all the moving elements are sufficiently greased, re-grease if necessary, only use acid-free grease.

Cleaning

Do not use steam cleaners, caustic or aggressive cleaning and scouring agents, cleaners that corrode plastics, or solvents containing acetone, turpentine or neat bleach.

- Do not use any cleaning agents, which according to the manufacturer's specifications may corrode aluminium or light alloys.
- Do not use glass cleaning pastes and micro-fibre cloths to prevent damage to glass coating system.
- In order to prevent the build-up of lime scale, remove any remaining drops of water after showering using a squeegee, soft cloth without any cleaning agent.
- After use, carefully rinse off all residue such as; liquid soaps, shampoos, shower gels or similar cosmetic product with water to avoid deposits.

Important: Never apply the cleaning agent for longer than necessary. After cleaning, check all the moving elements are sufficiently greased, re-grease if necessary.

Recycling and Disposal

Please recycle the packaging in accordance with your local government regulations on waste handling, and follow the same advice at the end of the products life.

For more Information

Visit: victorianplumbing.co.uk

www.victorianplumbing.co.uk