




**victorian  
plumbing.co.uk**

**Apollo Single Lever Mono Bath  
Mixer with Shower Kit**

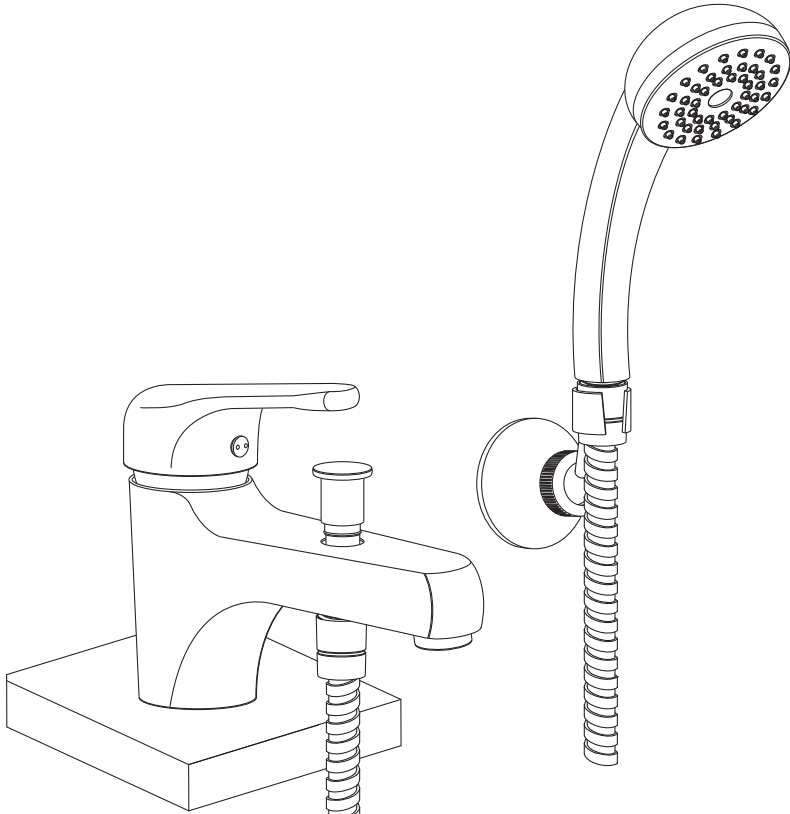


**Fitting Instructions**

Please follow them carefully and  
leave this manual with end user

## Before you begin:


1. **We recommend that this product is installed by a qualified tradesperson,** Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in the escape of water and consequential damage.
2. Ensure the supply pipes have been thoroughly flushed to remove any debris.
3. Ensure the incoming mains water supply is switched off prior to commencing the installation.
4. Observe all local plumbing and building codes & regulations.
5. Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.

①

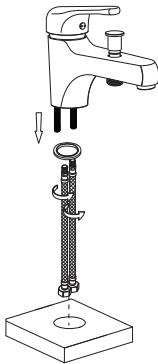


Install the threaded rods and hand-tighten the flexi-pipes into the bottom of the mixer body, then feed the assembly through the hole in the bath.

②

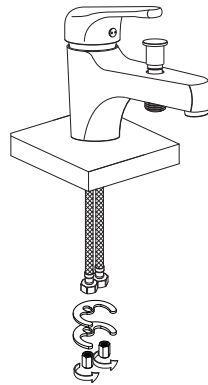


On the underside of the bath, place the washers into the fitting system and attach the fixing nuts. Tighten all connections making sure the mixer is securely in place, with the operating handle in the desired position.

③

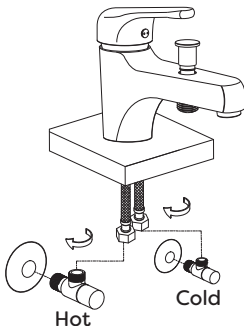

Connect both flexi-pipes to the hot and cold water supply/household pipe work. The cold inlet should be on the right and hot on the left when viewed from the front.


④

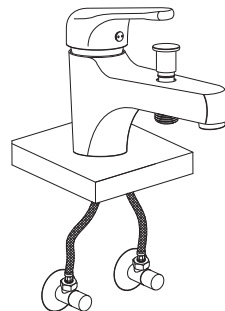

After installation turn on the mains water supply, run the tap and check all joints/connections for any leaks. Turn off the water supply.

**Note:** Diagrams are for illustration purposes only. Your tap may superficially differ from this drawing however the installation guide steps still apply.


5

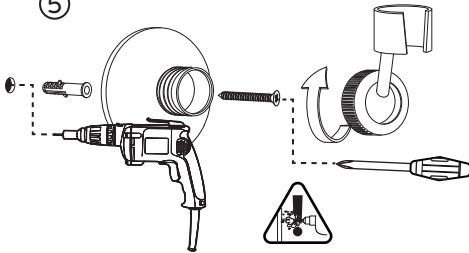

Warning:  
Check the chosen wall space for  
any pipes/cables prior to drilling!

Position the handset holder in the desired location, mark the screw hole ready for drilling. Using an appropriately sized drill bit, carefully drill the pre-marked hole and insert the rawl plug into the pre-drilled hole. Secure the bracket body to the wall using the screw provided, attach the holder to the bracket body.


6

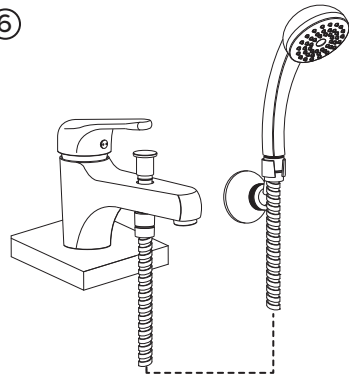

Connect the shower hose to the mixer tap and to the shower handset, Turn on the mains water supply, run the handset and check all joints and connections for any leaks.

## Flexible Connecting Pipes:

When installing the flexi-pipes to the household pipework. Special care must be taken to ensure they do not bend sharply causing a kink or twist. Failure to do so may result in poor performance and damage to the flexi-pipes.

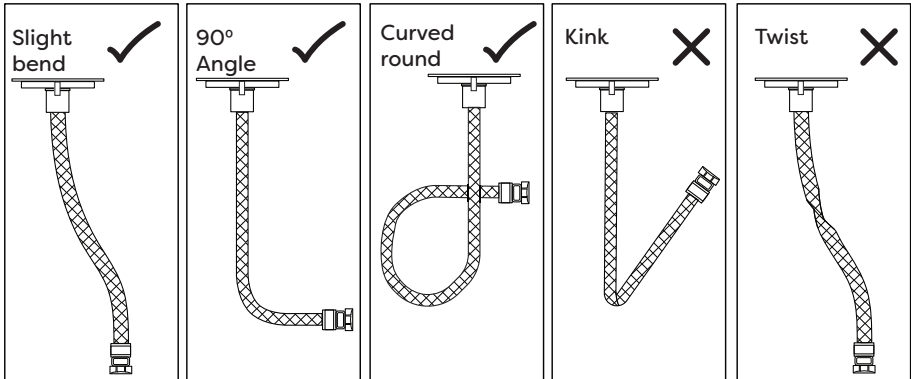

## Aftercare:

Always clean the surface of tap to keep it bright. **Attention:** please do not use inappropriate tools such as sharp brushes, rough sponges, scouring pads or corrosive detergent to clean the tap. Please clean the shower valve by wet cloth and soapy water. Then rinse the soap out with clean water and dry with a soft cotton cloth.

## Troubleshooting

| FAULT                    | POSSIBLE CAUSE   |
|--------------------------|--|
| Taps do not turn on      | <ul style="list-style-type: none"><li>• Closed isolation valve.</li><li>• Mains water supply turned off.</li></ul>   |
| Water dripping from taps | <ul style="list-style-type: none"><li>• This is normal for a short time after using the taps.</li><li>• If water continues to drip, possible build up of limescale in the cartridge valve.</li></ul>   |
| Low or no flow rate      | <ul style="list-style-type: none"><li>• Partially closed isolation valve.</li><li>• Instantaneous water heater cycles on and off as flow rate pressure is too low.</li><li>• Head of water is below the minimum distance required.</li><li>• Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.</li><li>• Airlock or partial blockage in the supply pipework.</li></ul> |