

ROUND THERMOSTAT AND S/L FAUCET FREE FIXATION SHOWER UNIT

IMPORTANT: FLUSH THROUGH ALL SUPPLY PIPEWORK BEFORE CONNECTING
THE FAUCET TO THE WALL AS THIS COULD DAMAGE OR BLOCK
THE CARTRIDGE / DIVERTOR MECHANISMS.

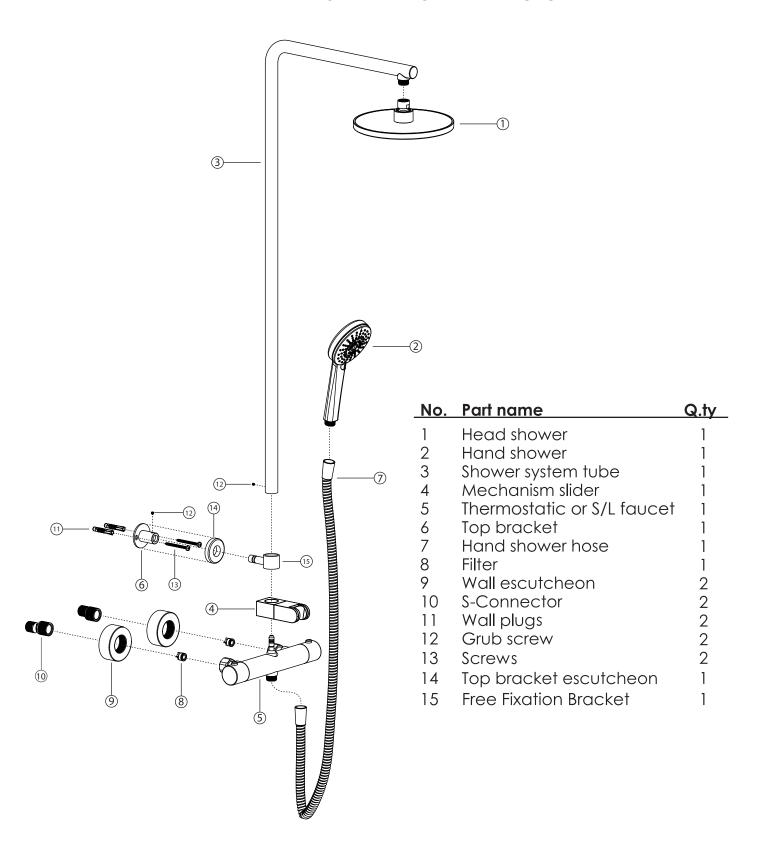


ROUND THERMOSTAT AND S/L FAUCET FREE FIXATION SHOWER UNIT


RECOMMENDED INSTALLATION POSITION

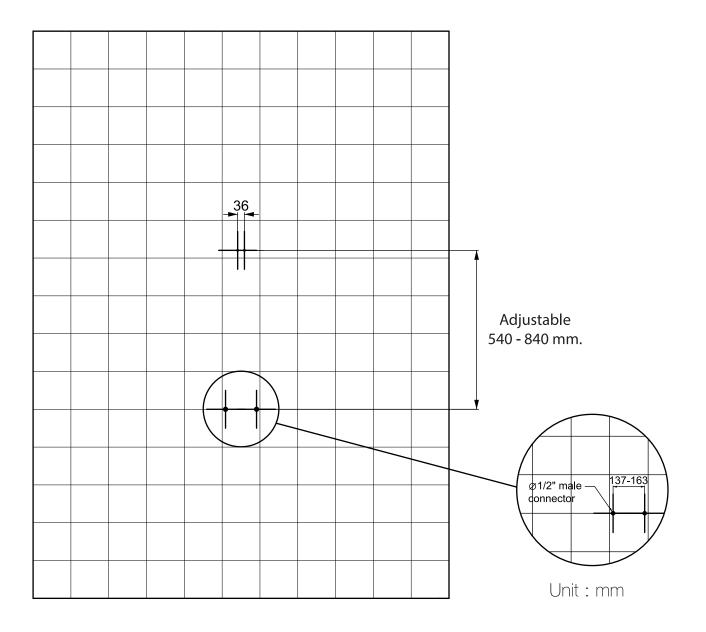


STEP 1
Install S-Connectors(10) and Wall escutcheons(9) and Top Bracket(6) to Wall.

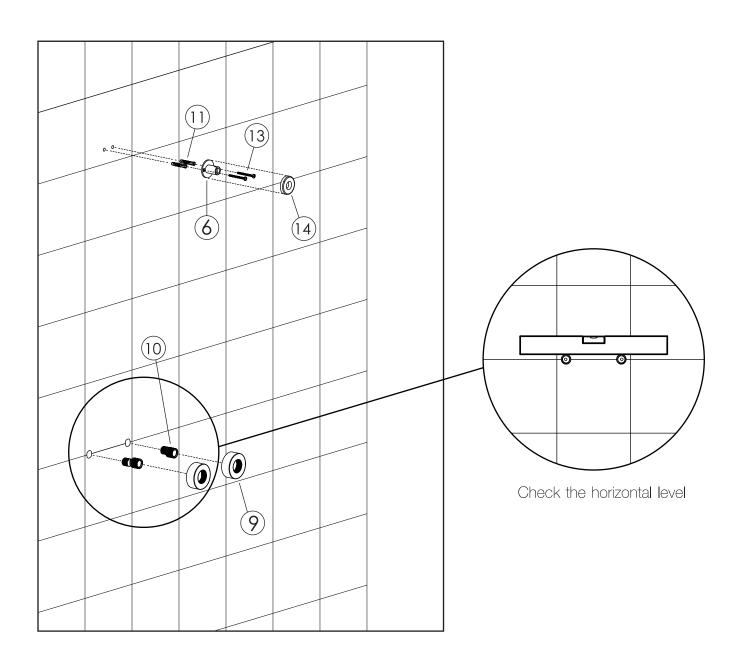


STEP 2
Assemble Free Fixation Bracket(15) and Mechanism slider(4) to Shower tube(3)

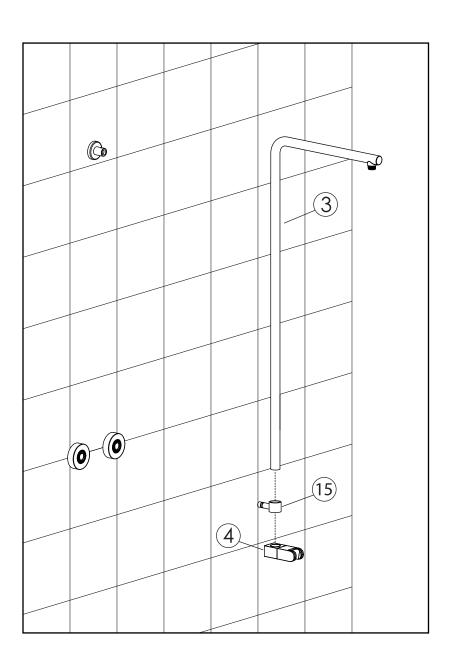


STEP 3Assemble faucet(5) to Shower system tube(3)

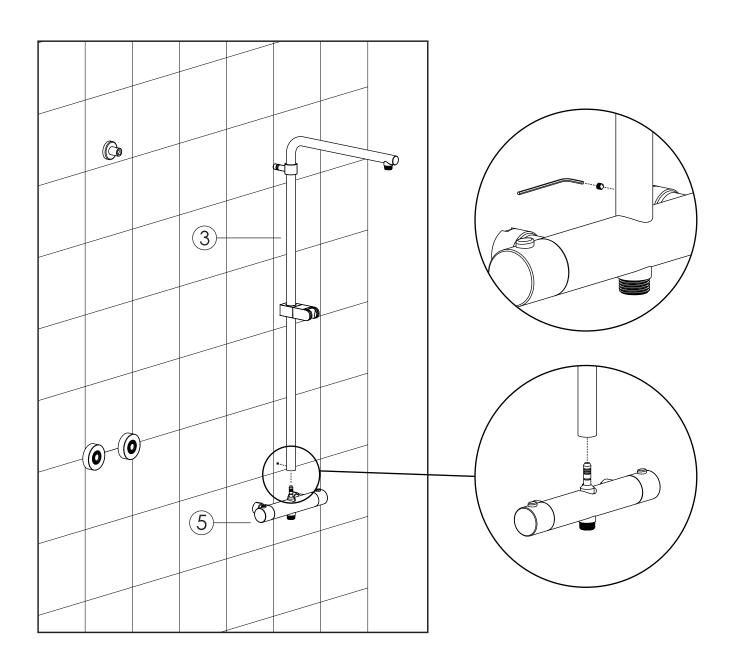

STEP 4Install faucet and Shower system tube to Wall connections.

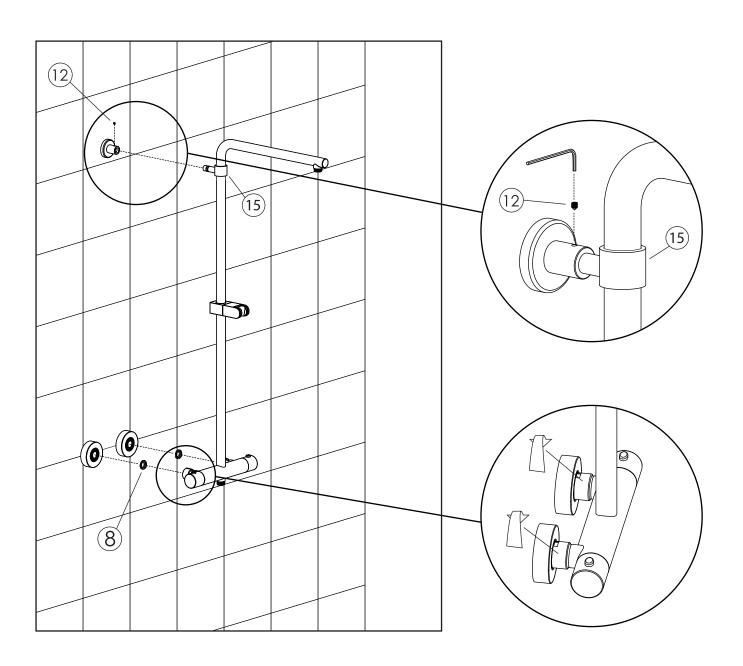


STEP 5
Assemble Hose(7), Hand shower(2) and Head shower(1)

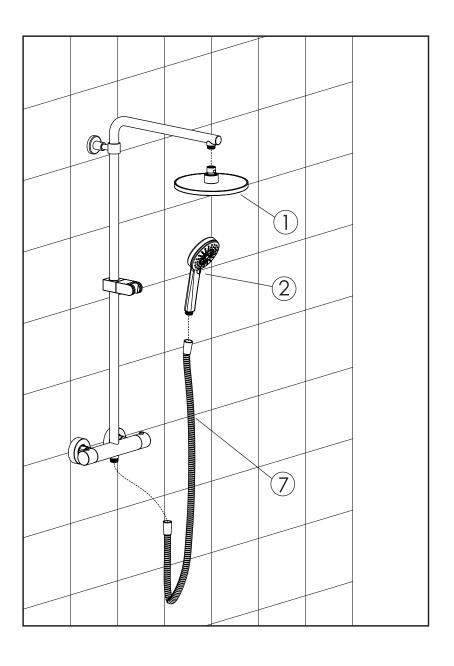

ROUND THERMOSTAT AND S/L FAUCET FREE FIXATION SHOWER UNIT

STEP 6
Usability testing

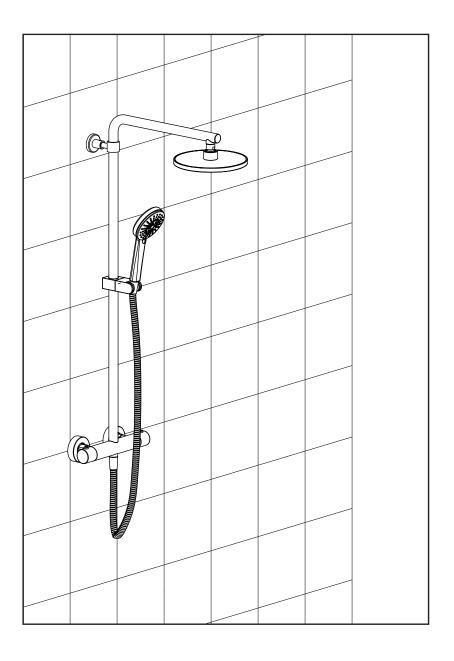

Al0036 Page 8