



ACARM-MB

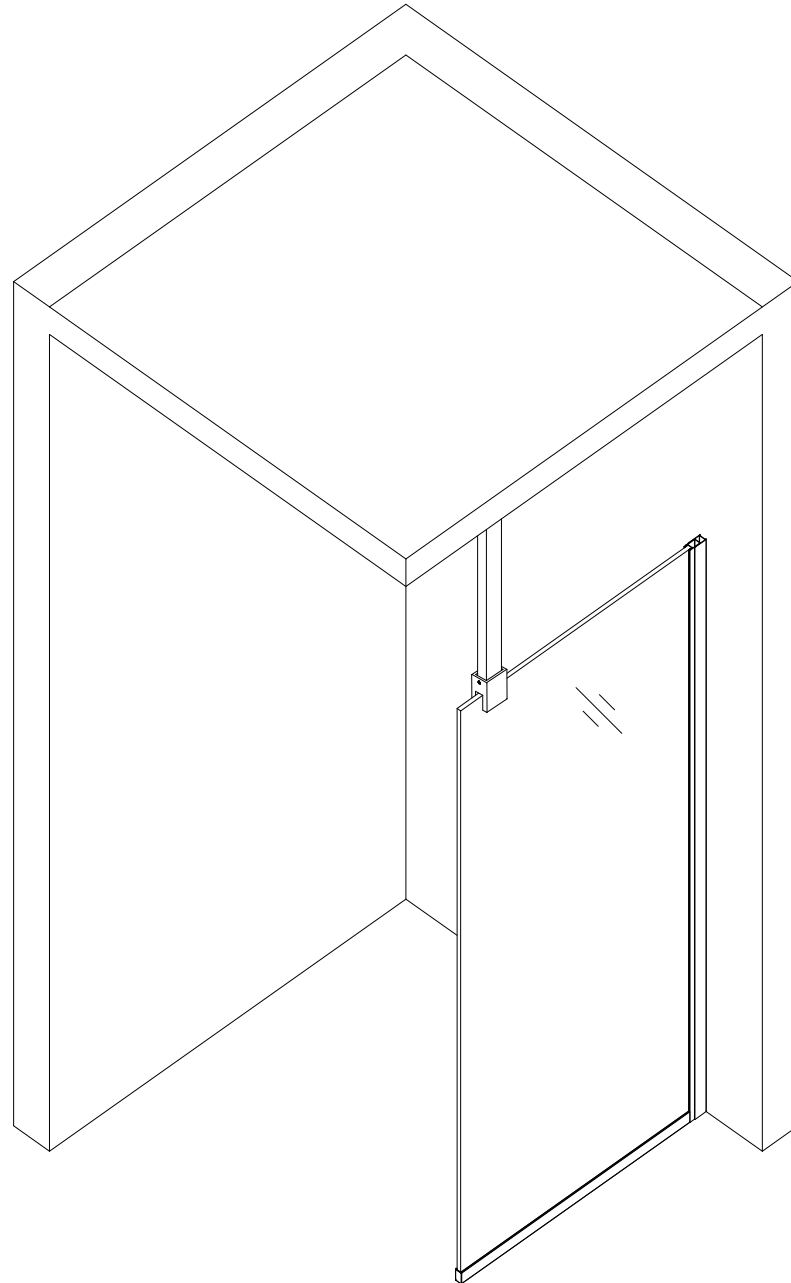

- ① — [screw]
- ② — [corner bracket]
- ③ — [screw]

- ④ — [vertical trim piece]
- ⑤ — [corner bracket]

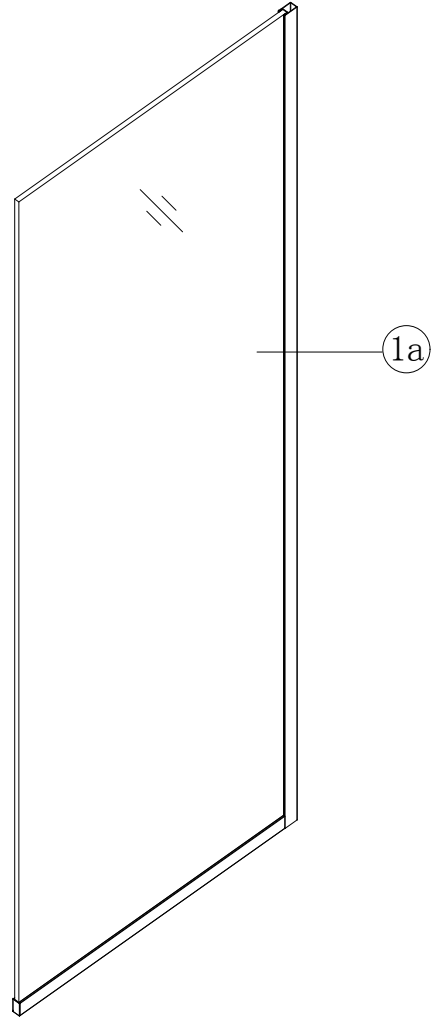


Door

1a



ACARM-MB


1



D6x30

1Pcs


2



BAC-X01

1Pcs


3



ST4X30

1Pcs


4



BAC-B01

1Pcs




5




BAC-X02

1Pcs

②
+
④
+
⑤


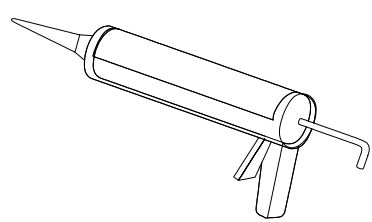


2.5 mm







4 mm



Ø6mm

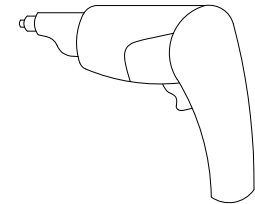


Ø3.2mm




1

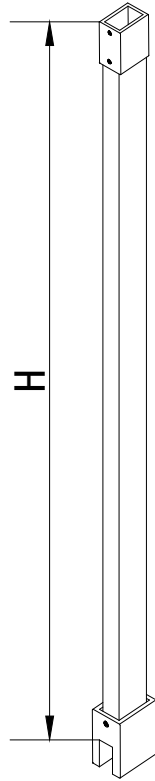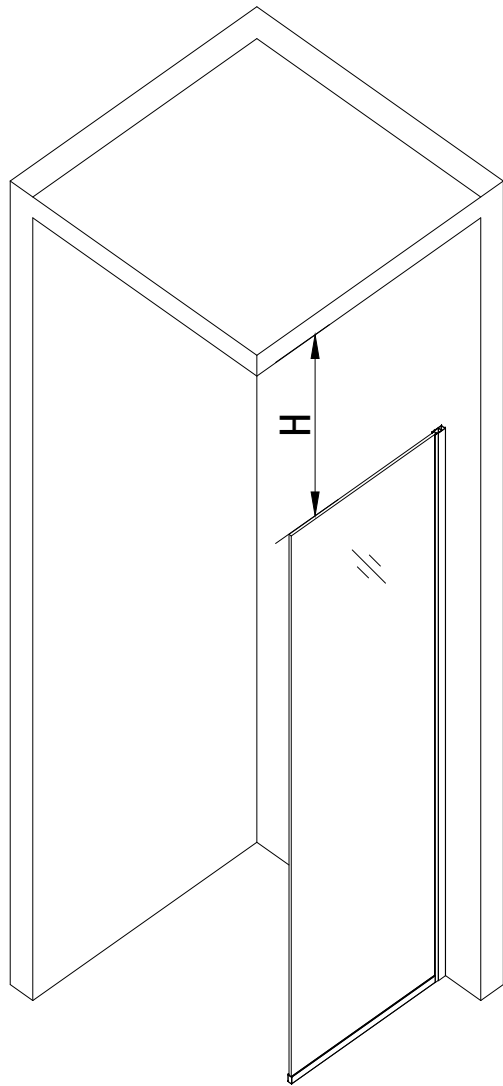

2

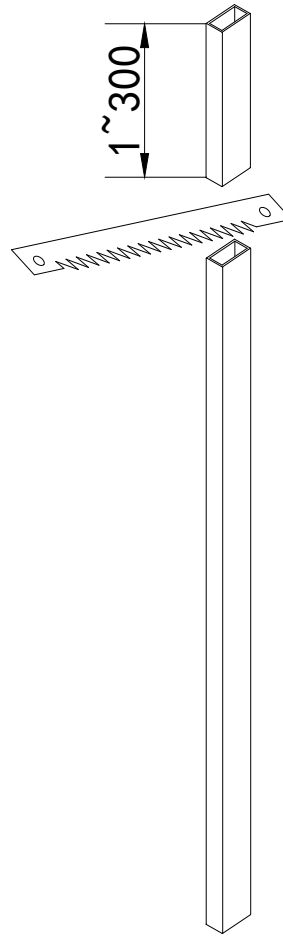

3

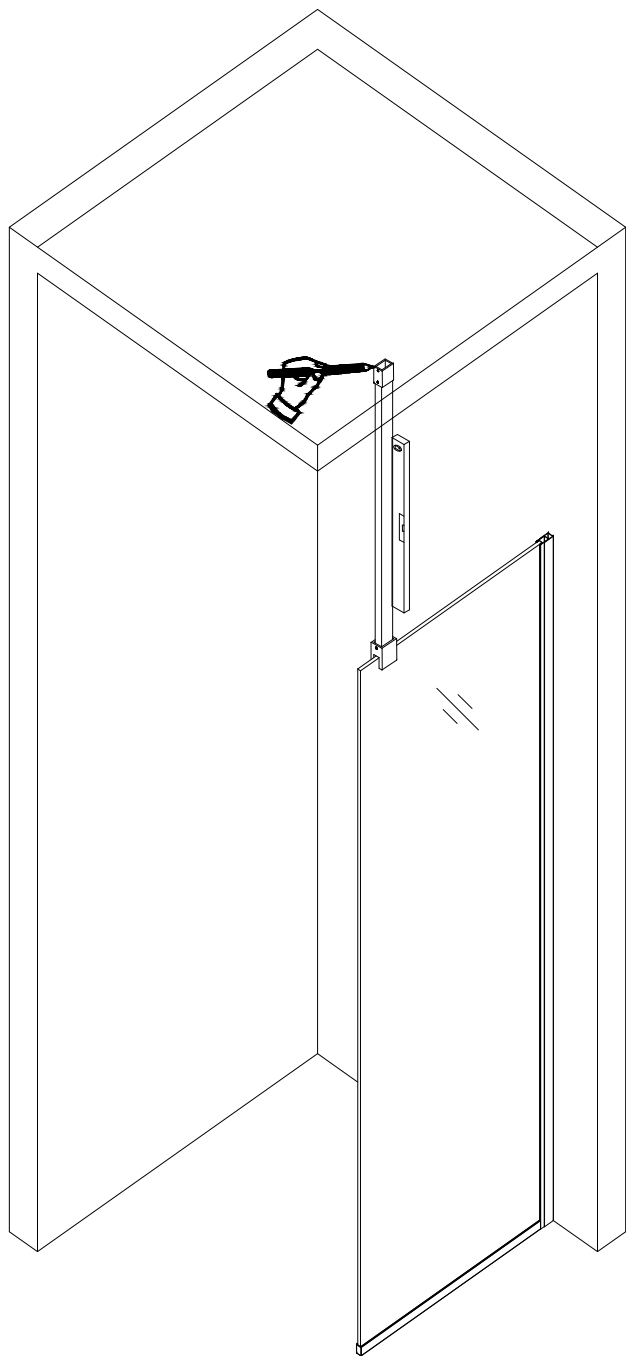


	W
700	600
800	700
900	800
1000	900
1100	1000
1200	1100
1400	1300

3-1




3-2

Ø6X40mm




3-3



3-4



4

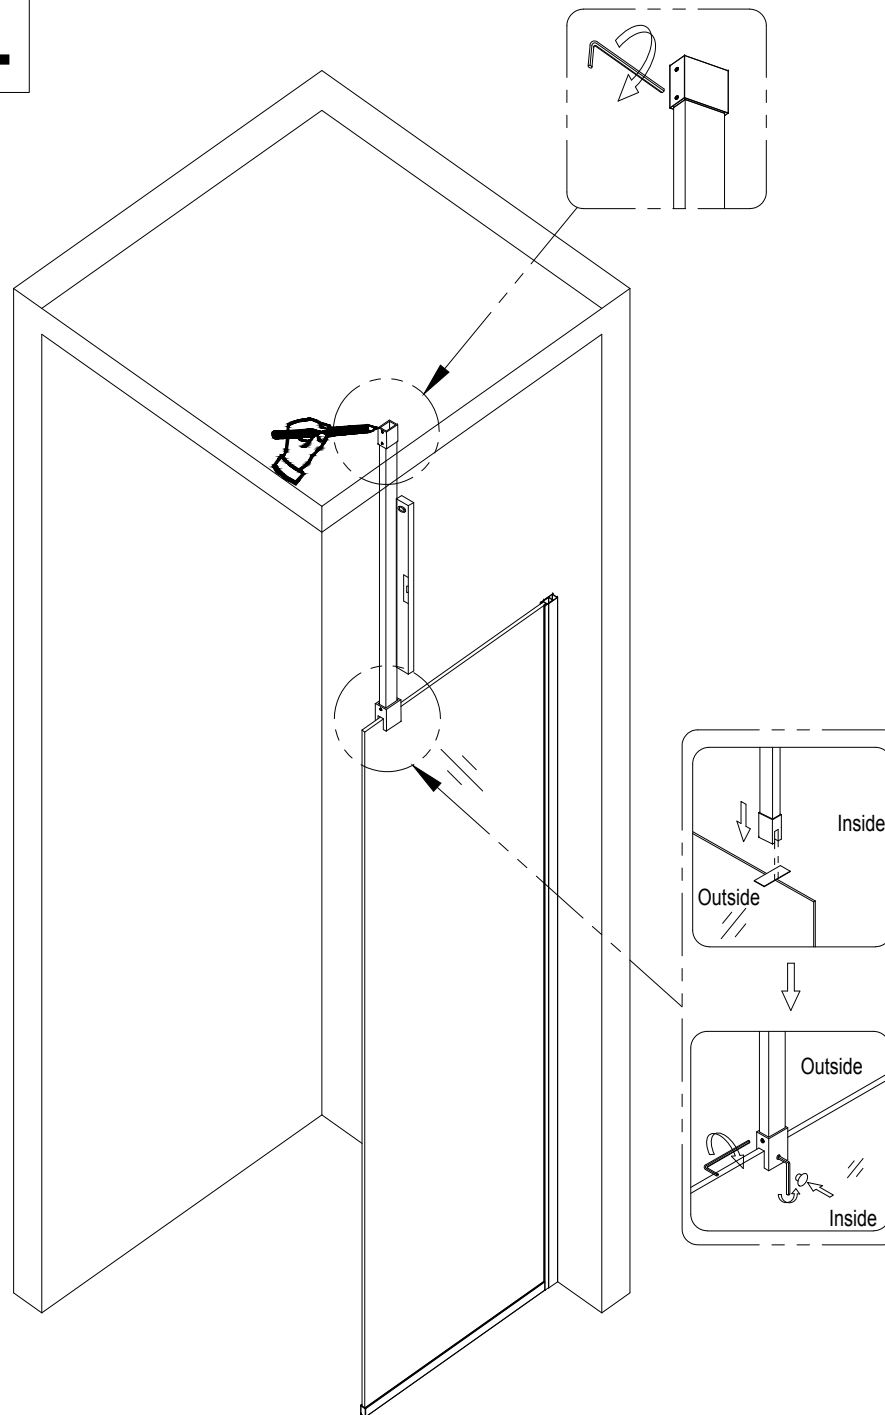

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material whencleaning your shower enclosure.

