




## Shower Head With Wall Mounted Arm

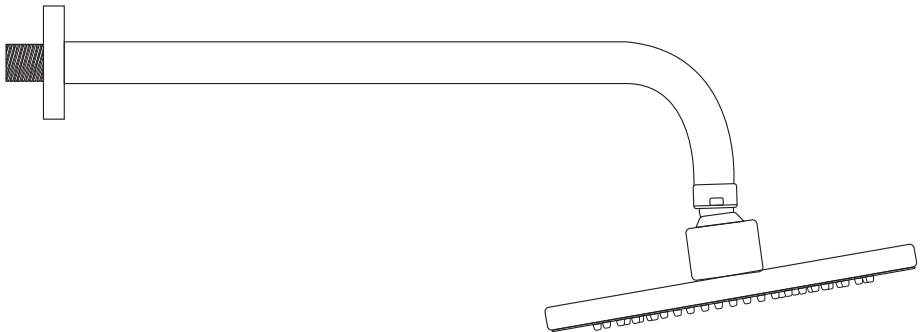

## Fitting Instructions

Please follow them carefully and  
leave this manual with end user


# Installation Guide

**Before installation, please read this guide carefully.**

1. We recommend that this product is installed by a qualified accredited tradesperson, Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in the escape of water and consequential damage.
2. Ensure the incoming mains water supply is switched off prior to commencing the installation.
3. Observe all local plumbing and building codes & regulations.
4. Carefully inspect the product for damage. If any damage is found, immediately contact our Customer Relations Team.

## Installation:

1. The connecting thread of the product is G 1/2"
2. Insert the decoration (NO. 1) to the shower arm (NO. 2)
3. Use PTFE sealing tape on the long threaded side of the shower arm, then connect the shower arm with the embedded pipe in the wall. Connect the other side of the shower arm with the shower head (NO. 4). Ensure that the shower head and arm is securely fixed to the wall before use.

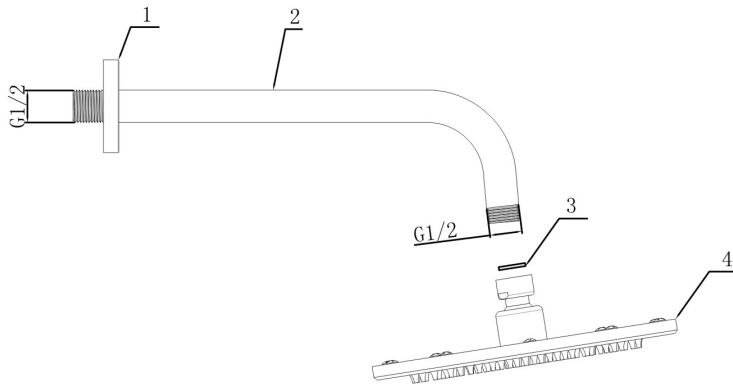

1. Decoration flange
2. Shower arm
3. Rubber washer
4. Shower head

Diagrams are for illustration purposes only. Your shower head and arm may superficially differ from this drawing however the installation guide steps still apply.

## Aftercare:

To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration.