


AREZZO

Wall Hung Sintered Stone Basin

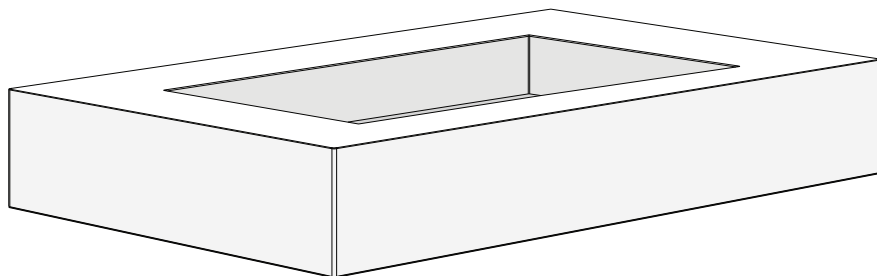




Fitting Instructions

Please follow them carefully and
leave this manual with end user

Before you begin:

- 1. **We recommend that this product is installed by a qualified tradesperson.** Victorian Plumbing Ltd. accept no liability for products incorrectly installed or any damage to the floor, walls, plumbing, vanity cabinet, sink, counter top, or personal injury during installation.
- 2. Observe all local plumbing and building codes & regulations.
- 3. **Attention: Recommended for solid walls only. If fixing to studded timber frame walls, ensure appropriate fixings are used.**
- 4. Ensure the incoming mains water supply is switched off prior to commencing the installation.
- 5. For the following instructions, it is assumed that the in-wall plumbing has already been prepared.
- 6. Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.

Items Included:

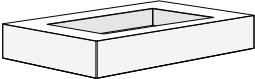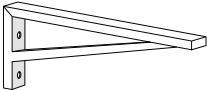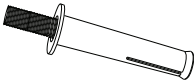No.	Description	Picture	Qty
A	Basin		1
B	Fixing Bracket		2
C	Rawl Bolts		4
D	Washers		4
E	Hex Nuts		4

 **WARNING** 


CHOKING HAZARD
CONTAINS SMALL PARTS
KEEP AWAY FROM CHILDREN
AND PETS

Tools Required (Not Included):

Ensure the appropriate PPE is used during installation



Pencil

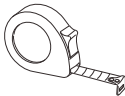


Tape Measure



Power Drill



Spirit Level

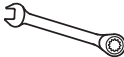

Spanner



Silicone Sealant




Damp Cloth

Installation

Note: Diagrams are for illustration purposes only. Your Basin may differ from these drawings however the installation guide steps still apply.



Step 1:

- Set the 'Basin' (A) at the desired height, then make a mark across the top of the cabinet to the wall.
- Make another mark below the original marking, to set the height for the 'Bracket'. Ensure the markings are level using a spirit level.


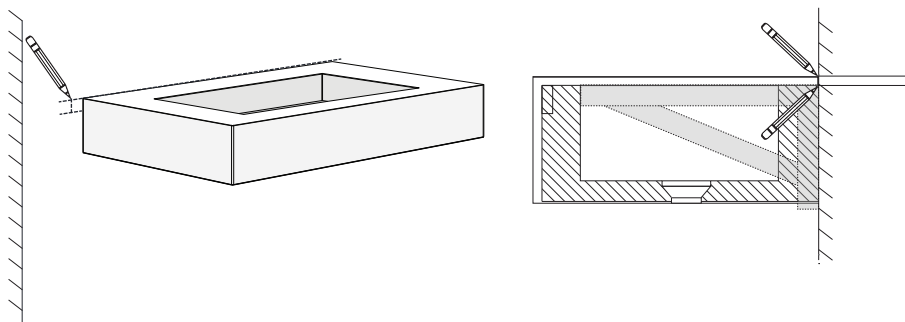


Step 2:

- Place the 'Brackets' (B) above the bracket line and mark the holes in the wall ready for drilling. Using an appropriate sized drill bit, carefully drill the holes in the wall then insert the Rawl Bolts (C).
- Place the brackets over the drilled holes then secure into place using the 'Washers' (D) and 'Bolts' (E) provided. Tighten with a spanner/adjustable wrench.

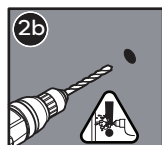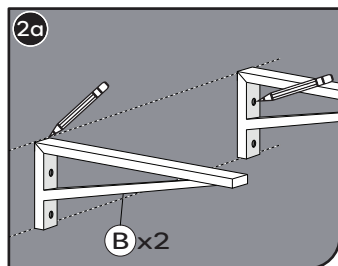


Warning:
Check the chosen wall space for
any pipes/cables prior to drilling!

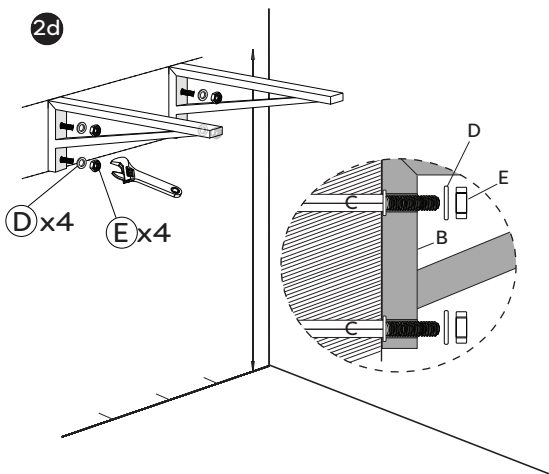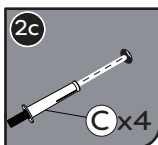


Step 3:

- Pipe a Bead of good quality silicone sealant around the back edge of the 'Basin' (A) and along the top of the 'Brackets' (B).
- Carefully mount the 'Basin' over the 'Brackets' and to the back of the wall. Ensure the 'Basin' is level using a spirit level.
- Pipe a bead of good quality silicone sealant at the back to the 'Basin' to prevent water ingress. Wipe away any excess silicone with a damp cloth and allow 24 hrs for the sealant to fully dry.
- Proceed to the installation of the drain trap, water supply lines. Refer to their respective installation instructions for guidance if needed.


3a

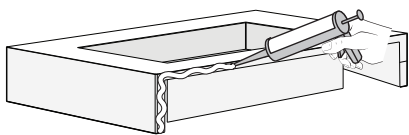


3b

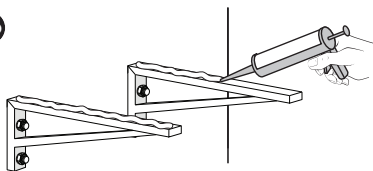

3c

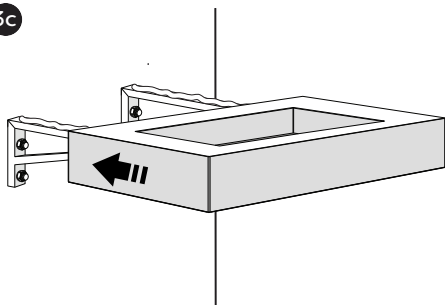

3d

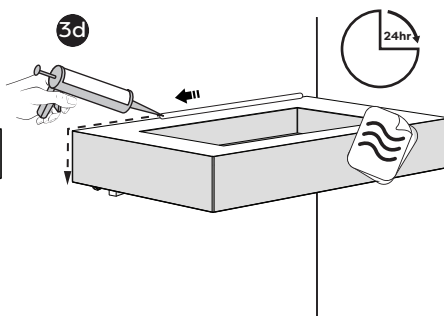

Cleaning and Maintenance:

We recommend that you regularly clean your basin with a mild dish detergent. After each use, wipe the basin dry with a soft cloth. Do not allow mineral deposits such as iron, salt, lime, or soap to build up on your basin. Refrain from using acidic household cleaners, wipes with harsh chemicals, or abrasives, as these will damage the basin.

Recycling and Disposal:

Please recycle the packaging in accordance with your local government regulations on waste handling and follow the same advice at the end of the products life.