




INSTALLATION MANUAL (Brushed Brass)

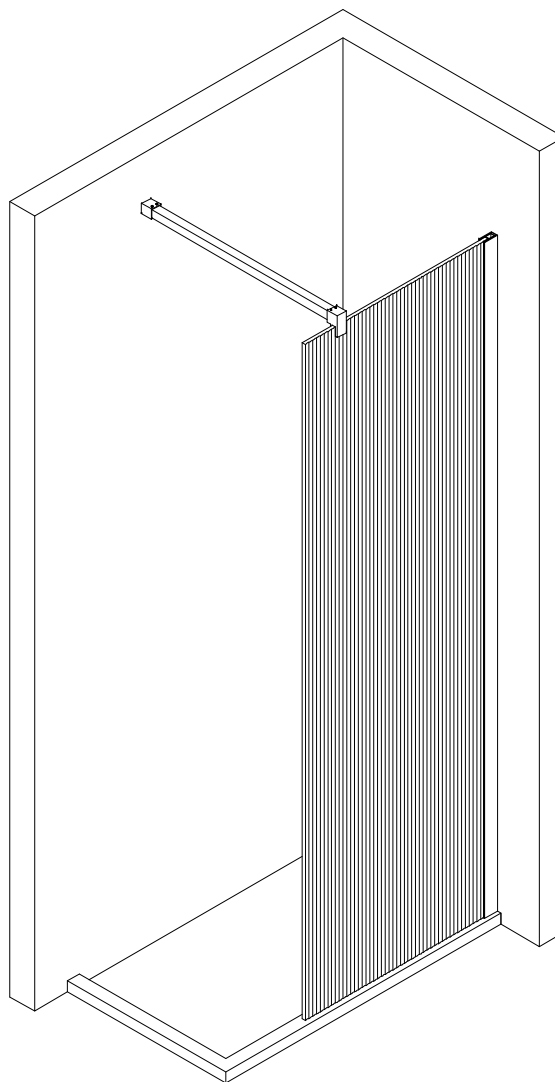

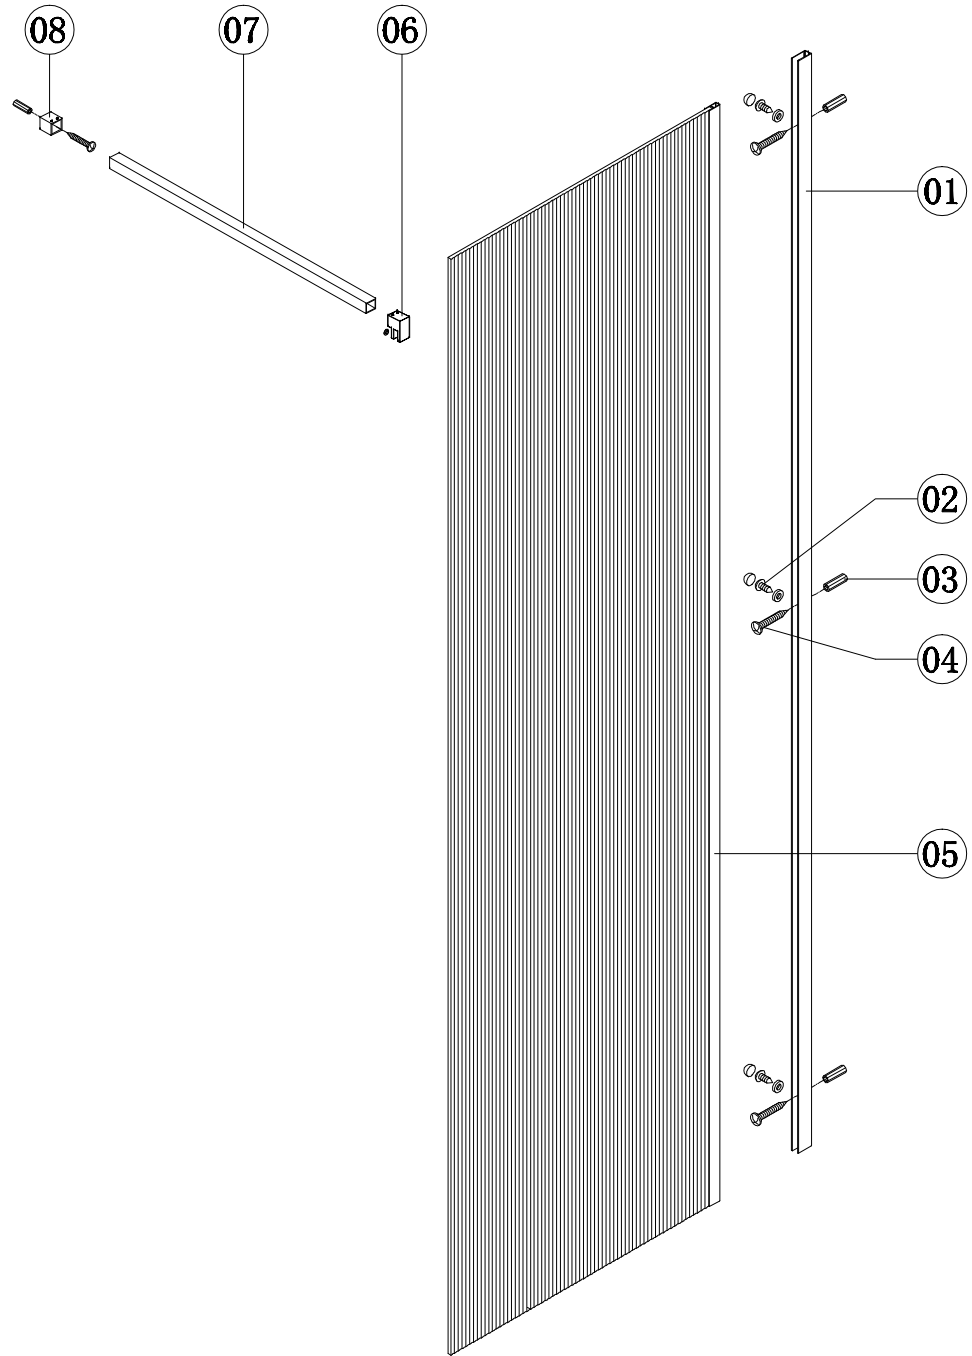

1

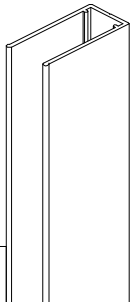


JRSF-W01

1PC

2


ST4X12



ST4x12

3PCS

3

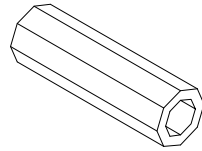


D6x30

4PCS

4


ST4X30



ST4x30


4PCS

5



1PC


6

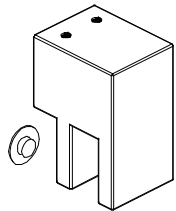

JRSF-X02

1PC


7

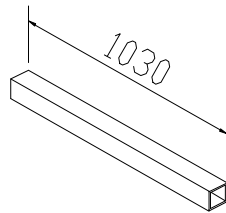

JRSF-W02

1PC





8

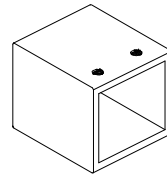


JRSF-X01

1PC


Tools:

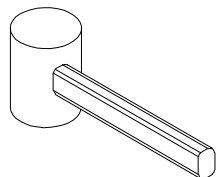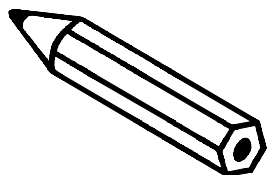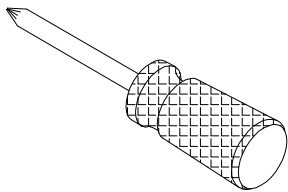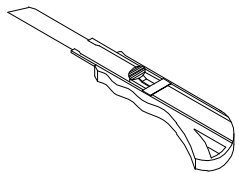

2.5 mm






4 mm




Ø6mm






Ø3.2mm

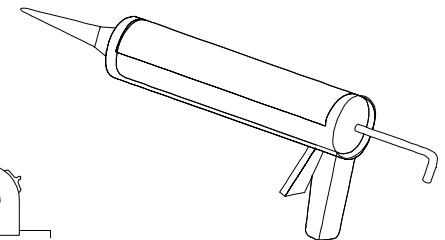
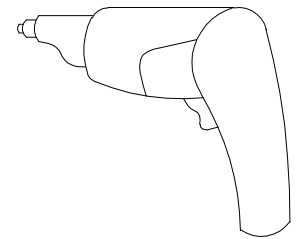


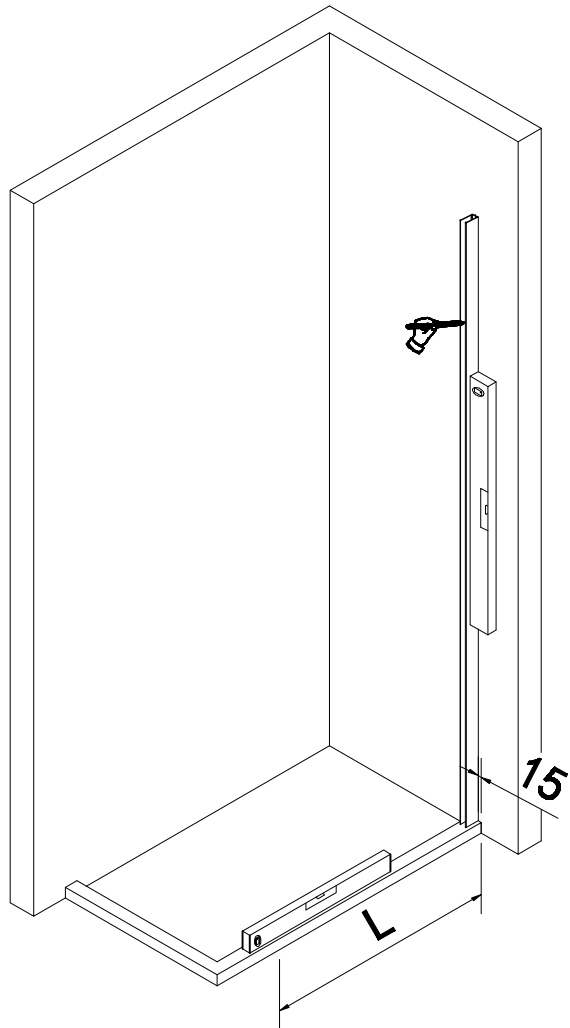1


| | L |
|------|---------|
| 800 | 765-780 |
| 900 | 865-880 |
| 1000 | 965-980 |

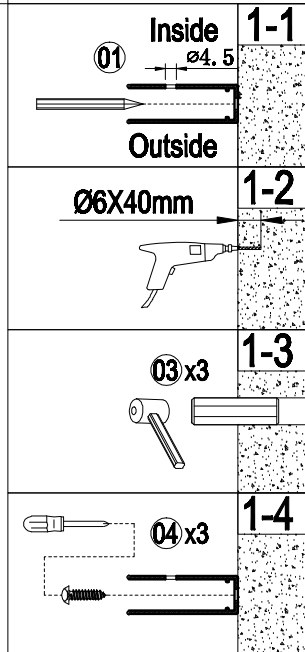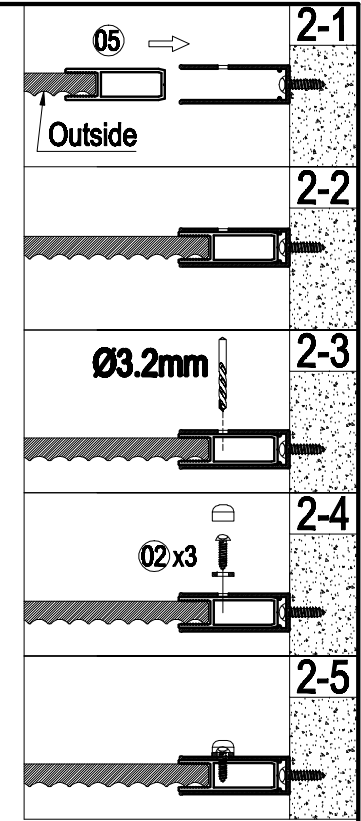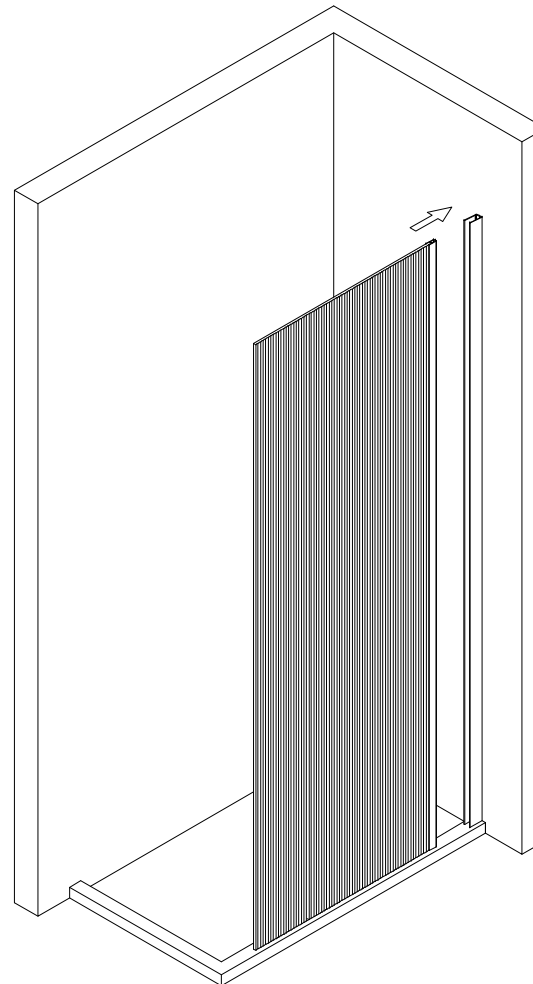**2**

3

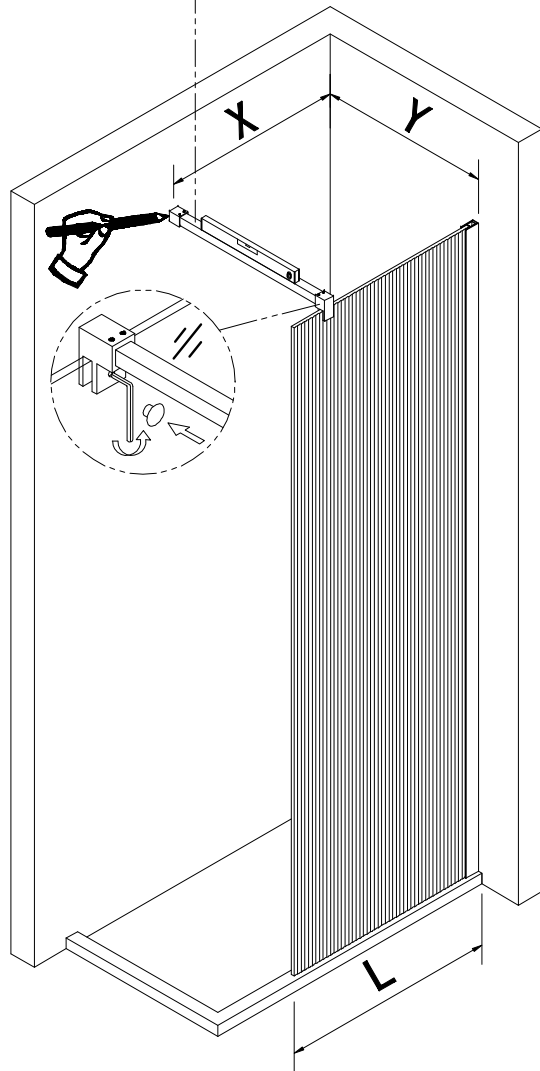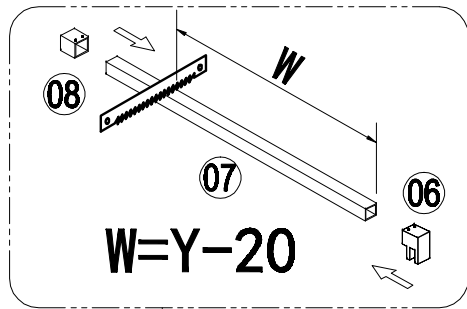

| L | X |
|------|-----|
| 800 | 700 |
| 900 | 800 |
| 1000 | 900 |

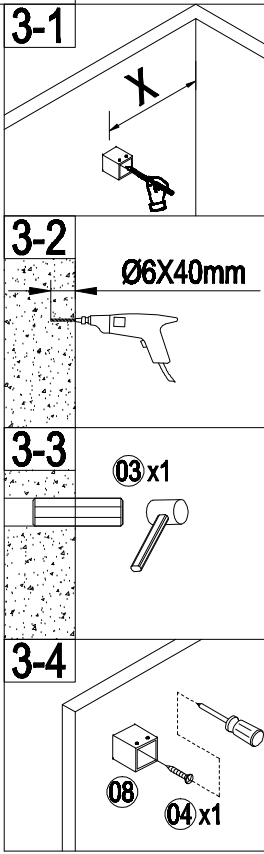

4

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly. Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

