


## **Bathroom Basin (Wall Hung)**

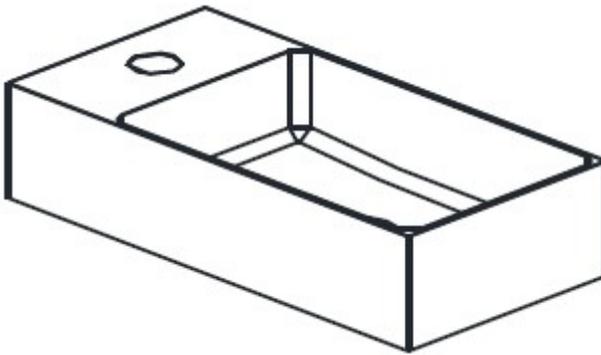

### **INSTALLATION INSTRUCTIONS**

## WARNING!


**We recommend that this product is installed by a qualified tradesperson and we accept no liability for products fitted incorrectly.**

### Maintenance

Surfaces should be cleaned with a soft cloth and warm soapy water. Rinse and dry after cleaning, this is extremely important for the area with hard water. Under no circumstances should abrasive or acid based cleaning products be used.


### Step 1: Fixing Preparation

Always check bracket with spirit level then using the pencil mark the 2 fixing point ready for drilling.

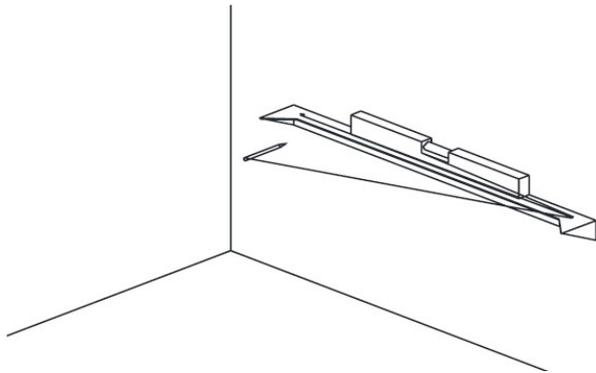


### Step 2: Drill Holes

Using a 10mm drill bit, carefully drill the 2 pre-marked holes.

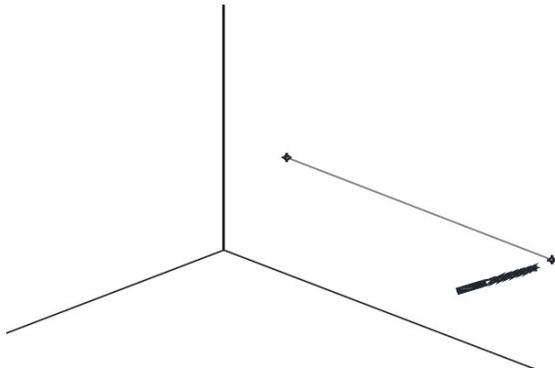


### Step 3: Inset Fixings

Using a rubber mallet gently tap the Raw bolts into the pre-drilled holes.

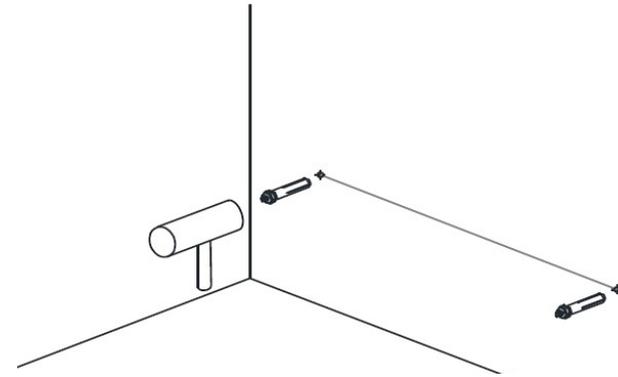


### Step 4: Bracket Fixing

Locate the bracket and insert the bolts into the Raw bolts, check for level then secure the bracket to the wall.

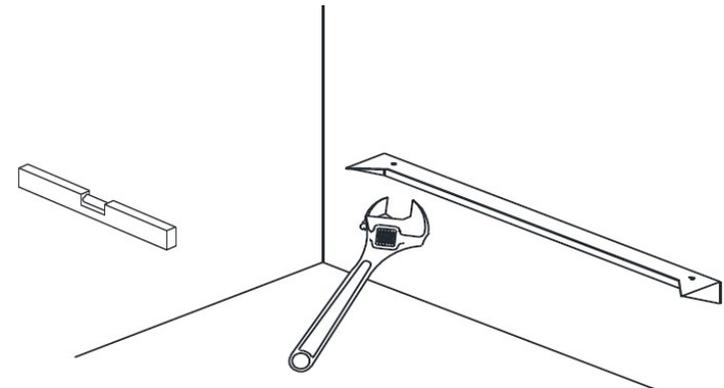

### Step 5: Basin Preparation


Pipe a bead of good quality silicone sealant to the rear surface of the basin.

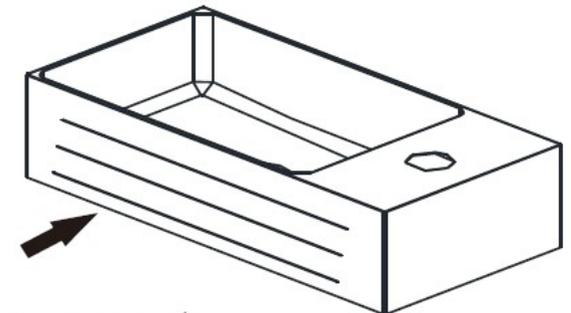

Neutral Glass cement


**Step 6: Basin Fitting**

Place the basin onto the wall bracket, gently pushing the basin back against the wall and secure the fixings.

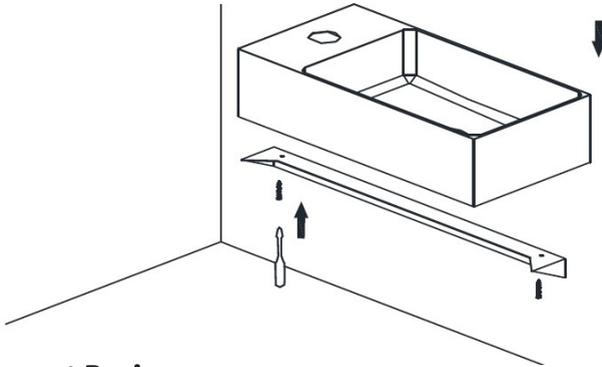

**Step 7: Support Basin**

Cut a suitable timber strut to support the basin, thus allowing the sealant to cure.

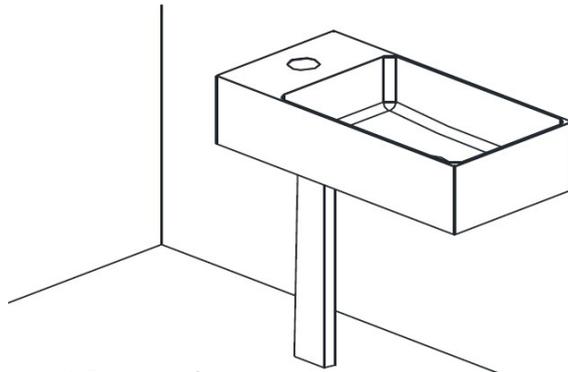

**Step 7: Support Removal**

Finally, remove the timber support and proceed to complete all plumbing connections

