


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

General Installation Guide

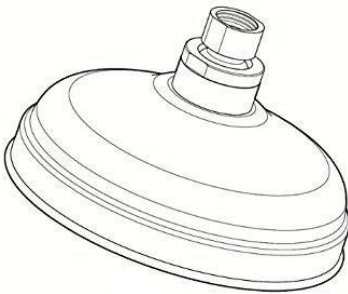

SHOWERHEADS & ARMS

NOTE: shower arm not included with every shower head model

A member of  SANIPEXGROUP

Please leave these instructions with the customer

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

To the Installer, please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the product is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Before making any outlet pipe connections, all supply pipes **MUST** be thoroughly flushed to remove debris.

The fitting of an in-line filter is recommended on the supply mixer, Failure to do this could result in damage to the components or low flow from the showerhead.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:


We recommend cleaning with a soft damp cloth and mild soap solution.

Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.

Do not use solvent based cleaners.

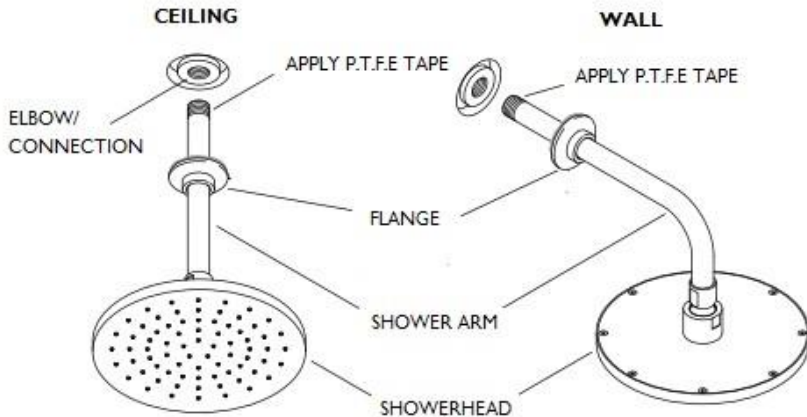

Remove the product from the box and carefully unwrap the protective packaging.
(Note: Shower head may not include shower arm)

Ensure the shower supply elbow/connection is correctly installed and securely mounted to provide adequate strength to support the shower head.

Install the shower arm dry into the shower supply elbow/connection and count how many turns it requires to be tight and in the correct position.

Slide the flange over the long end of the shower arm, ceiling or wall mounted type

Apply P.T.F.E tape to the thread of the shower arm

Install the shower arm to the shower elbow/connection, allowing for the correct number turns from the dry-run and secure the flange in place

Turn on the water to allow flushing of any debris from the pipe and fitting
Install the shower head to the shower arm

Check all connections for leaks.

Cleaning the rubber nozzles:

If the showerhead is equipped with silicon nozzles periodically rubbing the silicon nozzles manually easily gets rid of the Calcium/Lime-scale deposits. With one simple technique, your shower is always perfect.

The guarantee does not cover any damage due to deposits of calcium or impurities.

