





1. Determine the position of the hole, ensure there is sufficient space underneath for the tap fixings




2. Use masking tape to protect the sink surface and mark your desired position with a pencil or marker.

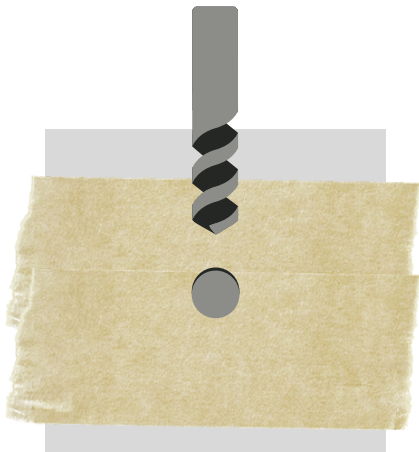

3. Drill a pilot through the centre of the mark, this will help you with positioning the hole saw.

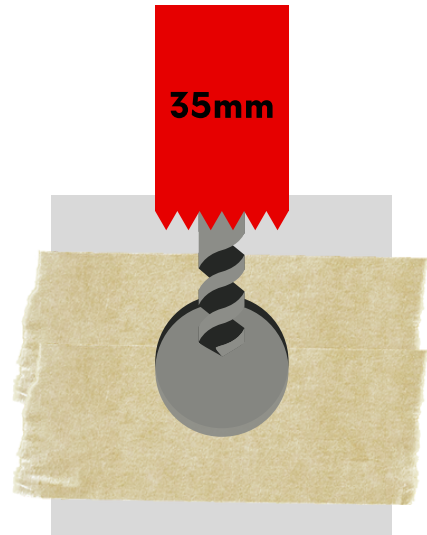

4. Using a 35mm hole saw, position the guiding drill bit into the pilot hole. Use a steady hand and drill through the surface.

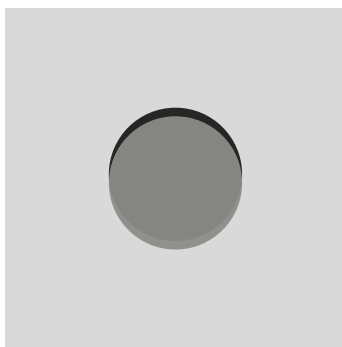

5. Ensure any rough edges are removed with a file or sandpaper. Remove the masking tape and fit your tap