



bower

Universal Basket Strainer Waste

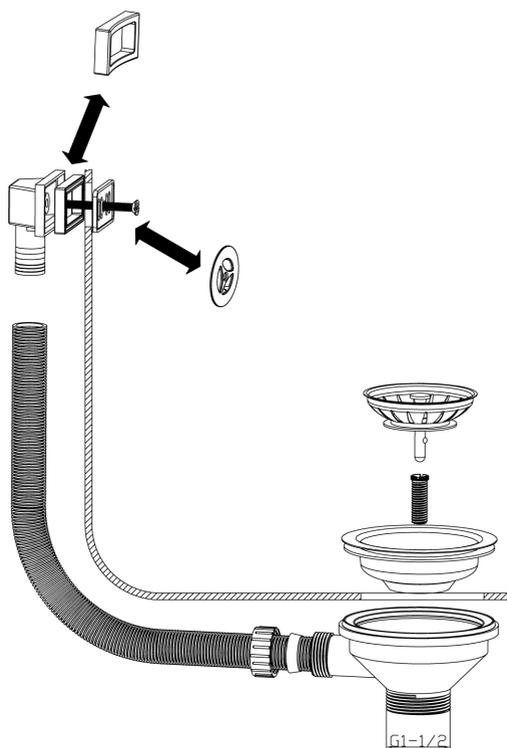

Fitting Instructions

Please follow them carefully and
leave this manual with end user

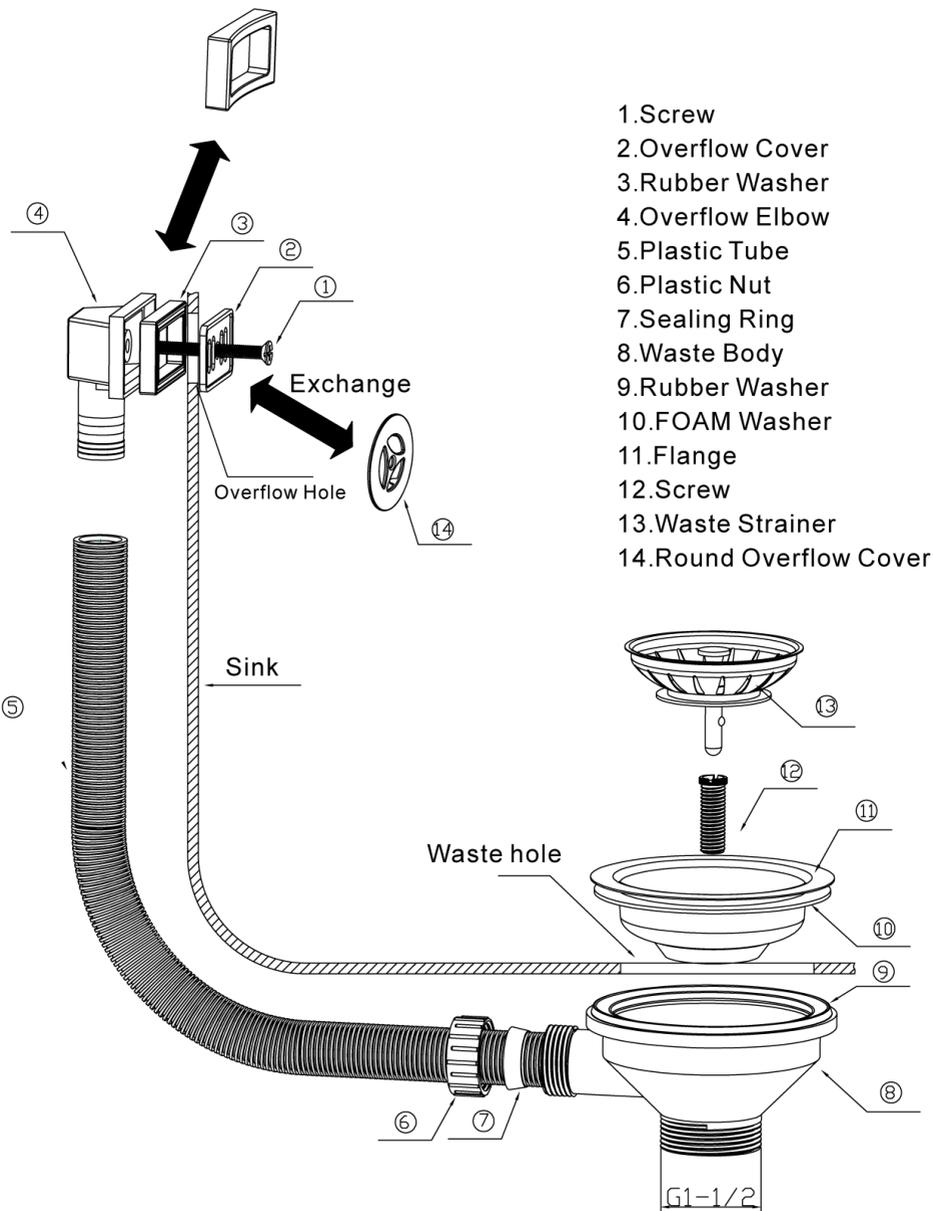

Assembly instructions

Before you begin:

Unpack the product then read these instructions before proceeding. And Inspect the universal basket strainer waste for damage. If any damage is found, contact our Customer Relations team.

Assembly:

1. Make sure all components are present prior to installation
2. Unscrew the screw (1), then remove the overflow cover (2) and rubber washer (3).
3. Remove the waste strainer (13) and screw (12), then place the flange (11) and Foam washer (10) above the sink hole. Attach the Rubber Washer (9) and Waste body (8) to the underneath of sink. (Please note the washer can't be put askew.) Then tighten the screw (12). As shown in the diagram.
4. Install the overflow elbow (4) and rubber washer (3) on the overflow hole of sink as shown in the diagram. Then place the overflow cover (2) on the overflow hole of sink, tighten the screw (1).
5. Connect the plastic tube (5) with the outlet of overflow elbow (4). Make sure the plastic tube can not slip off. Then put the other side of plastic tube (5) into the waste body (8), install the sealing ring (7). Tighten the plastic nut (6).
6. Place the Waste strainer (13) into the Screw (12).
7. Check **all** joints and connections for leaks after finish the installation.

Note: Round overflow cover (14) can be exchanged with Rectangular overflow cover (2) according to your needs.

If do not need to install the overflow parts and tube, the plastic washer and rubber washer need to be installed onto the waste body, then tighten the plastic nut (6), plug the drain hole, as shown in below diagram.

