


Round concealed shower kit including shower arm, fixed 20cm round shower head, slide rail, flexible 3 function shower handset, hose & elbow - V53

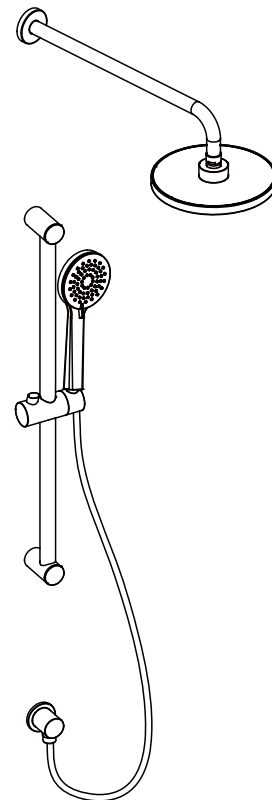

Important

- We recommend that this product is installed by a qualified professional plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product upon delivery to ensure that it has not been damaged and is complete.
- Before installation, please make sure this product is the correct model and you have all the parts required for installation and use.
- If possible the shower kit should be supplied with hot and cold water at balanced pressure.
- It is important to flush the water system to ensure that no swarf, solder, or any other impurity or foreign body can enter the shower kit.
- Turn off the water supply before commencing work, this should be done at the isolating valves or inlet feeds if fitted, or otherwise at the main stopcock.
- Please read these instructions carefully and keep them for future reference.

Warning!

Please check for any hidden pipes or cables before drilling holes in the wall.
When using power tools always follow the manufacturers user instructions.


Cleaning

We do NOT recommend you use any household cleaners to clean the product. Because these cleaners change substance or formula too frequently. So product should be always cleaned only with soapy water and rinsing with clean water and drying with soft cloth.

Tools and equipment needed

Drill, 6mm Masonry drill bit, Philips screwdriver, Spirit level, Pencil, Tape measure.

Dimension

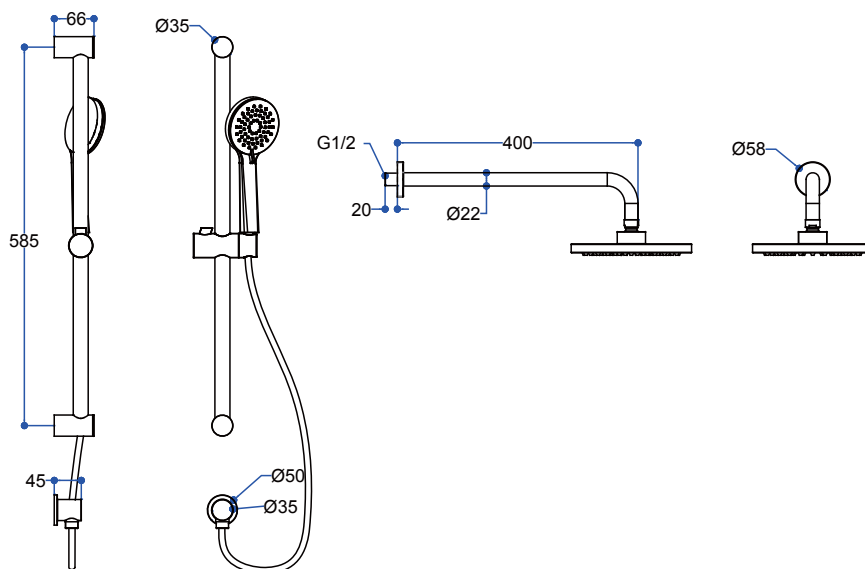

Parts supplied:

<p>1x</p>	<p>1x Washer</p>	<p>1x Slider</p>	<p>1x Hose</p>	<p>1x Shower arm</p>
	<p>1x Connector</p>	<p>1x Handshower</p>		<p>1x Shower head</p>

Installation

<p>585mm</p>				
<p>Make two hole positions about 585mm apart.</p>	<p>Drill two holes. Insert the rawl plugs, and fix the top bracket onto the wall.</p>	<p>With the slider on the riser tube, fix the riser tube into position.</p>	<p>Connect the shower kit to the outlet.</p>	