


483

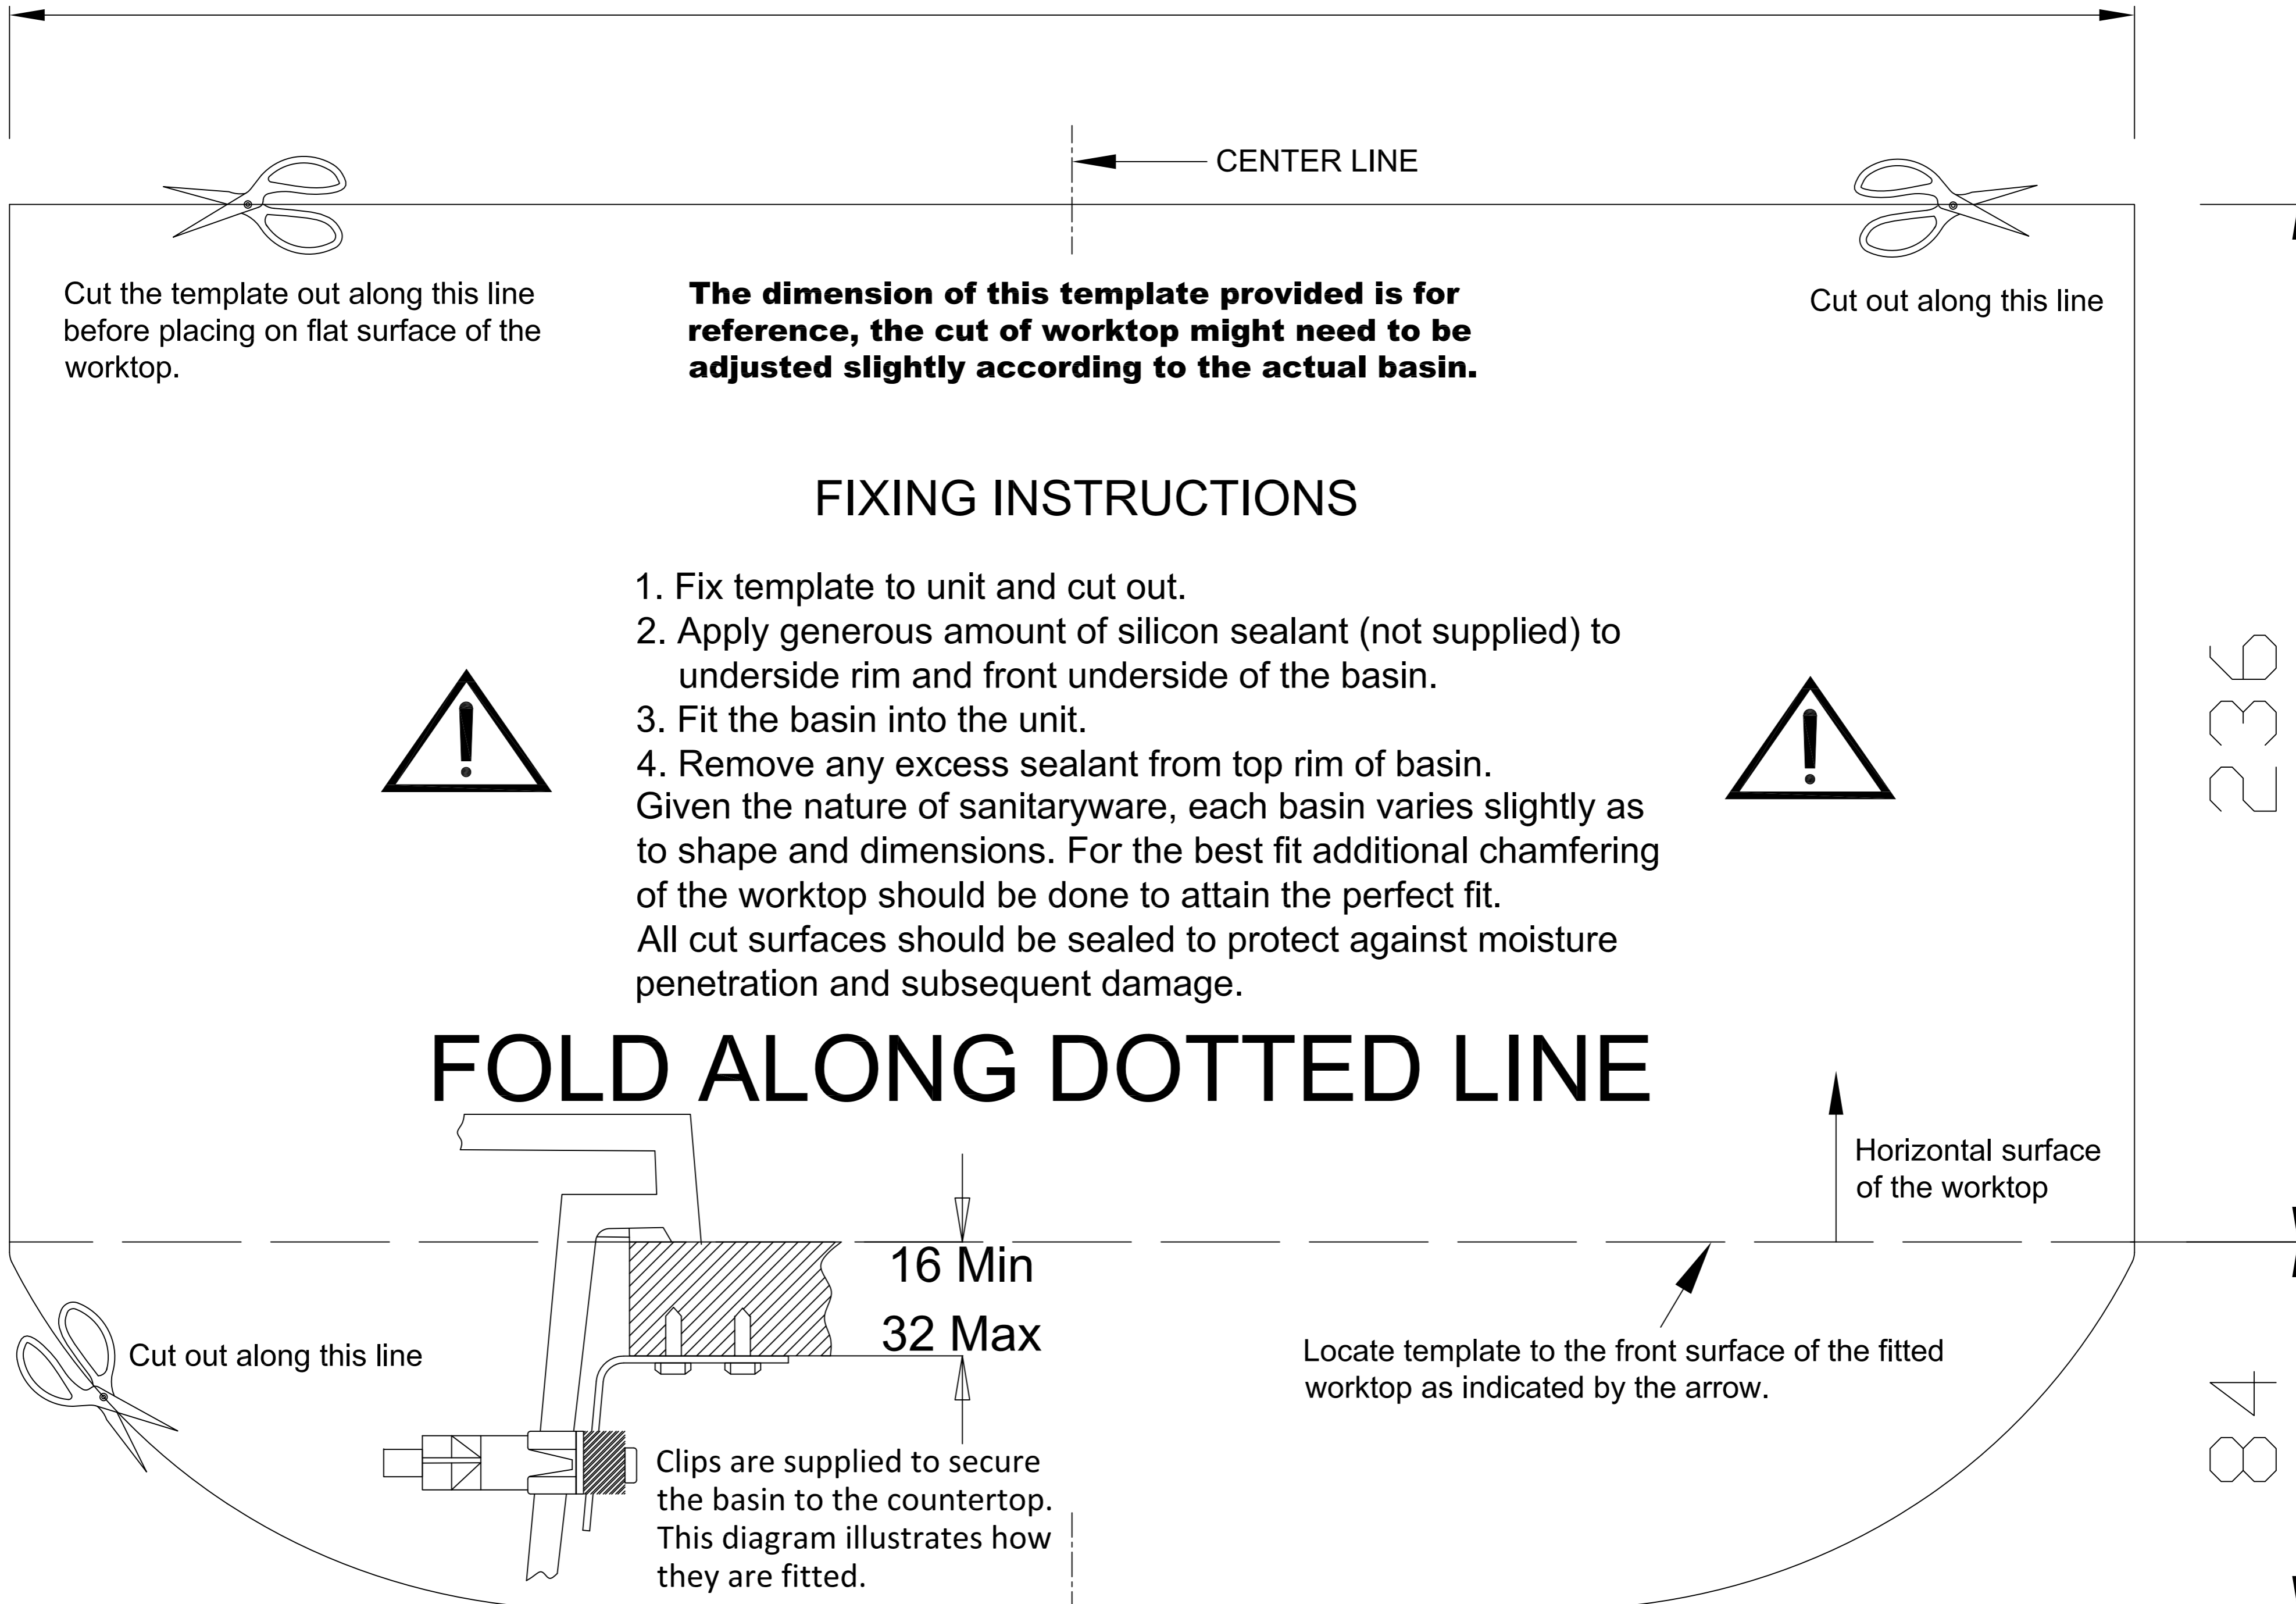



Cut the template out along this line before placing on flat surface of the worktop.

The dimension of this template provided is for reference, the cut of worktop might need to be adjusted slightly according to the actual basin.


Cut out along this line

FIXING INSTRUCTIONS

1. Fix template to unit and cut out.
 2. Apply generous amount of silicon sealant (not supplied) to underside rim and front underside of the basin.
 3. Fit the basin into the unit.
 4. Remove any excess sealant from top rim of basin.
- Given the nature of sanitaryware, each basin varies slightly as to shape and dimensions. For the best fit additional chamfering of the worktop should be done to attain the perfect fit.
All cut surfaces should be sealed to protect against moisture penetration and subsequent damage.

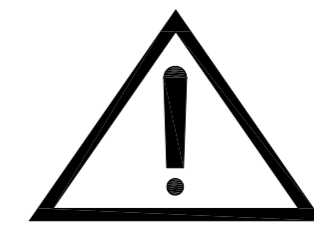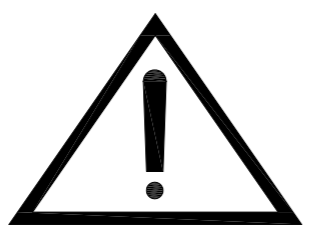

FOLD ALONG DOTTED LINE

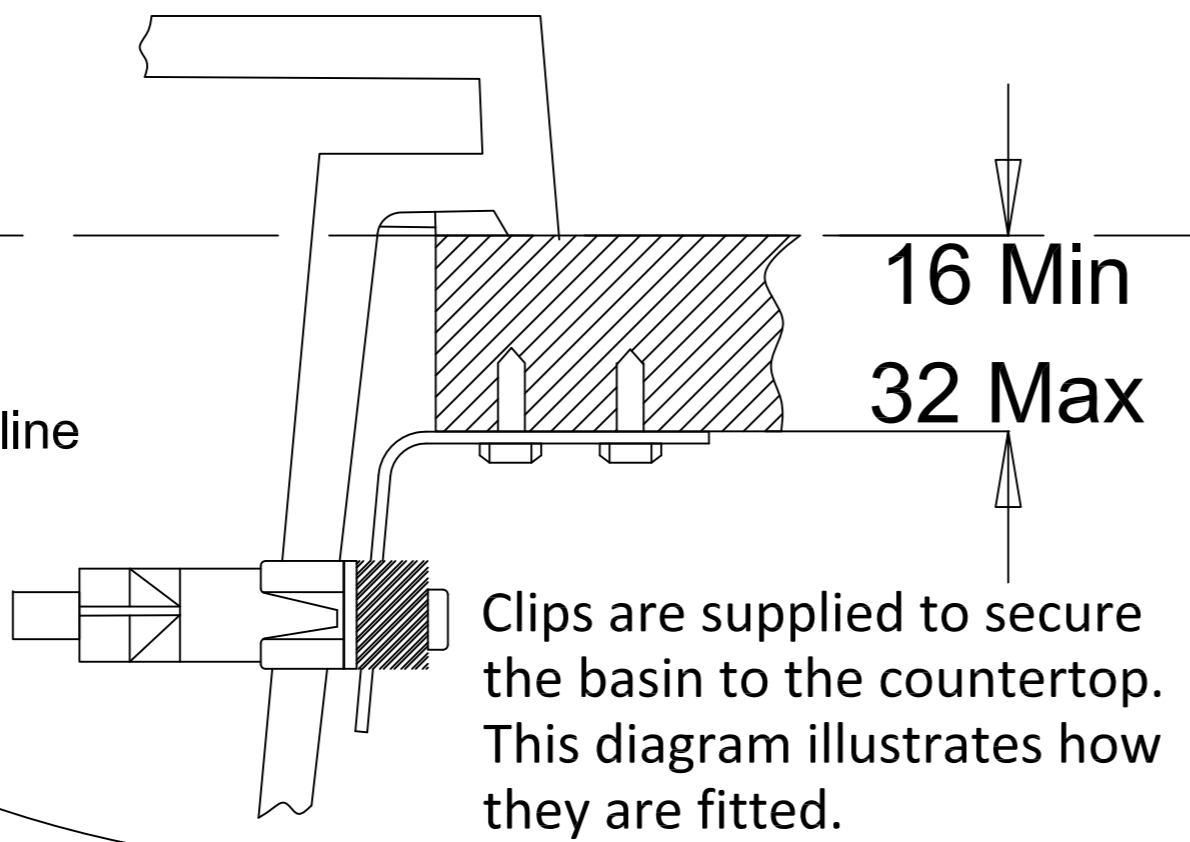

Locate template to the front surface of the fitted worktop as indicated by the arrow.

Cut out along this line

Clips are supplied to secure the basin to the countertop. This diagram illustrates how they are fitted.

TRIM.006
TRIM SEMI INSET BASIN 1TH

CENTER LINE