


Chrome Aluminium Low Level & Medium Level Cistern including lever cistern fittings T71 CHR

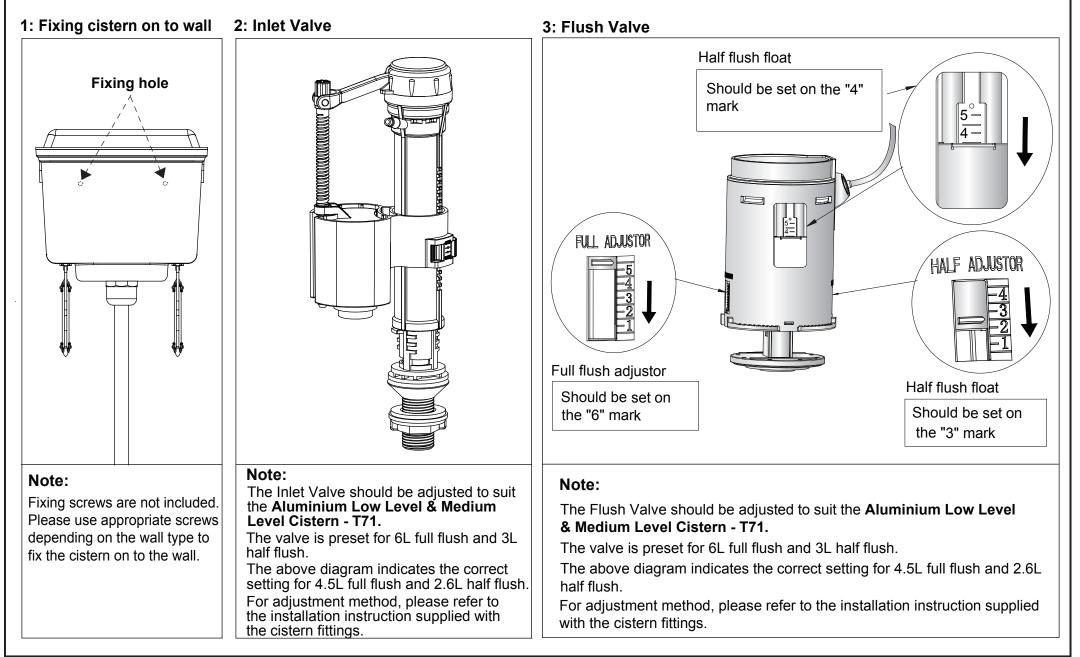

Burlington


## Assembly

- Mount the cistern securely on the wall at the height of 1100mm from the underside of the cistern to the floor using the fixing holes through the rear of the cistern (**See hint 1**).
- Use the brass fixing nut (as part of the decorative cover) to fix in the cistern fittings. Place the decorative cover and plastic fixing nut, plastic washer, Cone shaped washer (supplied as part of flush pipe kit; DO NOT use the cone washer supplied with the cistern fittings) over the top of the flush pipe and insert into the threaded siphon stem (supplied as part of the cistern fittings). Once the flush pipe is secured by the plastic fixing nut, screw the decorative cover up to the brass fixing nut.
- Insert the **flush cone washer** into the pan (supplied as part of the flush pipe kit; **DO NOT** use the **flush cone washer** supplied with the cistern fittings, this should be discarded).
- Install the pan decorative plate to the pan using the thick rubber washer, screw, rubber washer, brass washer and fixing nut.
- Insert the **buffer clip body** to the **flush pipe**.
- Insert the flush pipe into the pan via the pan decorative plate and flush cone washer.
- Locate the **buffer clip** so as to prevent collision between the seat and flush pipe. This **buffer clip** will also secure the **flush pipe** to wall by fixing the **wall bracket** upto wall.
- Mount the **ornate brackets** using the screws provided snugly under the cistern (See hint 2).

## HANDY HINT

1. When installing your cistern, ensure that the **rubber spacing washers** are used to create a small gap between the cistern back and the wall. There are two reasons for this; firstly it will help to reduce the possibility of condensation when cold mains pressure is contained within a humid environment and secondly, the gap will help prevent "thermal shock". This is when rapid temperature change occurs (usually overnight) and causes the wall to contract or expand, thus cracking the sanitaryware. When fixing the cistern to the wall it is advisable to insert the screw through a washer (not supplied) on the inside of the cistern. This will prevent the screw damaging the sanitary ware when the screw "bites".

2. **The ornate brackets are purely decorative**. They should not be used as support for the cistern. Always ensure that the cistern is firmly and securely fixed to the wall via the fixing holes at the rear of the tank.

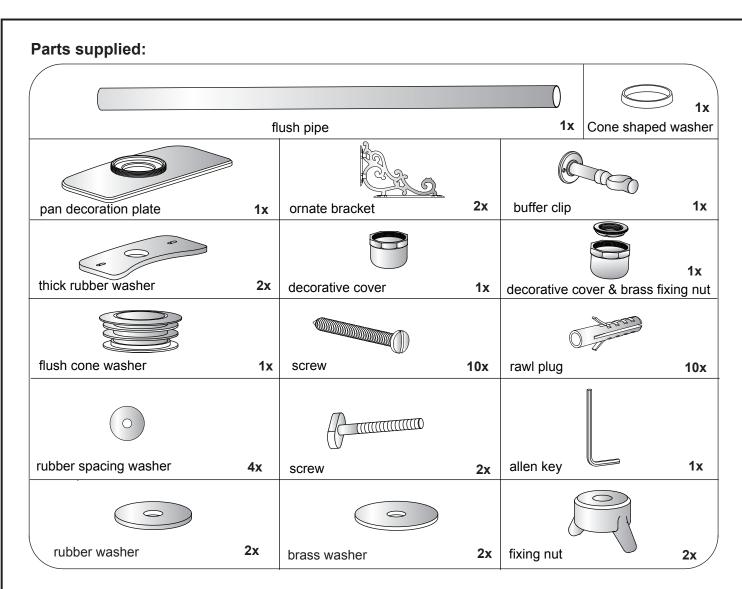

## **Cistern Fittings Installation:**

Please refer to the Cistern Fitting instructions for installation. For the lever installation please refer to the diagram below.

