

Overflow Cover Installation Instructions

Before you Begin:

- This instruction shows how to fit the overflow cover. Ensure the part is the correct size and fit in conjunction with your chosen bath.
- Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.

Item included:

Tools Required (Not Included):





Silicone Sealant

Damp Cloth

Overflow Cover (x1)


-1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 2

Ruler

Note: Diagrams are for illustration purposes only. Your Overflow Cover may superficially differ from this drawing however the installation guide steps still apply.



Pipe a fine bead of good quality silicone sealant along the backside of the overflow cover.

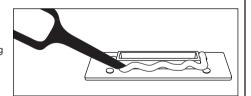


Recycling and Disposal:

 Please recycle the packaging in accordance with your local government regulations on waste handling and follow the same advice at the end of the products life.



Carefully insert the cover plate into the overflow hole on your bath.

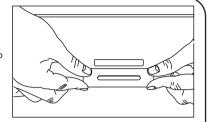




3

Use a soft damp cloth to gently wipe away any excess silicone around the overflow cover.



Use a ruler to measure the cover plate, ensure that both the left and right sides of the cover plate are the same distance to the top of the bath.

Allow 24 hours for the sealant to fully dry.

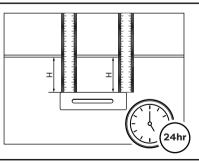

Cleaning and Aftercare:

 Warning: Do not use abrasives, scourers, bleach or any type of chemical cleaning solution when cleaning the overflow cover. It is recommended to use warm soapy water and a clean damp cloth.

For more information visit: **www.victorianplumbing.co.uk**