


## Crosshead Basin Tap Shut Off Valves

### Before you Begin:

- **We recommend that this product is installed by a qualified tradesperson,** Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in consequential damage.
- Ensure the incoming mains water supply is switched off prior to commencing the installation.
- For the following instructions, it is assumed that the in-wall/floor plumbing has already been prepared.
- Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.

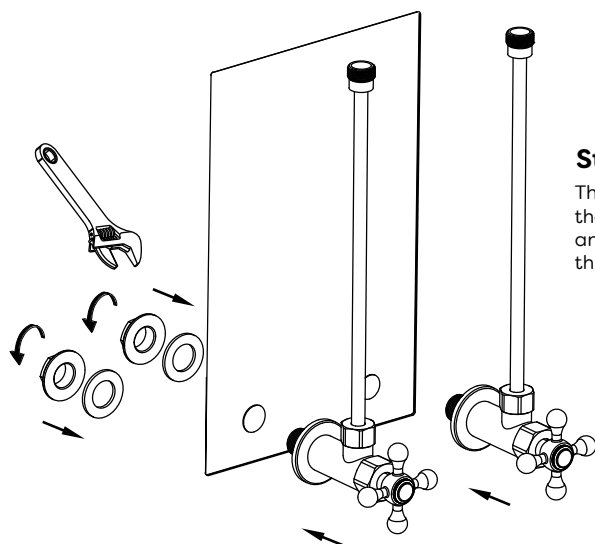

### Step 1:

Thread the two 'Valves' into the inlet holes in the wall. Secure the valves using the 'O-Rings' and 'Back Nuts'. Tighten the nuts onto the threaded tails with an adjustable wrench.

### Step 2:

Connect the hot & cold water supplies to the threaded tails. Attach the flexi-pipes from the tap(s) to the valves. Turn on the mains water supply, run the tap(s) and check all joints and connections for any leaks.

**Note:** Ensure the hot and cold water supply is installed in the correct orientation when viewed from the front.

