



Installation Guide

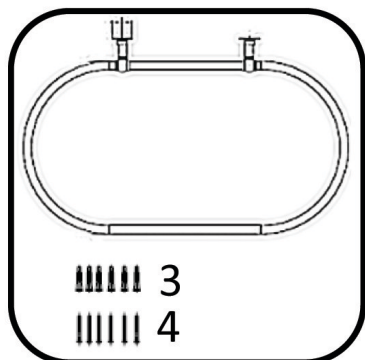

Step 1


Check the components to make sure all are included as shown in the diagram.

1. Shower Curtain Rail x 1
2. Connecting Brackets x 2
3. Rawl plug x 6
4. Screw x 6

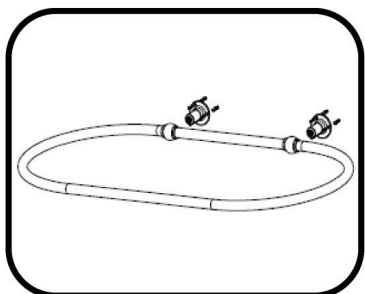


Step 2

Get the bracket mounted to the curtain rail.

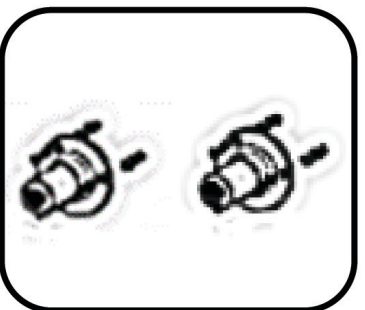

Step 3

After mounting the bracket to the curtain rail, Use the 3 screw holes on each of the Connecting Brackets as a guide to mark the wall for the 3 fixing positions. Using an appropriately sized drill bit, drill and insert the 6 rawl plugs provided.

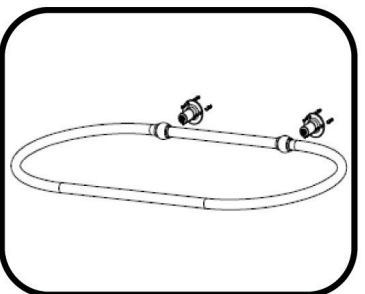

Step 4

Tighten the screws to the wall, and it's done.