


Chrome Plated Standpipes for Freestanding Baths

INSTALLATION INSTRUCTIONS

Please follow these care instructions to ensure your product retains it's high quality finish and please retain this leaflet for future reference.

Installation

1. Ensure all componants are present prior to installation
2. Place the flange in the predetermined position and mark the position of the screw holes, these should be the same distance as the tap pip centres. **Before starting the installation. Please ensure that you have checked any walls/floor before drilling for any wires/cables or water supply pipes**
3. Using an electric drill (and an appropriatley sized drill bit), drill the pre determined holes and inset rawl plugs (6)
4. Place the flange (3) over the pre-drilled holes and use screw (6) to secure
5. Screw the stright pipe (2) into the flange (3) and tighten
6. Install the G3/4" connector (1) onto the inlet pipe thread of the tap
7. To connect the inlet pipe, place the G3/4" connector (1) onto the striaght pipe (2) with the tap and secure in place with grub screw (4)
8. Check for leakages before use

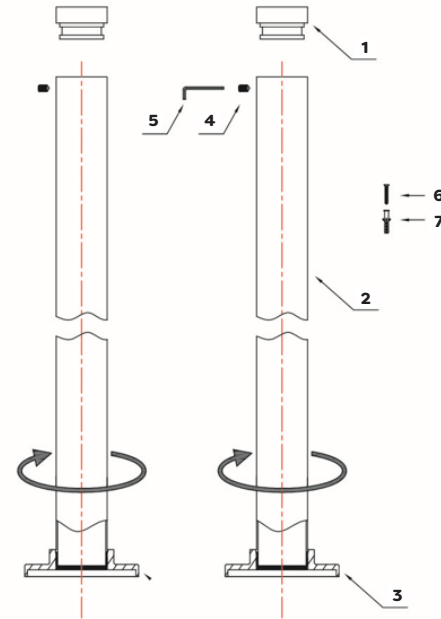

1. G3/4" Connector x2
2. Straight Pipe x2
3. Flange x2
4. Grub Screw x2
5. Allen Key
6. Screw x6
7. Rawl Plug x6

WARNING!

We recommend that this product is installed by a qualified tradesperson and we accept no liability for products fitted incorrectly, and where the correct testing procedures have not been used, resulting in the escape of water.