


Installation instructions




Thank you for purchasing this Victorian Plumbing product. Please follow these care instructions to ensure your product retains its high quality finish - **and retain this leaflet for future reference.**

1. Identify all components are present prior to installation
2. Flush pipes to get rid of any debris blocked in pipes before installation
3. Screwing body(C), Ensure washers (Items D and are in place
4. Put the overflow cover (A) into lock nut (B) in to Overflow body(C)
5. Screwing waste body (J), Ensure washers (Items H and I) and Flange (G) are in place
6. Fill the bath with water and check all joints to ensure there are no leaks, This is the best done in stages starting with a small amount of water before fully filling the bath
7. Once fitting has been completed carefully clean all plated surfaces. the finished surface on this product are hard and durable and should be cleaned on a regular basis to maintain their appearance.
They should only be cleaned with warm soapy water and then wiped with a dry cloth

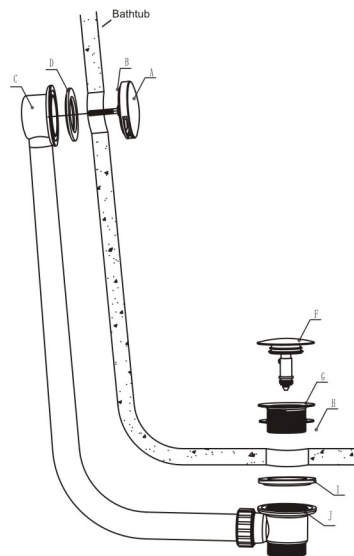

- A. Overflow cover
- B. Lock nut
- C. Overflow body
- D. Flat washer-lock nut
- F. Cover
- G. Flange
- H. Washer
- I. Washer
- J. Waste Body

Once assembled, filled the bath with water, check for leaks.

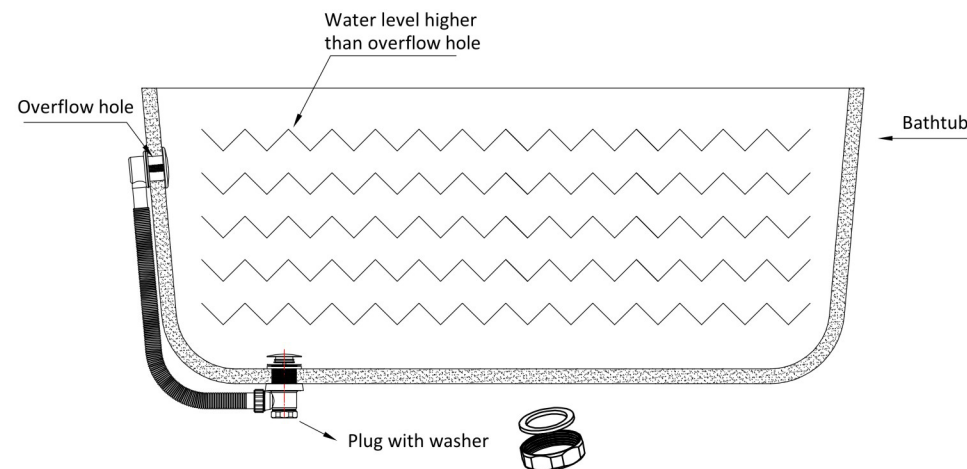

Victorian Plumbing

Diamond House. 41, Stephenson Way. Formby Business Park Formby. England. L37 8EG

Tel: 0044 800 862 0878

Website: www.victorianplumbing.co.uk