

CONTACT DETAILS

 Croydex
Central Way
Andover
Hampshire
SP10 5AW
UK

 Tel: +44 (0)1264 365881

 Email: info@croydex.co.uk

 www.croydex.com





**ALL PRODUCT DIMENSIONS DETAILED IN THIS
INSTALLATION AND MAINTENANCE MANUAL ARE
APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR
REFERENCE ONLY. COMPONENTS SUPPLIED WITH
INDIVIDUAL PRODUCTS MAY DIFFER**

Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains it's high quality finish.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

FIXING PACK

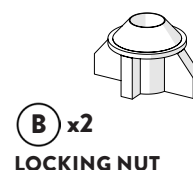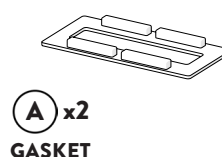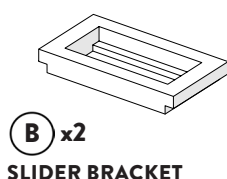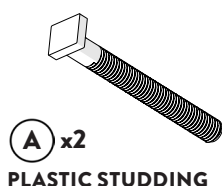


SAFETY & PRODUCT CARE

1. To retain the best quality finish, clean product with a soft cloth and a mild soap solution.
2. **DO NOT** use abrasive or chemical cleaners as they may damage the surface of the toilet seat or hinges.


FIXING INSTRUCTIONS

1. Carefully remove the existing toilet seat and clean the top surface of the WC pan.


2. Place the gaskets in position on the underside of the slider brackets. (See fig. 1)

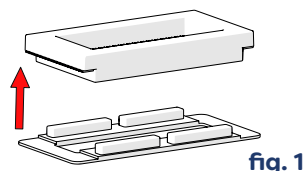


3. Remove the locking nuts from the plastic studding and assemble the studding into the slider bracket and gasket sub-assembly. (See fig. 2).
Note: Ensure the bolt head is correctly aligned in the slider bracket (See fig. 5).

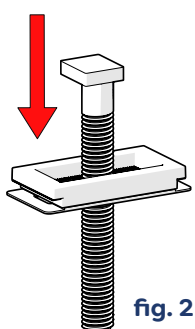


4. Locate the slider brackets into the slots on the underside of the toilet seat hinge. Align the toilet seat with the WC pan. (See fig. 3)

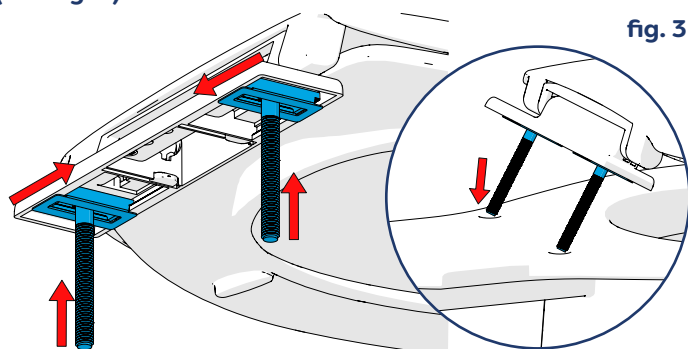

5. If you should find that the brackets do not line up with the holes in the toilet pan, simply adjust the brackets by sliding them into the correct position. (See fig. 4)

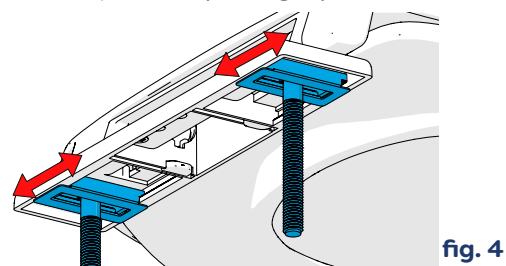

Note: Rotate the plastic studding 180° to allow for maximum or minimum hole alignment within the slider bracket (See fig. 5).

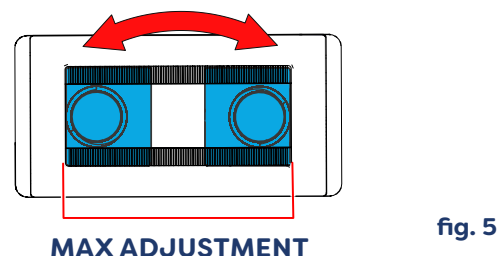

6. Once the seat is in your desired position, screw the locking nuts until the seat is firmly attached. (See fig. 6)

