
STICK N LOCK 8'6" TELESCOPIC ROD

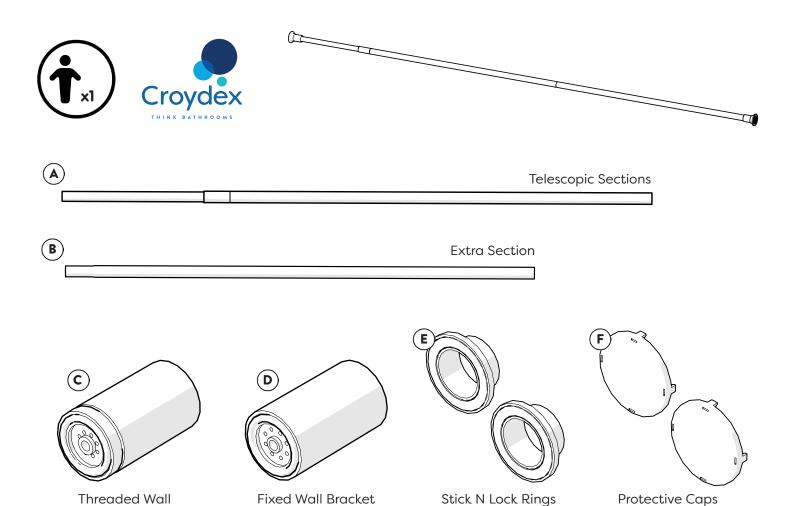

DO

- Clean the wall surfaces before mounting.

Bracket

- Extend the rod fully against the walls before locking.
- Tighten the threaded bracket to fully tension the rod.
- Ensure you are happy with the position of the rod before sticking it in place.
- Apply pressure to the Stick N Lock rings for at least 30 seconds.

DON'T

- The adhesive is **NOT** suitable for unfinished materials such as brick, block-work, wood, emulsion paint, loose, flaky surfaces or surfaces contaminated with grease, wax or dust. **DO NOT USE ON DECORATIVE WALL PAPER FINISHES.**
- Over-tighten the locking mechanism as you can damage the rod.

SAFETY AND CARE

- **1.** Do not use this product as a grab bar.
- **2.** Clean product regularly with a soft damp cloth but do not use abrasive or chemical cleaners, as these may damage the product.
- **3.** Do not overload the rail. Suitable for use with a maximum of two standard shower curtains.
- **4.** The adhesive is suitable for surfaces such as gloss paint, tiles, polished stone, laminates and textured surfaces.
- **5.** Do not use tile cleaning chemicals on or around this product as they may affect adhesion.







