




TELESCOPIC CURVED ROD

PACK CONTENTS

- (a) Screw Cap x 6
- (b) Fixing Screw x 6
- (c) Wall Plug x 6
- (d) Telescopic Curved Rod x 1

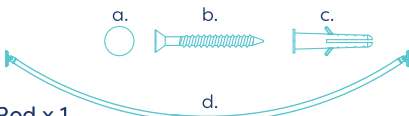

TOOLS REQUIRED

- Drill
- 5.5mm Ceramic drill bit
- Pencil
- Spirit Level
- 5.5mm Masonry drill bit
- Cross head screwdriver
- Tape measure

KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN


SAFETY AND CARE ADVICE

- 1) Always take care when using a drill, particularly in the bathroom. Always check for hidden cables and pipework before drilling and take extreme care if there is any water in the working area.
- 2) It is advisable to use a residual current circuit breaker (RCCB). Always wear suitable eye protection when drilling.
- 3) If the product is to be fitted on a ceramic tiled wall, a ceramic drill bit should be used. Always ensure that the drill hole passes through the central tiled area rather than through the grouted area. To prevent damage to the tile, mask the area around the hole with tape before drilling.
- 4) It is recommended that two people fit the rail to ensure that it is fitted safely.
- 5) Do not overload the rail. Use a maximum of two standard shower curtains.
- 6) Clean with a damp cloth.
- 7) Do not use abrasive or chemical cleaners.
- 8) Do not use this product as a grab bar.


SUGGESTED RAIL LAYOUTS

The minimum straight line distance between the wall brackets is 115cm and the maximum straight line distance between the wall brackets is 183cm, as shown by the dotted line in the suggested rail layouts below.


• STANDARD BATH (Straight Configuration)

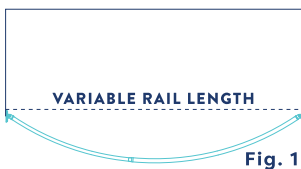

• CORNER BATH/SHOWER TRAY

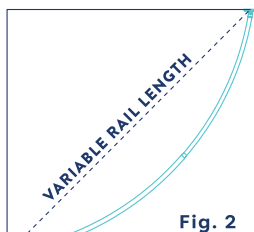


• STANDARD BATH (L-Shaped Configuration)

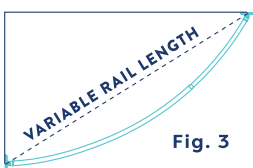

FITTING INSTRUCTIONS

- 1) Place the rail in the desired location allowing for curtain length and sufficient overlap into the bath or shower tray, extending rail to length where required.
DO NOT OVER EXTEND

- 2) Mark the positions of the mounting screw holes onto the wall surface using the holes in the wall bracket as a guide. (See Fig. 4)

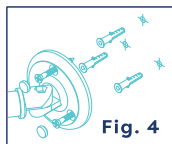

- 3) Check that the bracket hole centres are level then drill the holes in the wall using a 5.5mm masonry drill. If the product is to be fitted onto a ceramic tiled wall a ceramic drill bit should be used. Insert the wall plugs flush to the surface of the wall. If fitting to a tiled wall ensure that the wall plugs are inserted below the surface of the tile. Fix the wall brackets into position using the screws provided.

- 4) Push the screw caps into the wall bracket to hide the screw heads.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



info@croydex.co.uk
Croydex, Central Way, Andover, Hants, UK. SP10 5AW
Tel +44 (0)1264 365881 | Fax +44 (0)1264 356437
www.croydex.com