




Ensure that your pipe centres are correct for your bar valve (usually 150mm) and ensure that your tiles / wall coverings are fully sealed and cured

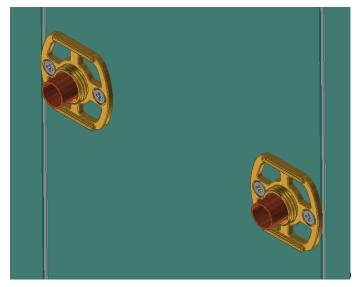

Place the backing plate over the pipe. Drill and screw the backing plate to the wall using a suitable method for your wall. Check for pipes and cables before drilling.

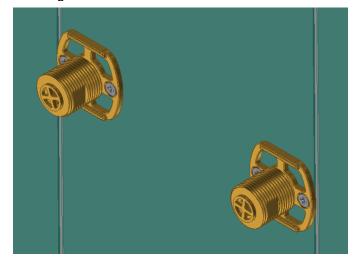


Screw the main body onto the backing plate, using an adjustable spanner to tighten. This will compress the olive and create a seal. You can now water test. the pressure will push the pads outward creating a seal.

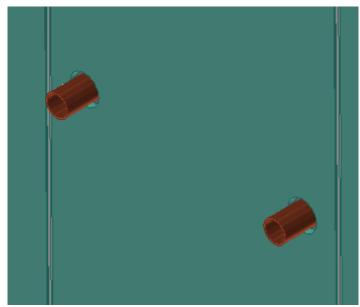


Cut the pipes down leaving 19mm protruding from the face of the wall. Do not leave any sharp edges or burrs on the pipes.




Place the olives onto the pipes

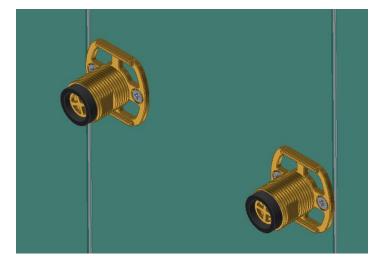

Place the washers on to the main body

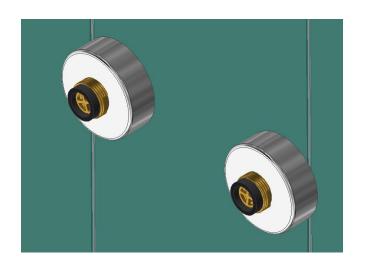

Screw your shrouds onto the main body, back to the wall.

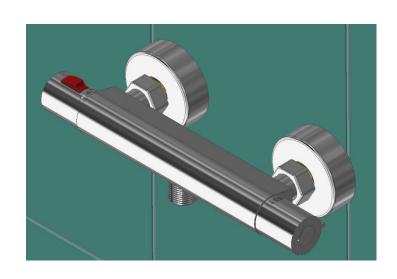

Screw your bar valve onto the easy fix kits. Water test again.