ENDON® Matson Wall Light INSTRUCTION MANUAL

Safety Warnings

- This product is only suitable for connection to 240V~50Hz supply, indoor use only and is not suitable for a Bathroom location.
- Before installing your light fitting always switch off the mains supply and remove the appropriate fuse or switch off the appropriate circuit breaker before commencing installation.
- This product is a Class I product, and <u>must</u> be connected to Earth. The terminal blocks are supplied according to requirements of the fitting.
- If you are in any doubt about your competence please consult a qualified electrician.
- If any modification is made it will invalidate the warranty and may render the product unsafe.
- This products contains non-replaceable LEDs. It is advised to not stare directly into the beam.

Care Information

Allow 10 minutes to cool before adjusting or cleaning. Clean with a dry cloth only. Do not use liquid or abrasive cleaners on this product.

Assembly/ User Instructions

Before you start

Please read these instructions carefully before fitting and retain for reference.

Check the packaging and make sure that you have all the required parts.

Follow each assembly step in order to prevent incorrect assembly.

Ensure that the product is fully assembled as illustrated before use.

The Light pack contains:

Light fitting. Terminal connection block(s). Fixing pack. The following tools may be required:


Selection of cross and flat head screwdrivers. Electric drill and assorted drill bits. Wire strippers. Electrical insulation tape.

These assembly diagrams are intended as a guide – if in doubt consult a qualified electrician.

- 1. Decide on the position of the light fitting / or remove existing light fitting. Take a note of the position of the electrical connections. Ensure there is a solid mounting surface, preferably a wooden joist or joist bridge to support the weight of the light fitting.
- Remove the two side screws (4) and retain the screws for re-use. Use the fixing bracket as a template to
 mark the screw holes. Mark the screw holes and secure to the wall with appropriate screw fixings (1), making
 sure the bracket is horizontal.
- 3. Slide the glass diffuser (2), behind the metal band so that the metal tabs line up with the holes in the backplate. Secure in place using the thumbscrews.
- 4. Support your fitting and connect the house wiring to the terminal block (3). When you are sure of the connections wrap the Terminal Block and overlap the wiring both sides with 2 layers of insulation tape. **NOTE: This is a Class I fitting and must be earthed**.
- 5. Secure the back-plate over the bracket by using the screws (4) removed in Point 2.
- 6. Turn on the power and test.



Assembly/ User Instructions Continued

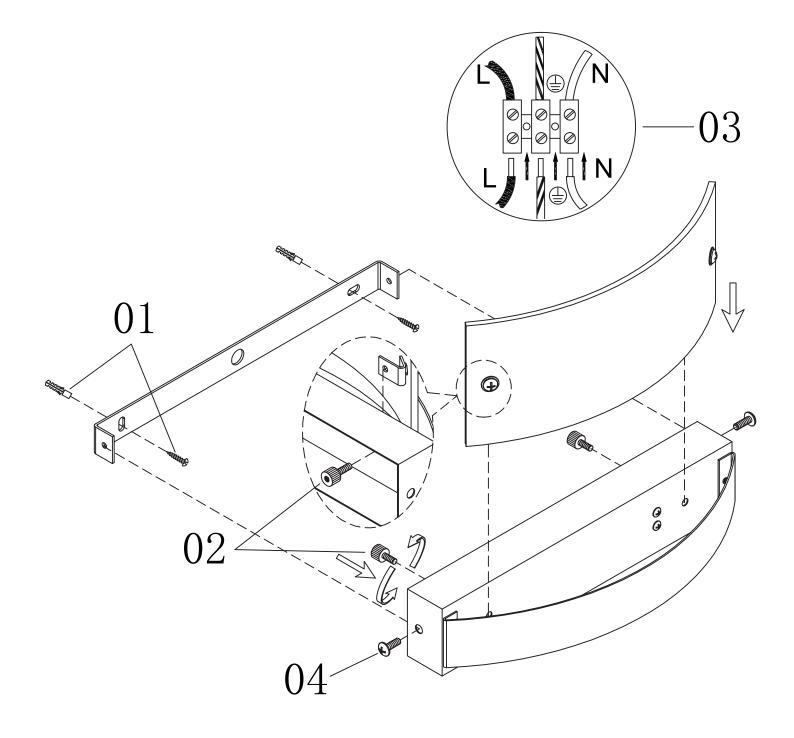



Endon Lighting, LS9 0SE