

Installation Advice

HERITAGE[®]
BATHROOMS


Fitting a Panel to the Shower bath

Thank you for selecting a HERITAGE product. Please remove the protective film that covers the product and inspect the finish & quality thoroughly prior to installation. Damaged goods CANNOT be replaced once installed. We advise, as a matter of best practice, that the internal drilled face of the waste hole be smeared with silicone sealant prior to installing the waste.

Contents


Pack Contents:

- | | | |
|----|-------------------|-----------|
| 1. | Spring clips | (x5) |
| 2. | Short Pozi Screws | (x5) |
| 3. | Long Pozi Screws | (x10) |
| 4. | Wooden blocks | (x5) |
| 5. | Adhesive tape | (1 metre) |
| 6. | Legs | (x6) |

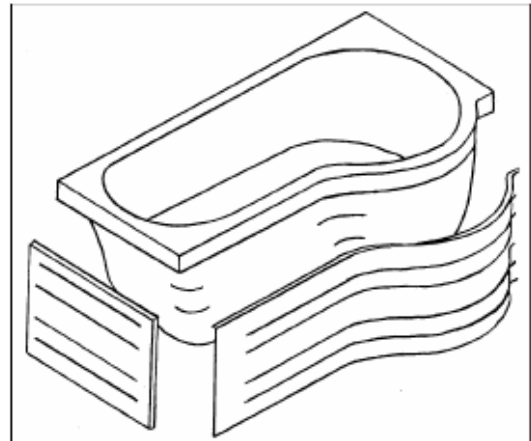

Instruction

1. Fasten the spring clips at equal intervals along the underside of the bath using 6 x 13 screws. Note: clips are pre fitted to all trays except for walk in version.
2. Fasten wooden blocks that support the panel to the floor, ensuring the panel can be located to the spring clips.
3. Apply a small adhesive strip to the front of the wooden block to secure panel.
4. Secure the panel in to position, making sure its located in the spring clip on the underside of the bath and to the underside of the lip on the wooden block (see diagram below).
5. Apply a small amount of pressure to bond the adhesive to the panel.

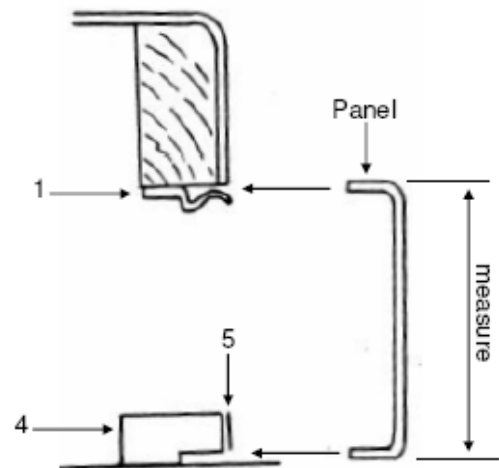

Note: It is also possible to secure the bottom of the panel using screws and plastic caps (not supplied)

25
YEAR
ANNIVERSARY

Need Help? Contact Heritage Technical Department:
Tel: 0844 701 8503 Email: technical@heritagebathrooms.com