

### **Back-to wall WC**

## **Fitting Instructions**





Before starting any installation project please consider the following: Prior to drilling into walls, check there are no hidden electrical wires or cables or water supply pipes with the aid of an electrical detector. If you use power tools do not forget:


- Wear eye protection
- Unplug equipment after use





# HERITAGE®

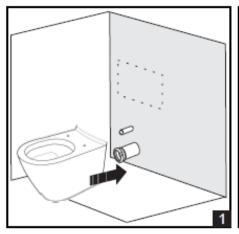


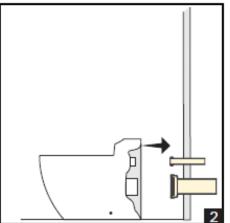


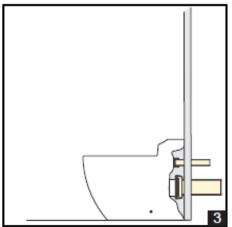


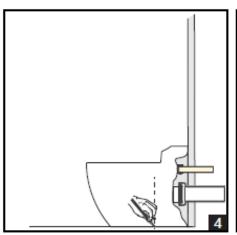


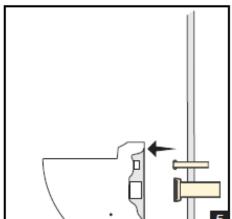

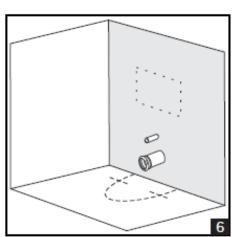

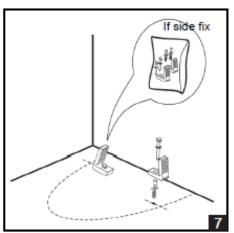

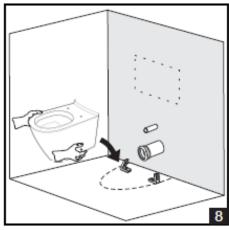

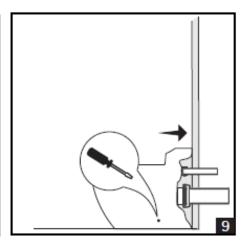



If not side fixing – use appropriate foot fixing (NOT SUPPLIED).



Notes.





#### Aftercare Instructions.

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way to clean your product, is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids can damage the surface of your fitting even the non-scratch cleaners.

#### Guarantee.

All products are manufactured to the highest standards and a 25-year guarantee covers any defect in manufacture.

#### **Contact Details.**

If you require further assistance please contact Heritage Sales and Technical Enquiries:

Sales: 0844 701 8501 Technical: 0844 701 8503

Email: <u>Technical@heritagebathrooms.com</u>

Website: www.heritagebathrooms.com

Heritage Bathrooms Unit 6 Albert Road St Philips Central Bristol BS2 OXJ

