

Installation Guide

Curtain Rail Bath screen

Important

Please familiarise yourself with the fitting instructions before commencing fitting.

- 1 Check that you have the tools required
- 2 Check that the installation site is compatible
with size of screen supplied
- 3 Check all the components
- 4 Check that the installation kit is complete


DO NOT attempt to install the product unless you can tick **ALL 4** boxed as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or "stud - partition" walls will require alternative fixings. Please consult a hardware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect fitting area before fitting. No claims will be accepted after product had been installed.

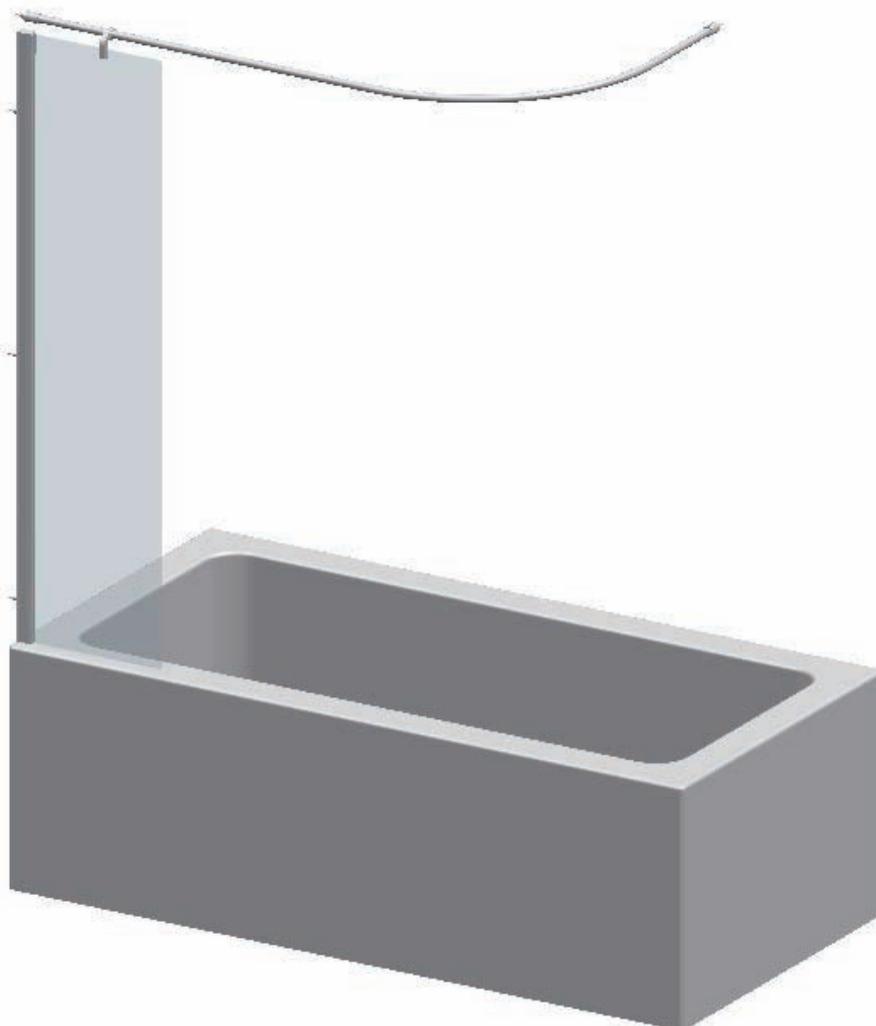

COMPONENTS AND BOX CONTENTS

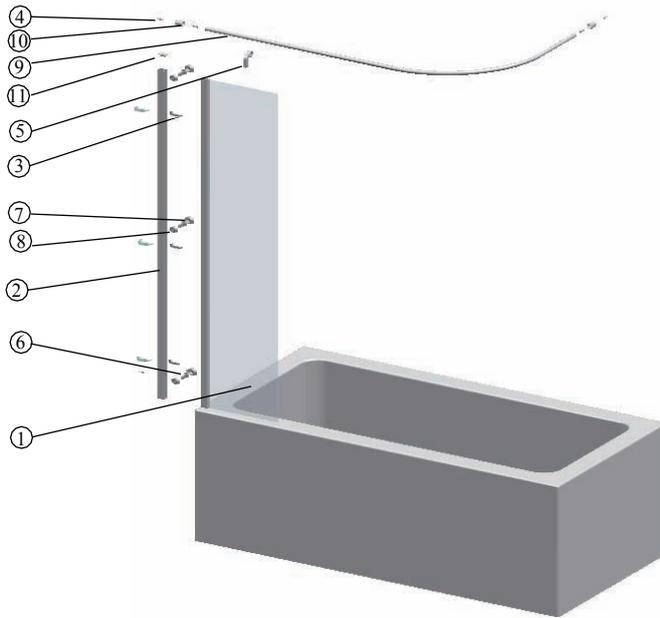


No.	Description	Qty	Part No.	No.	Description	Qty	Part No.
1	Glass Panel	1	A	7	Screw Cover Cap	3	2SS008
2	Wall Profile	1	LR8387C	8	Screw Cover Cap Clip	3	2SS009
3	Screw(3.9 x 30mm)	5	2SY51	9	Rail	1	MOBY018
4	Wall Plug	5	2SP12	10	Wall brackets S035C X 2	2	S035C
5	Glass Bracket	1	S033C	11	Wall profile cover	2	MOBY002L/R
6	Screw (4x16mm)	3	2SY50				

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Fixing Kit components

parts shown are not to scale

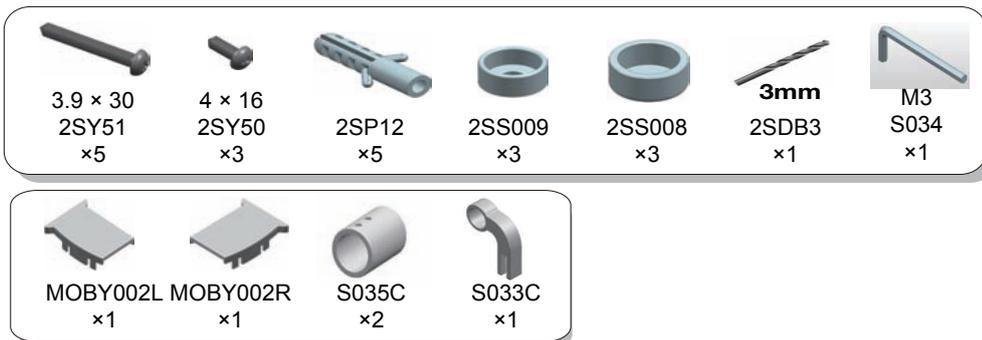

Tools required



- 6mm Masonry drill bit
- Power drill
- Quality silicone
- Pencil
- **Tape measure**
- #2 Phillips head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation Site

1. Ensure your bath is level before fitting. This screen is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.
2. The tiling or other wall finishing should be effectively sealed at the bath edges.



INSTALLATION

1. Step the wall profile in from the outside edge of the bath. Plumb the wall profiles **LR8387C** using the vertical element of the spirit level.

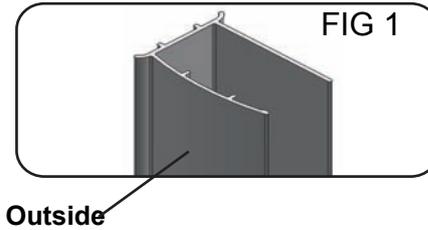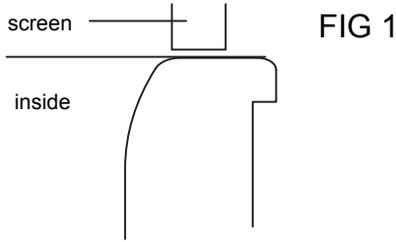

2. Mark 3 holes, drill with 6mm masonry bit and fit wall plugs **2SP12**. Using the 3 Screw **2SY51**, fix wall profile to wall. Fig 2.
3. Insert the fixed panel A into the wall profile **LR8387C**.
4. Once you have checked that the fixed panel is seated correctly onto the bath and into the wall profile drill three holes through both the wall profile and frame, using 3mm drill bit. Using the Screws **2SY50**, and screw cover caps **2SS008** and screw cover caps clips **2SS009**, fix the upright to the wall profile in 3 places. Fig 2.



NOTE: Only silicone the wall profile after fixing to the wall (see sealing section). Do not silicone on the back of the wall profile before fixing to the wall.

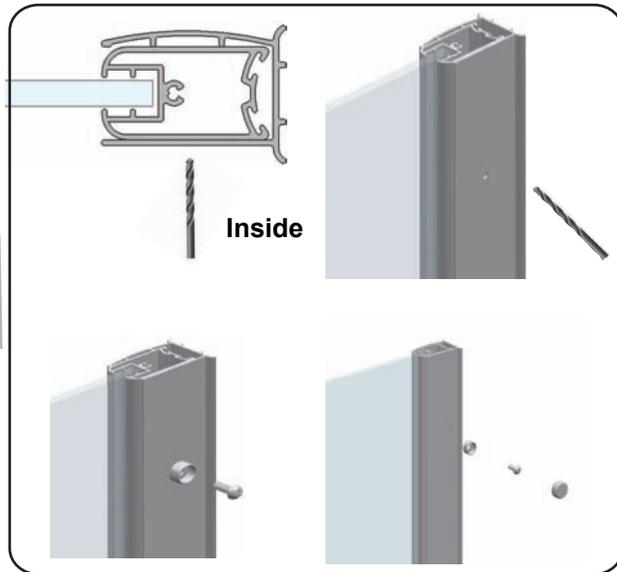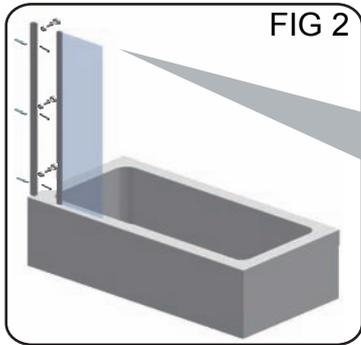




5. Insert the glass bracket **S033C** onto the long side of the rail and position towards the end of the glass panel. Insert the wall bracket **S035C** onto both ends of the rail. Level the rail and mark the fixing points to the wall.

NOTE: Cut rail to size if required. DO NOT CUT TOO SHORT.



Use 6mm masonry bit and then insert the 2 wall plugs **2SP12** and fix the wall brackets to the wall with screws **2SY51**. Fig 3.

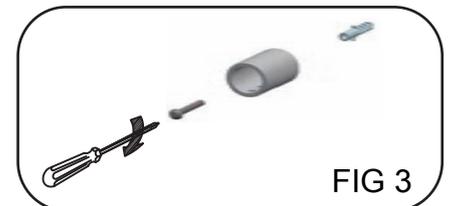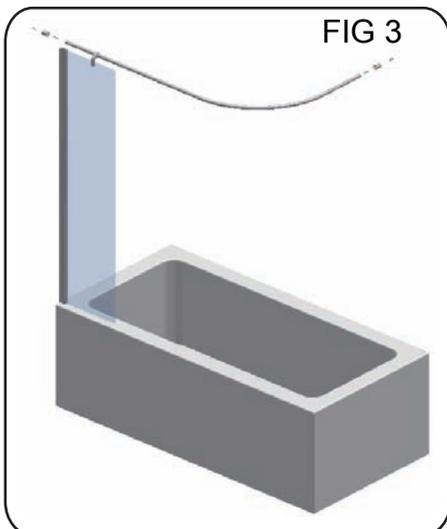

6. Insert rail into the wall bracket and tighten grub screws. Tighten glass bracket onto the glass.
 Note: fix approx 50mm from the end of the glass panel. Fig 4.

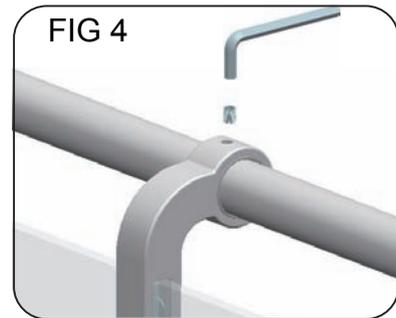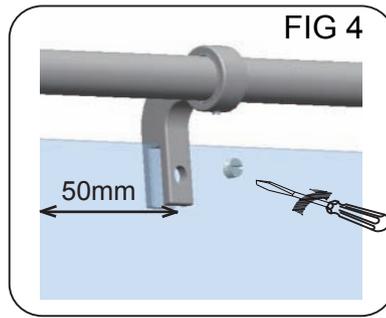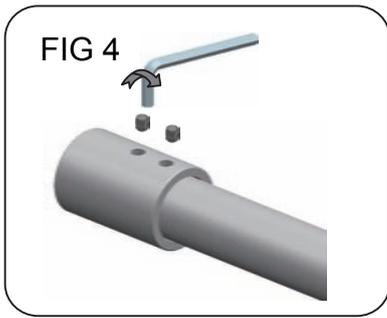


8. Fix the wall profile cover MOBY002L/R. FIG 5

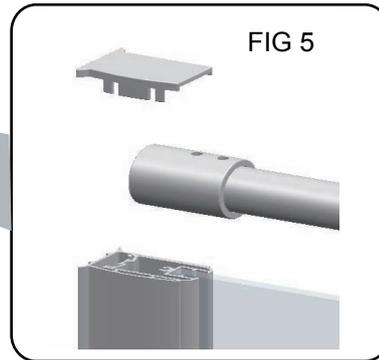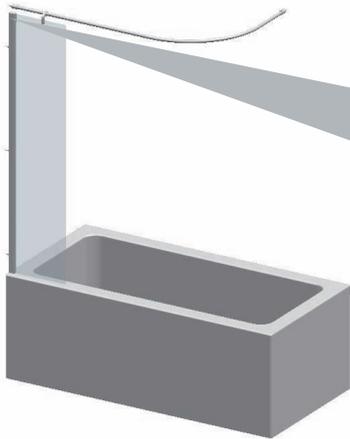

Sealing. Fig 6A


Inside (dashed line)

When installation is complete seal the joint between the wall profile and the wall, top to bottom on the inside only. DO NOT SEAL where the wall profile sits on the Bath.

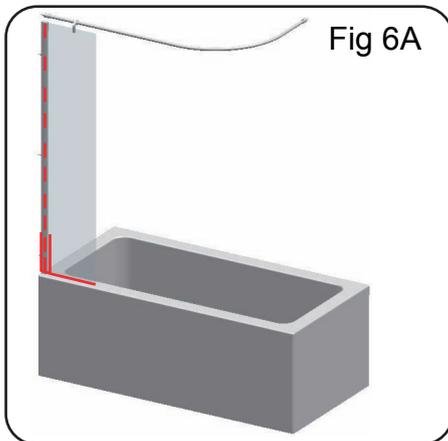

Outside (full line) Fig 6B

From outside the screen, SEAL where the wall profile and fixed panel sit on the bath. Seal 50mm up where the wall profile meets the wall and where the fixed panel and the wall profile over lap.

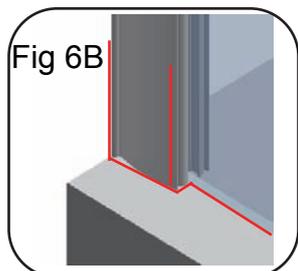

DO NOT USE FOR 24 HOURS AFTER SEALING