
Installation instructions



Thank you for purchasing this Victorian Plumbing product. Please follow these care instructions to ensure your product retains its high quality finish

- and retain this leaflet for future reference.
- 1. Identify all components are present prior to installation
- 2. Place the fixed base(4) in the position predetermined for mounting and mark the position of screw hole
- 3. Drill the hole where marked and put plastic pipe(3) into hole
- 4. Install the fixed base(4) and screw (2) firmly
- 5. Place the toilet paper holder(1)in the fixed base(4)and secure with the grub screw using the allen key

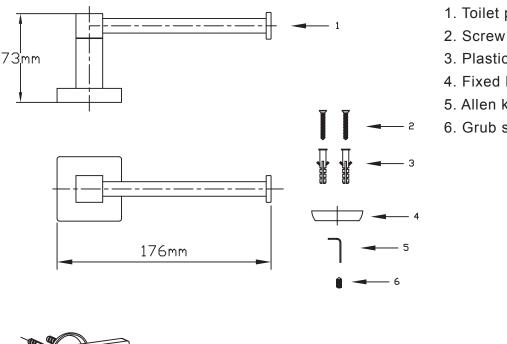

- 1. Toilet paper holder
- 3. Plastic pipe
- 4. Fixed base
- 5. Allen key
- 6. Grub screw

Victorian Plumbing

Diamond House. 41, Stephenson Way. Formby Business Park Formby. England. L37 8EG

Tel: 0044 800 862 0878