



# WCS002 P.M BTW WC SHROUD & BASIN COMBINATION INSTRUCTION

THIS PRODUCT MUST BE FITTED BY A QUALIFIED INSTALLER IN ACCORDANCE WITH THE CURRENT WATER SUPPLY REGULATIONS

## **PARTS SUPPLIED**

- 1. WC & BASIN SHROUD X 1
- 2. FIXING SCREWS X 2
- 3. WALL PLUGS X 2

ALL OTHER PARTS ARE FOR ILLUSTRATION PURPOSES ONLY AND ARE NOT SUPPLIED. THESE CAN BE ORDERED SEPARATELY

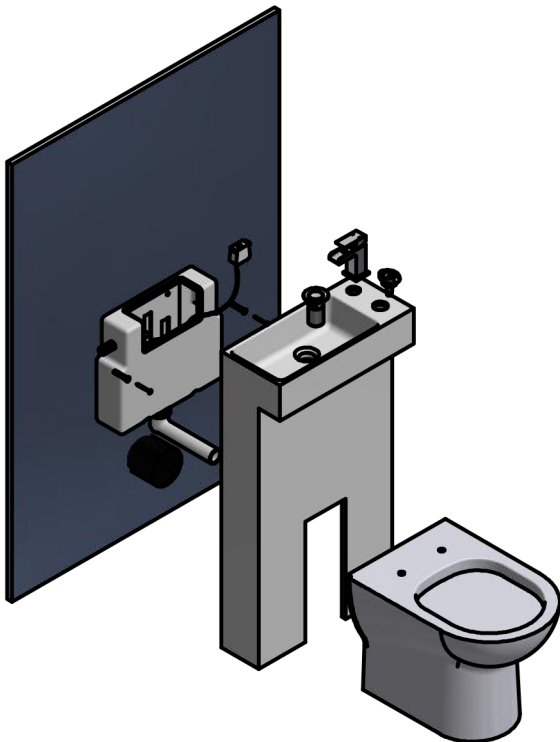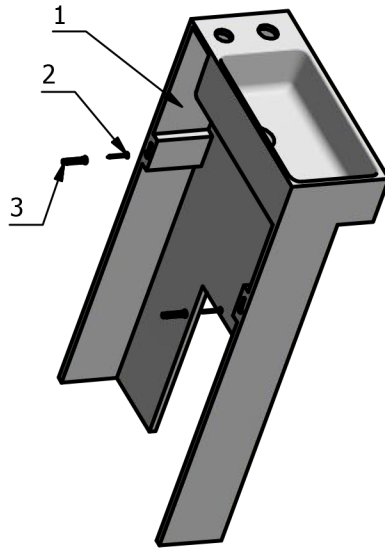

**1.** MEASURE AND MARK THE POSITION OF THE KEY HOLE BRACKETS ON THE WALL WHERE THE SHROUD IS TO BE INSTALLED.

**2.** DRILL AND PLUG THE WALL FOR THE SCREWS , LEAVING ENOUGH OF THE HEAD SHOWING SO THE SHROUD CAN BE HOOKED ON TO HOLD IT BACK TO THE WALL.

**3.** FIX THE CONCEALED CISTERN (SLCC001) AND ALL OTHER ANCILLARY PRODUCTS AT THIS STAGE (USING FLEXI PIPES AND COUPLINGS) . IT IS ESSENTIAL THAT AN UNSLOTTED OPEN WASTE IS USED, ENSURE THAT THE WASTE WATER IS ENTERING THE CISTERN.



**4.** CONNECT THE FLEXI HOSES FROM THE TAP TO THE WATER SUPPLY, AND THE CISTERN PUSH BUTTON TO THE CABLE BLOCK (CHECK FOR ANY LEAKS AT THIS STAGE), PUSH THE SHROUD BACK TO THE WALL ENSURING THAT IT IS HELD IN POSITION USING THE SCREWS AND KEY HOLE BRACKETS.

**5.** FINALLY CONNECT THE WC TO THE FLUSH PIPE AND OUTLET CONNECTIONS, CHECK FOR LEAKS.