


Fitting Guide

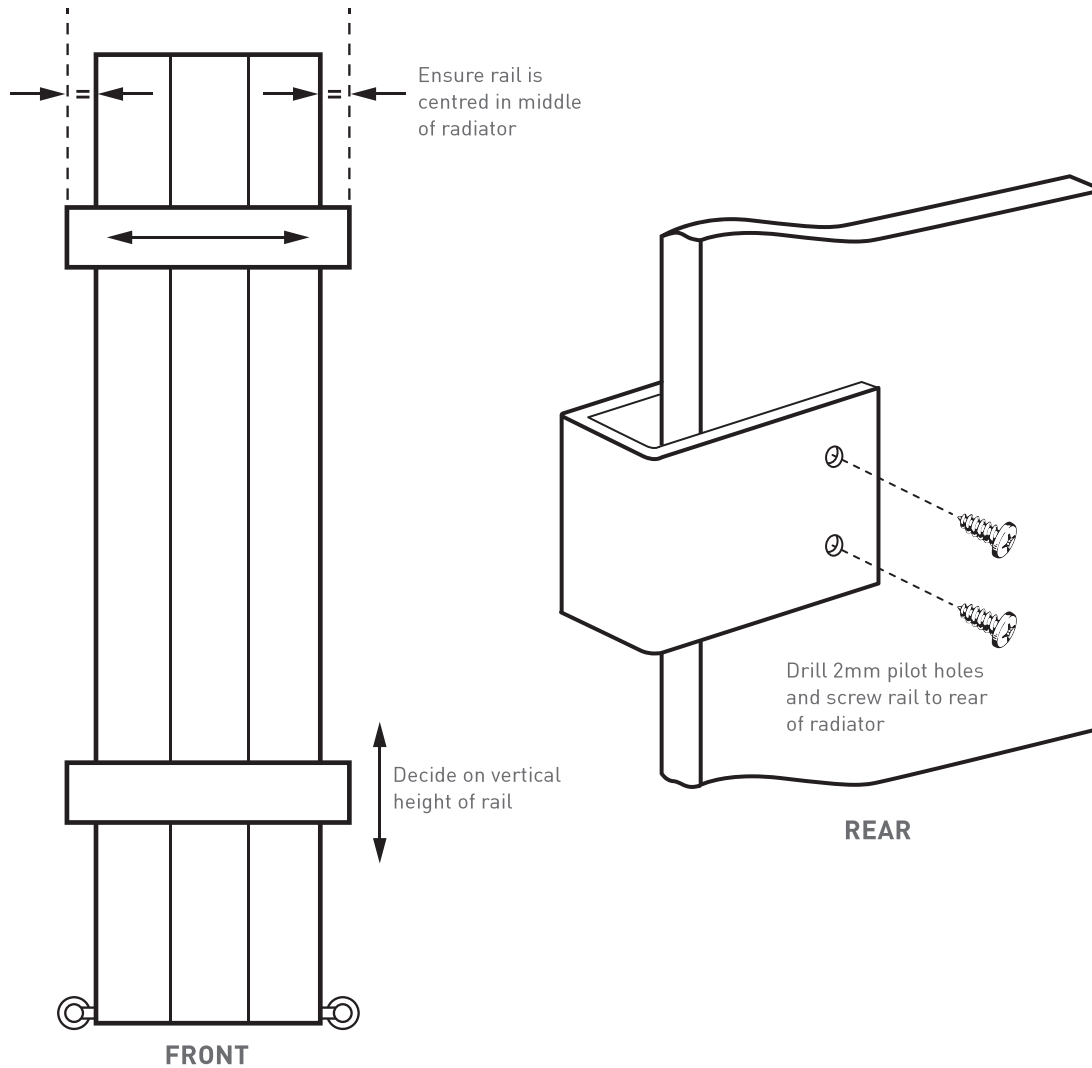

- Decide on height position of rail/rails vertically on your radiator.
- Ensure that the rail will be centred in the middle of the radiator horizontally.
- Using the holes in the rails as guides, drill a 2mm pilot hole in the rear of the radiator - These models have hollow front panels, no liquids are contained in the panels.
- Screw the self tapping screws (supplied) through the rail holes to secure it to the radiator, ensuring that the screws do not protrude through the front of the panel.
- Ensure screws are tight.
- Hang your towels onto the front of the rail.

Information:

Guarantee/Aftercare: During installation extra care must be taken to avoid damaging the fittings. We provide a guarantee against faulty manufacture or materials (excluding serviceable parts), providing they have been installed, cared for and used in accordance with our instructions and good plumbing practice.

Finishes:



Chrome