


ERSSQ - BATH SCREEN INSTALLATION GUIDE

PACKING LIST: Please carefully check the packing list to ensure that all parts are included before proceeding with the assembly.

GLASS BATH SCREEN	x 1
BATH SCREEN HINGES	x 2
VERTICAL WATER SEAL (1400mm)	x 1
BOTTOM WATER SEAL (765mm)	x 1
WALL PLUGS	x 4
30mm x 4mm SCREWS C/SUNK	x 4

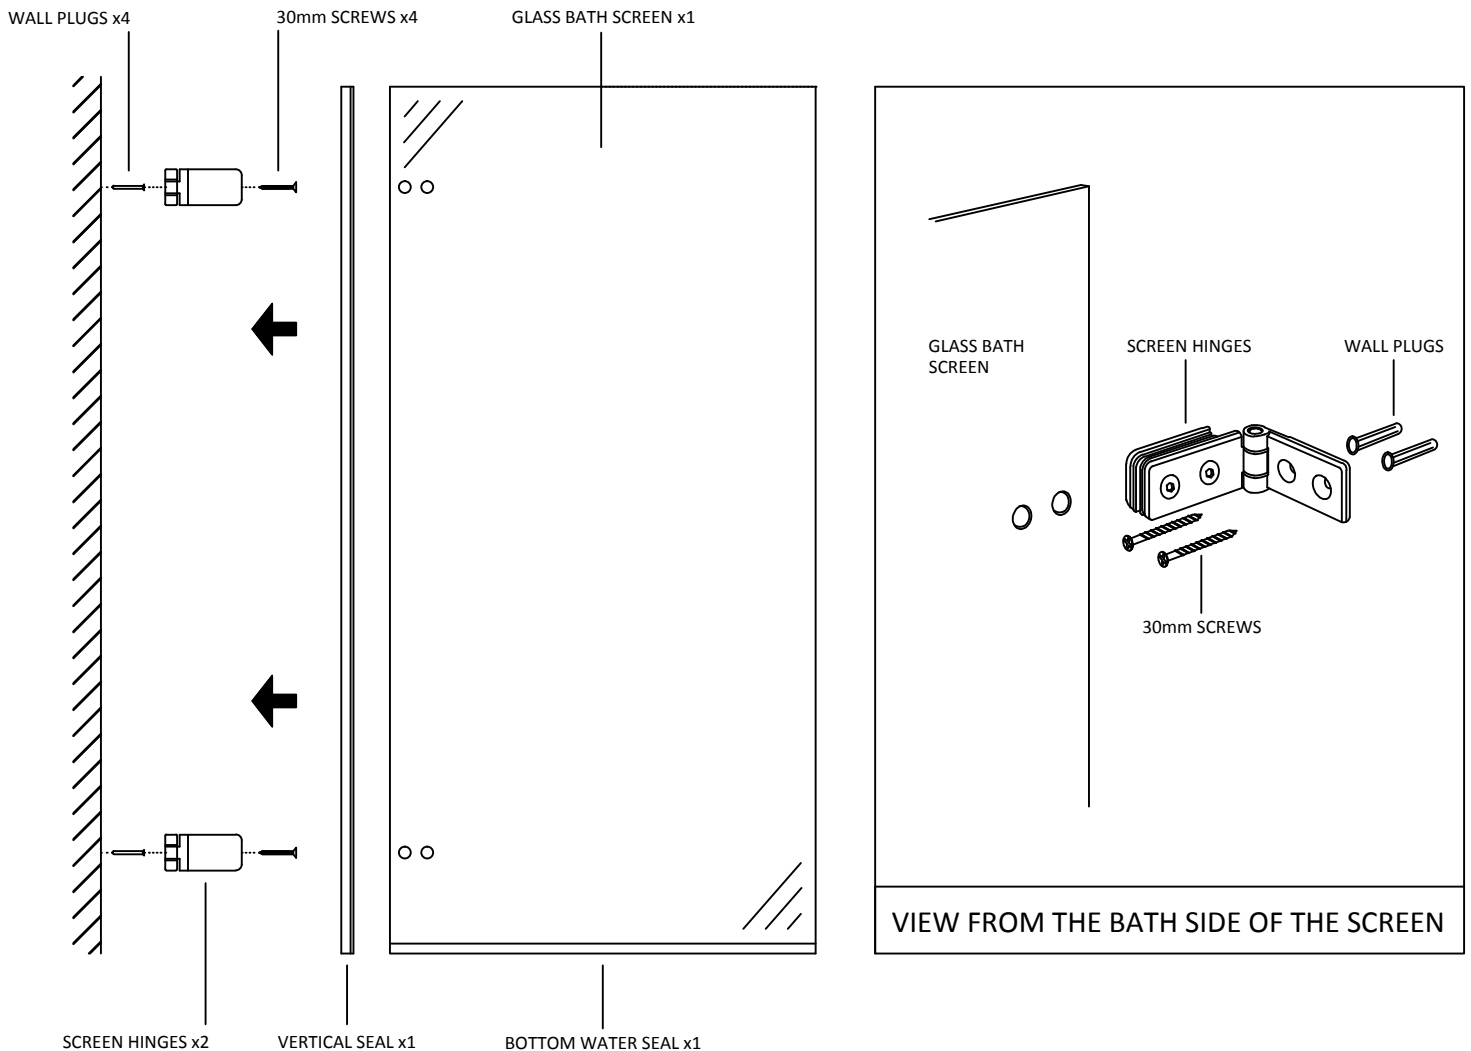

NOTE! ENSURE THAT THE WALL TO WHICH THE SCREEN IS TO BE FITTED IS PLUMB.

INSTALLATION STEPS:

1. Remove the Allen key screws from the bath screen hinge and locate the hinge onto the glass screen.
2. Replace the Allen key screws and gently tighten.
3. Position the Bath Screen 10mm from the top edge of the bath and mark the fixing hole centres on the wall.
4. Using a 4mm masonry drill bit, drill 4 x 35mm deep holes in the marked screw positions on the wall.
5. Insert the 4 x wall plugs into the holes. Using a hammer knock them in until they are flush with the wall.
6. Attach the bath screen hinges to the wall using 4 x 30mm screws supplied.
7. A small amount of adjustment can be made within the hinge by slackening off the Allen key screws, and re-tightening once in the desired position.
8. Fit the bottom water seal to lower edge of Screen.
9. Finally, fit the vertical water seal to the inside edge of the glass screen.

AFTERCARE - ENSURE YOU CLEAN YOUR PRODUCT USING A MILD DETERGENT DILUTED IN WATER, REMOVING ANY RESIDUE WITH A SOFT DAMP CLOTH.
MAINTENANCE - ENSURE MOVING PARTS ARE FREE FROM ANY DEBRIS OR SOAP BUILD UP.

Assembly Instructions

Instructions for installing the bath and the panel

List of elements:

- 1. Bath - 1 item
- 2. Frame rails - 2 items
- 3. Wood screws - 12 items
- 4. Bath legs - 4 pieces
- 5. Leg nuts - 12 items


- 6. Foot with thread - 4 items
- 7. Foot stabilization stand - 4 items
- 8. Wall plugs - 4 items
- 9. Wall brackets - 4 items

For mounting the casing:

- 10. Panel - 1 item
- 11. Mounting clips - 8 items
- 12. Wall plugs - 4 items
- 13. Wood screws - 12 items
- 14. Floor screws - 4 items

Bath installation on the base:

- 1) Base
- 2) Stand



Before You Start.

- Read these instructions carefully.
- Check the pack & make sure you have all parts listed. If not, contact your supplier who will be able to help you.
- When ready to start, ensure that you have all the right tools to hand, plenty of space & a clean dry area for assembly.
- Remove packing & protective film & inspect product prior to the commencement of assembly. Any damages found must be reported to the product supplier immediately.
- Remove & discard any transportation screws as they are not required for installation.

It is recommended that when the bath needs turning 2 people should carry out his operation.

Fitting Instructions:

- Turn the bath over so it is sitting on the top face. Ensure that the top face is protected so it cannot be scratched or damaged.

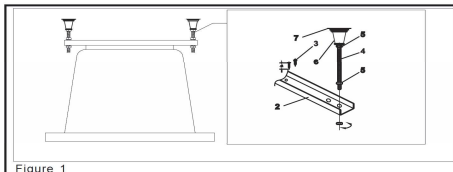


Figure 1

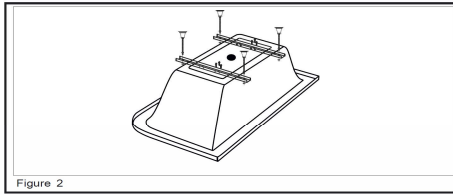


Figure 2

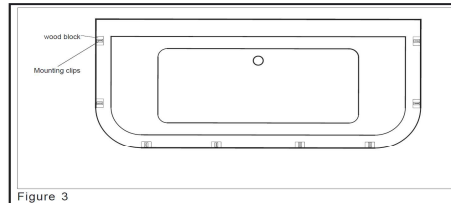


Figure 3


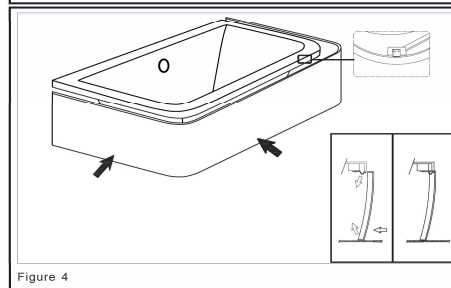


Figure 4


1. Place the bath as in Figure 2. Mount rails (2) to the bath bottom using wood screws (3) Then screw down legs (4). The rails spacing should ensure stability of the installed bath.

Figure 1

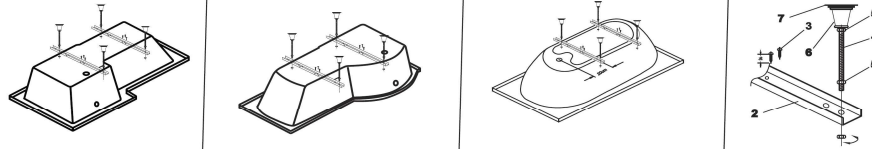


2. Put the bath in the selected place in the bathroom. Then level the bath legs (4). Mark the outline on both walls. Mark the places for brackets (9) (see Figure 3).

Figure 2

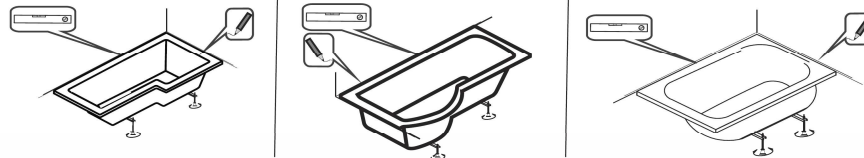

3. Mount the brackets (9) to the walls and slot the bath onto the brackets.

Figure 3

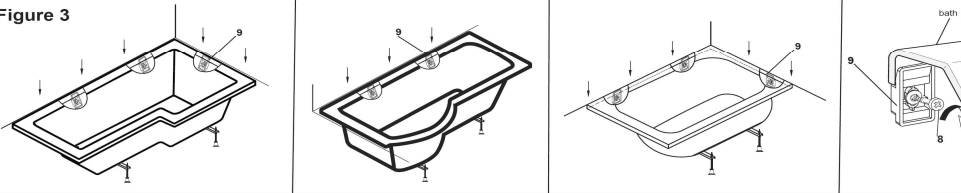

rew.1.1/12/08/15

4.

- A. Tighten the clips (11) to the wooden block under the bath rim
- B. Tighten the clips (11) to the floor using screw provided (14)
- C. Install the panel as shown in Figure 4. If necessary the panel can be trimmed to the required dimensions.
The panel is a separate product.

Figure 4

