


Note: Please read this instruction carefully before you begin to install the product.

Caution: PRODUCT IS FRAGILE, TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!

Installation:

A concealed wall mount frame with cistern must be properly installed behind a finished wall before proceeding with water closet installation. (Recommended concealed cistern Cod. Art: FS04RAK). (figure.1)

Figure. 1

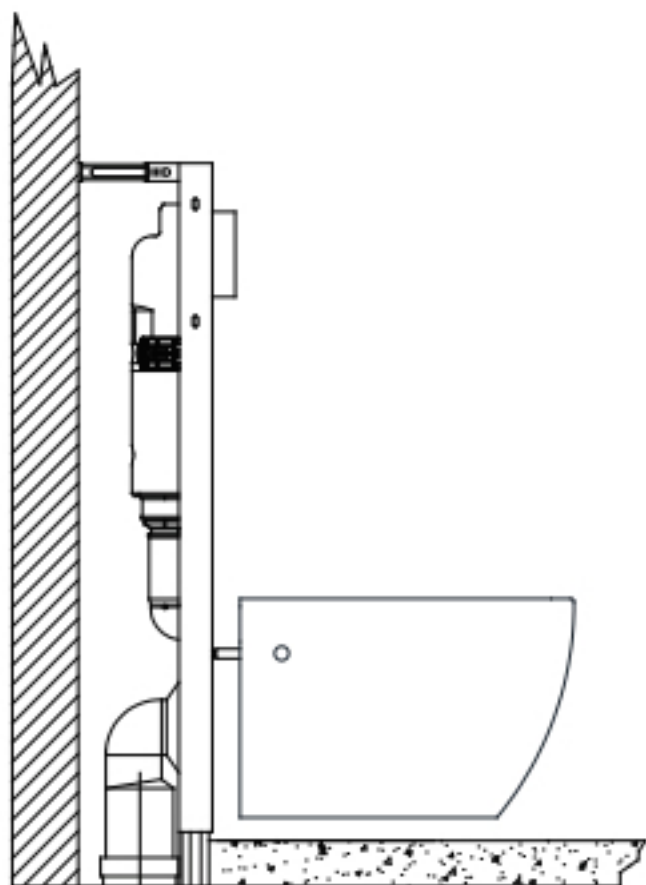

Fixing the Water Closet to the wall:

! Important

Ensure that the mounting rods, Inlet & outlet pipes are installed to the dimension of particular wall hung water closet and the care should always be taken when drilling into wall and floor to avoid any sunken wires or pipe.

1. Leaving 35mm of the mounting rods exposed, thread the included anchor bolts onto the mounting rods, leaving 15mm gap between the end of the anchor bolts and the finished wall. Ensure that the notch in the anchor bolt is facing out. (Figure. 2)

Figure. 2

