

HALO | Double Robe Hook

This product should be fitted in accordance with the manufacturer's fitting instructions. Please read the following instructions carefully.

Care and Safety

Take care using power tools - The use of a residual current device (RCD) is recommended. Beware of hidden cables or pipes when drilling. Take care when drilling on glazed tile surfaces in case the drill slips.

Fitting Instructions (See diagram and refer to description below)

- **Note:** Wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs.
- Position fixing bracket on wall in desired location – make sure the fixing bracket is orientated as shown in the diagram below.
- Tip – a piece of masking tape applied to the wall before marking the fixing holes will stop the drill wandering, particularly on tiled surfaces.
- Mark the two screw positions.
- Remove fixing bracket and drill two holes using a 6mm drill bit to a depth of 35mm.
- Ensure that the flat surface of the bracket is sitting against the wall and fix it to wall using wall plugs and screws provided.


Attaching Accessory to Backplate(s)

- Loosen the small grub screws on the underside of fixing bracket.
- Slot the product into the fixing bracket.
- Secure by tightening the grub screws on the underside of the fixing bracket.
- Check accessory is secure.

Cleaning


We recommend cleaning using a soft damp cloth only. Do not use metal cleaners or other abrasive cleaning agents.

Please retain this information leaflet for future reference.



Do Not lean or place excessive weight on this robe hook

WARNING

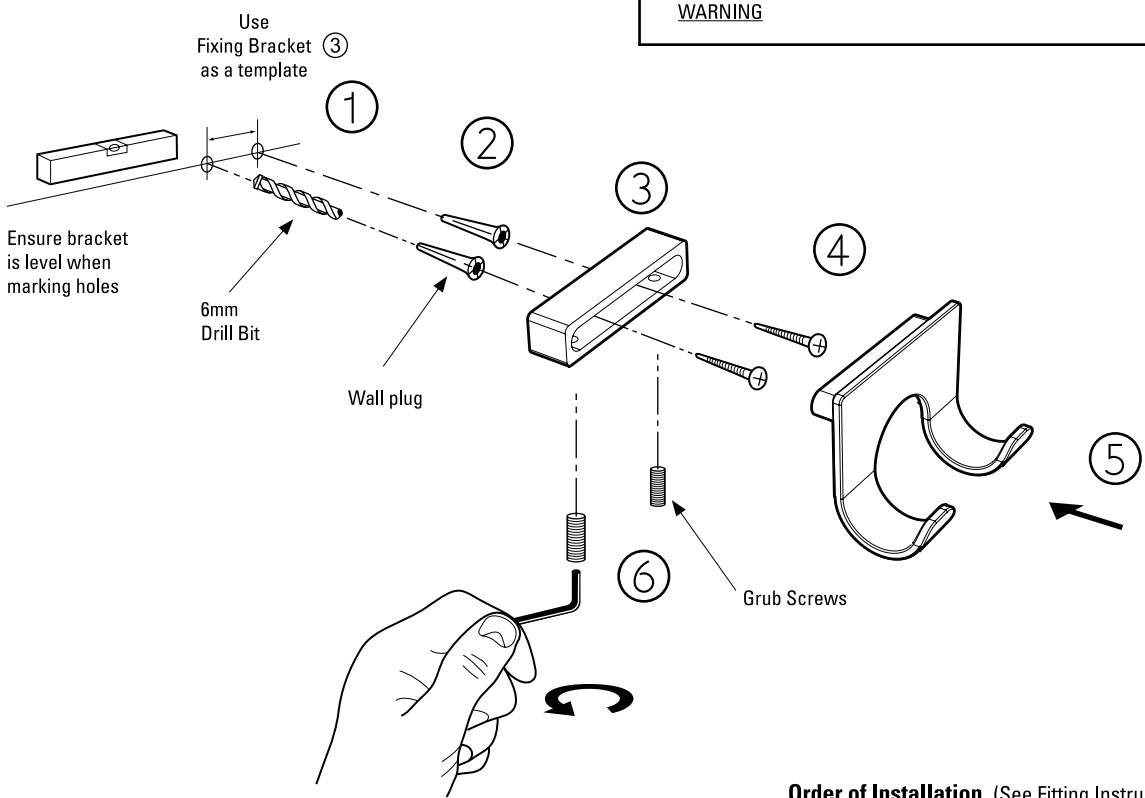

Contents

- 1 x Chrome Robe Hook
- 1 x Fixing Bracket
- 2 x Wall Plugs (Suitable for Solid Stone / Brick Walls)
- 2 x Screws
- 1 x Allen Key

Order of Installation. (See Fitting Instructions above)

1. Measure and drill screw locations
2. Insert suitable wall plugs
3. Position fixing bracket in place
4. Screw fixing bracket into wall plugs
5. Slot product into fixing bracket
6. Tighten grub screws