

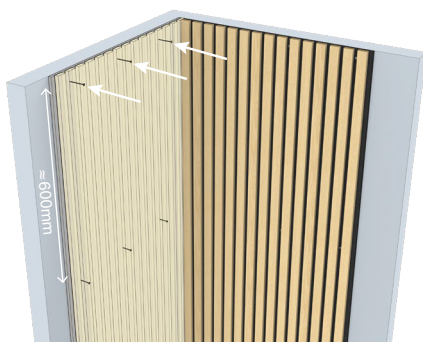
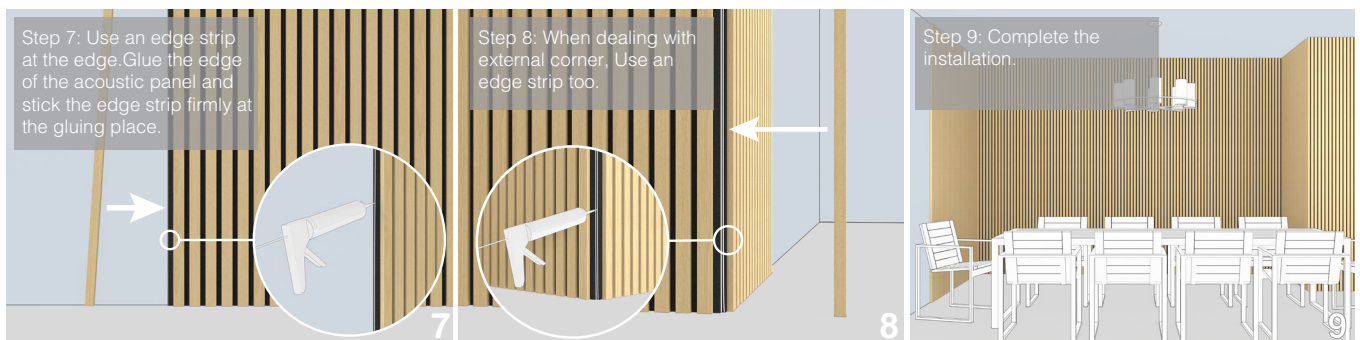
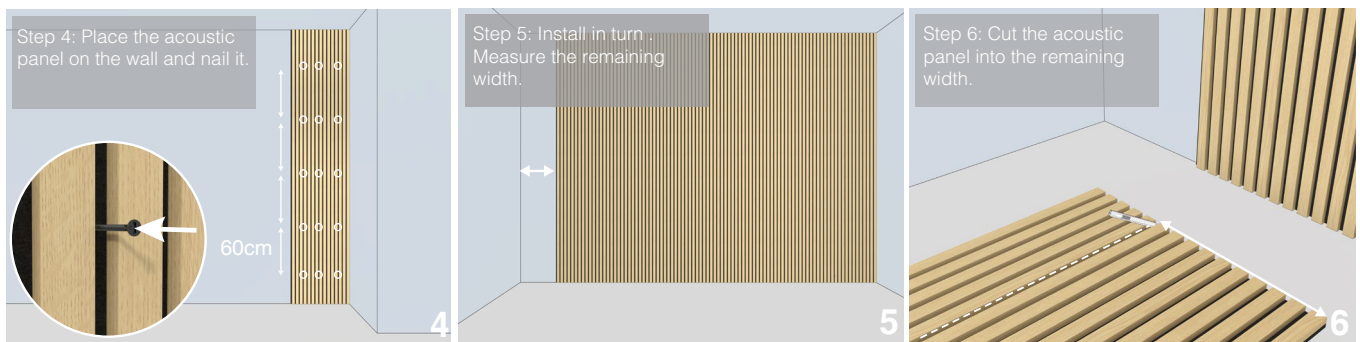



Installation

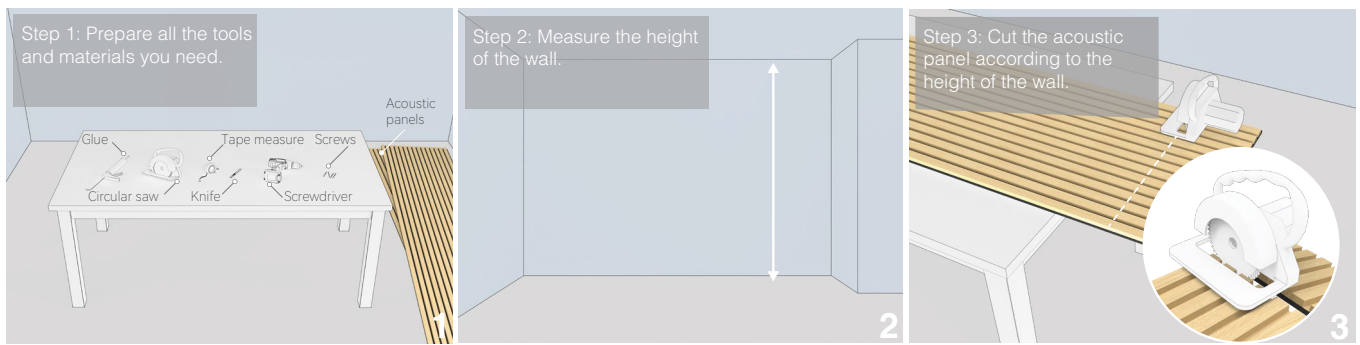

a. Nail acoustic panels directly to the wall.

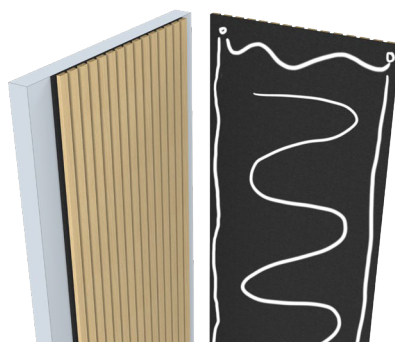

b. Attach acoustic panels to the wall with nail-free glue.

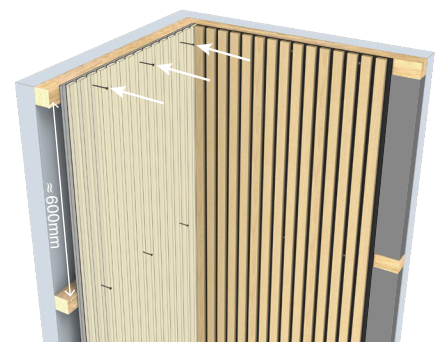

c. Install fibreglass wool or rock wool between the battens.