
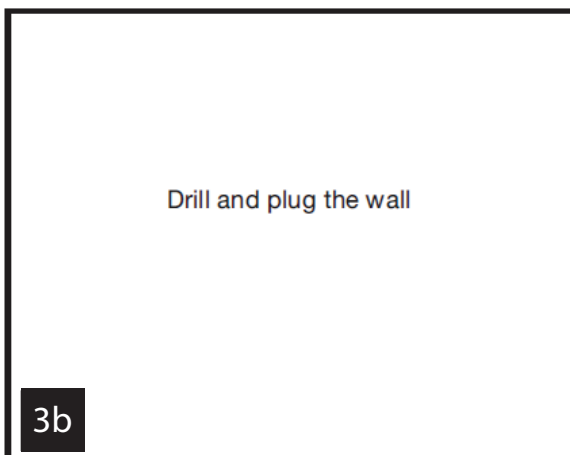
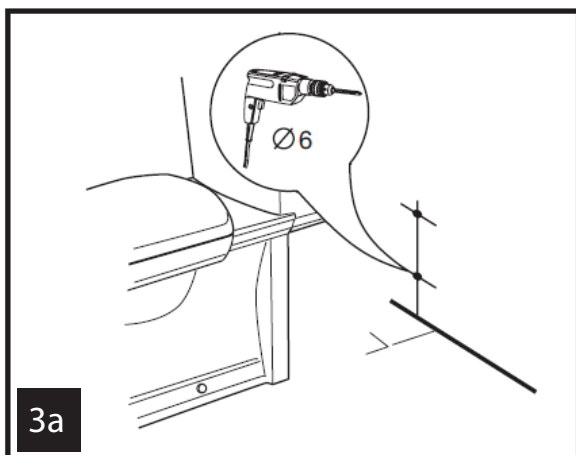
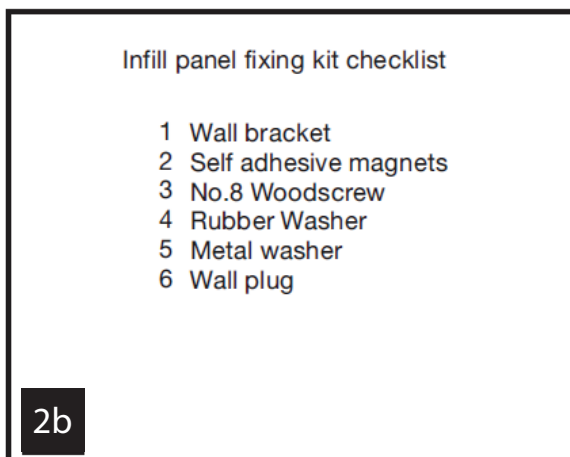
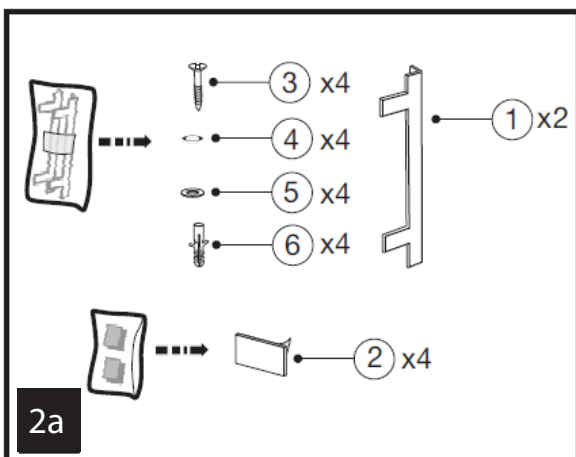
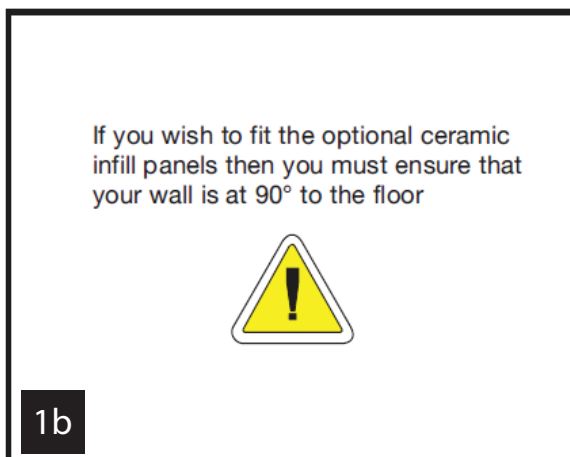



# Installation Instructions

## DAMEA W.C

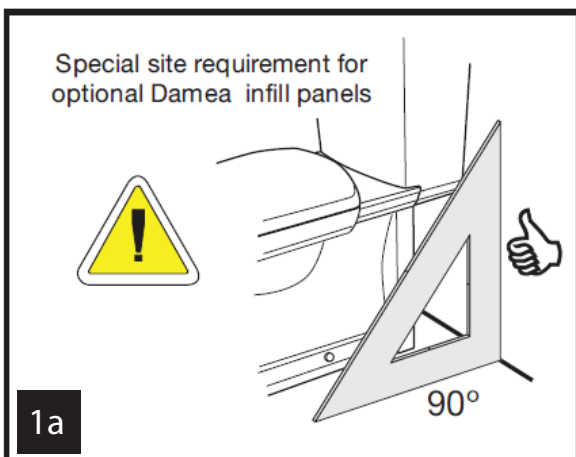


# Installation Instructions

## DAMEA W.C

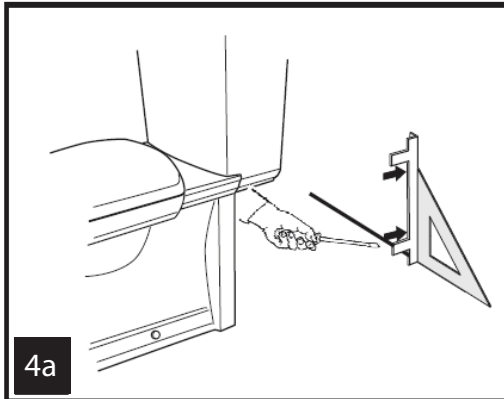


Fix the bracket to the wall

4b

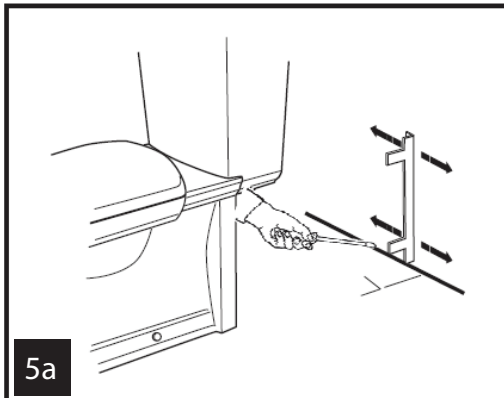

The wall brackets can be slacked off to provide any minor adjustments

5b

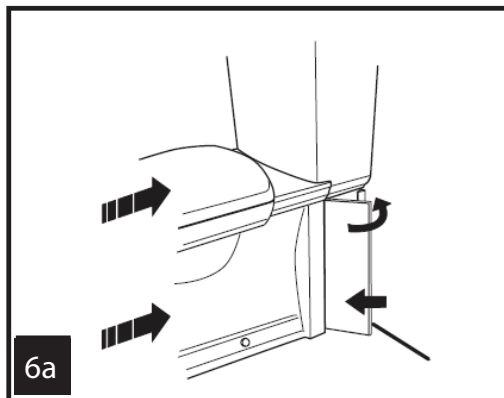

Move the w.c back to the position marked previously.

Insert and pivot the infill panel to locate the magnets onto the wall bracket.

6b

### Silverdale Bathrooms

Silverdale Road, Newcastle Under Lyme, Staffordshire, ST5 6EL.  
Telephone: 01782 717175 Facsimile: 01782 717166  
Email: [sales@silverdalebathrooms.co.uk](mailto:sales@silverdalebathrooms.co.uk)  
[www.silverdalebathrooms.co.uk](http://www.silverdalebathrooms.co.uk)

Tel: 01782 717175  
Email: [sales@silverdalebathrooms.co.uk](mailto:sales@silverdalebathrooms.co.uk)  
Web: [www.silverdalebathrooms.co.uk](http://www.silverdalebathrooms.co.uk)