
## TAVISTOCK inspiring bathrooms

## DETAIL WOODEN CADINETS Product Code: DE47W/DE47AW/DE60W/DE60AW Installation & care instructions

Please retain for future reference

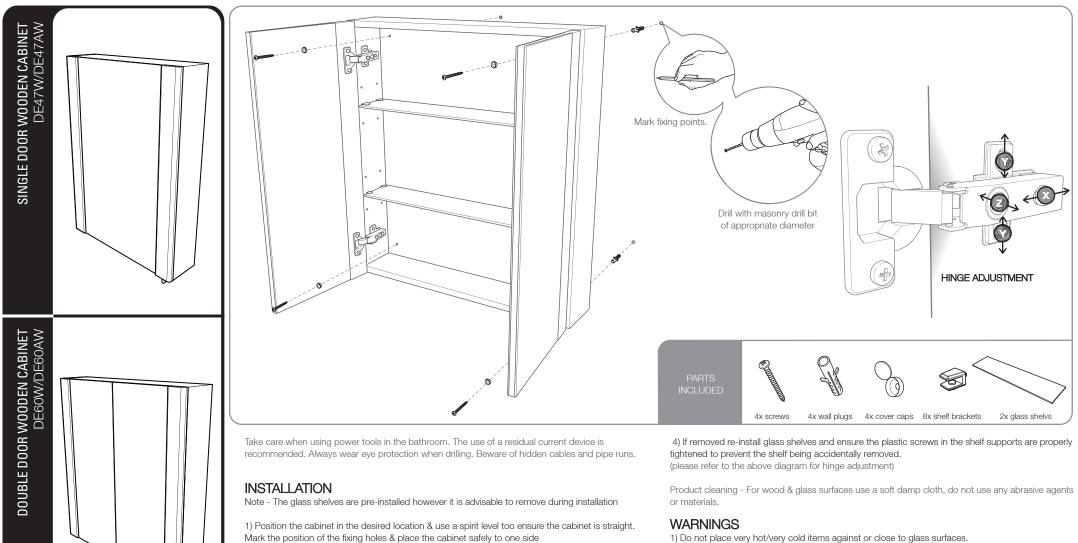

A piece of masking tape applied to the wall will stop the drill wandering particularly on tiled surfaces. 2) Drill the holes & insert wall plugs

Wall plugs & screws supplied are only suitable for use in brick, stone or other solid walls. For plasterboard, particleboard or other hollow walls use specialist fixings.

3) Reposition the cabinet over the holes, insert screws / washers and ensure they are fully tight, take care not to over tighten.

Tavistock, Brassmill Lane Trading Estate, Bath, BA1 3JF T. 01225 787870 | F. 01225 448877 | E. tavistock@roperrhodes.co.uk | W. www.tavistock-bathrooms.co.uk

2) Do not strike the glass with hard or pointed items.

3) Please ensure cabinet is securely fixed to the wall using the guidelines described. It is essential the correct fixings are used. The product could be dangerous if installed incorrectly.

5) Not suitable for installation above a bath or in a shower cubicle.

6) Installation of this product is only to be carried out by a competent person.

This unit contains shelves with a maximum evenly distributed load of 3kg. The unit contains mirrored doors of a nominal thickness of 3mm which are not required to be toughened to BS6206 Class C.