
# LANSDOWN 400MM FLOOR CUPBOARD (LAN400FC.IW/LAN400FC.PG) INSTALLATION AND AFTERCARE INSTRUCTIONS




# Installation Procedure

This unit can be joined to other units with furniture fixing bolts (not provided). It is recommended that units are joined before they are fixed to the wall. Clamp the units together using suitable clamps, ensuring they are flush and level with each other. Drill out the 4 pilot holes in the side of the unit and using the bolts, join units together. Remove clamps and fix the assembly to the wall as required using corner brackets (not supplied).

# Door Reversing

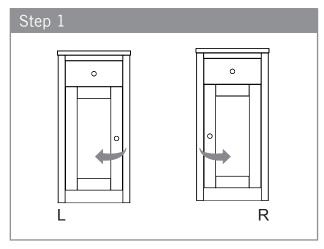


Depending on the intended location of the unit, you have the option of choosing whether you want a left or right hand opening door.

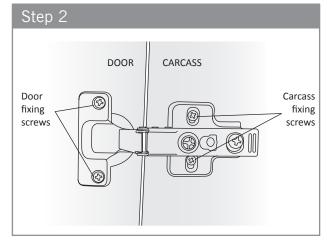


Choose the desired handing and fix hinges to the door and then the carcass. Holes are also provided on both ends of the door for the badge attachment to be fitted once the desired handing is chosen.

# Drawer Adjustment

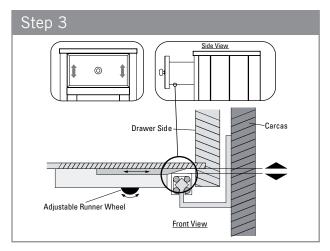

The drawer may require adjustment to ensure alignment. This is achieved with the adjustable runners. They are located at the front on the underside of the drawer. By rotating the wheel indicated in Step 3 vertical adjustment of the drawer can be made.

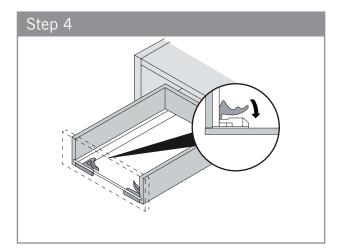

The drawers have a quick release function. The drawer is removed by squeezing the handles on both of the runners and pulling the drawer forward. The quick release handles are located at the front on the underside of the drawer (see Step 4).

# Fitting Handle

The handle can simply be screwed into place using the screws supplied

# LANSDOWN 400MM FLOOR CUPBOARD (LAN400FC.W/LAN400FC.PG) INSTALLATION AND AFTERCARE INSTRUCTIONS



#### Worktop Installation

If being used in a run of furniture, a Lansdown worktop can be used over the floor cupboard. For a standalone installation a wooden worktop is supplied. This can be fixed in place using the adhesive strips supplied.

### Furniture Aftercare Instructions

As with all wooden furniture, this product should be treated with care.

# We Recommend...

- Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture
- All bathrooms should be well ventilated with a suitable extractor fan
- Clean with a soft damp cloth only
- Use a wax free polish if one must be used
- For removal of lime scale deposits use a suitable proprietary cleaner

### Please DO NOT...

- Do not scrub or scour
- Do not use abrasive cleaning agents

# Replacement Components

Should you require any replacement components for this product please contact Roper Rhodes using the contact details below.