

Traditional Basin Bottle Trap BBT601

INSTALLATION INSTRUCTIONS


Please follow these care instructions to ensure your product retains it's high quality finish and please retain this leaflet for future reference.

1. Assemble knurled nut (B) onto the plated metal tube (C) under the top flange with the wide end facing upwards to receive the waste assembly. Slide the second knurled nut (D) onto the plated metal tube (C) ensuring the wide end is facing down.

2. Push the plastic sleeve (E) into the top of the bottle trap main body (F) ensuring the lip sits on the neck of the trap. Insert the metal tube (C) into the centre of the plastic sleeve and lock the knurled nut (D) firmly into position.

3. This trap is designed to connect to a standard 1.1/4" metal waste outlet pipe (I). Slide the knurled nut (H) and tapered washer (G) over the waste pipe and tighten the nut.

4. When fitted onto the basin waste outlet the washer (A) must be placed inside the knurled nut to form a seal between the trap and waste.

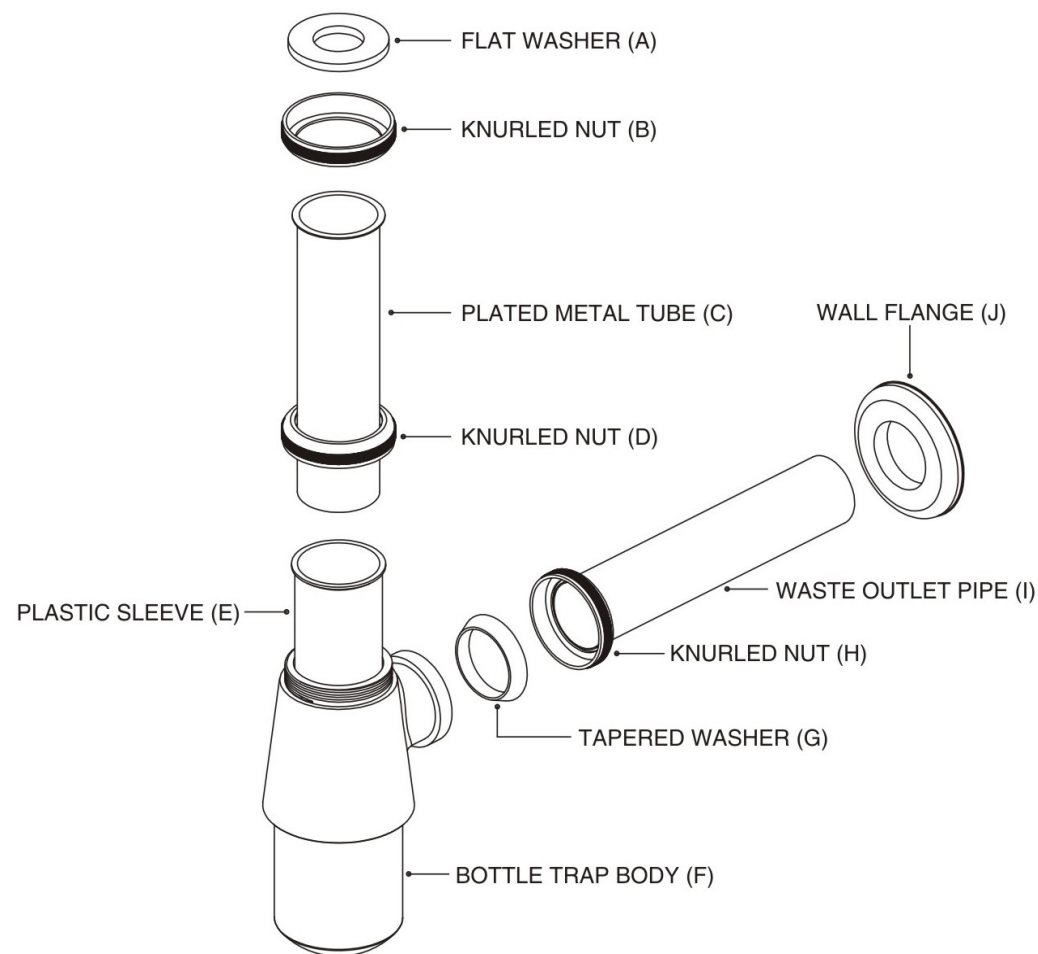

WARNING!

We recommend that this product is installed by a qualified tradesperson and we accept no liability for products fitted incorrectly, and where the correct testing procedures have not been used, resulting in the escape of water.

