


Basin Waste Inc. Brass Plug & Ball Chain WE101

INSTALLATION INSTRUCTIONS

V1.07.23

Please follow these care instructions to ensure your product retains it's high quality finish and please retain this leaflet for future reference.

- 1. Identify all components are present prior to installation
- 2. Fit the waste body (3) and rubber washer (2) to the sink
- 3. Fit the sealing washer (4) to the underneath of the sink as shown in the diagram, secure by tightening the backnut (5)
- 4. Fit the stay assembly (1) to the sink
- 5. Check all joints and connections for leaks

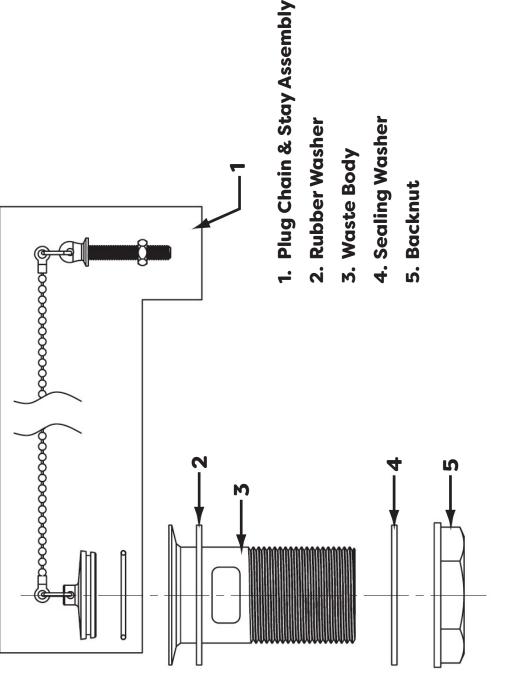

WARNING! We recommend that this product is installed by a qualified tradesperson and we accept no liability for products fitted incorrectly.

www.victorianplumbing.co.uk