




Assembly instructions

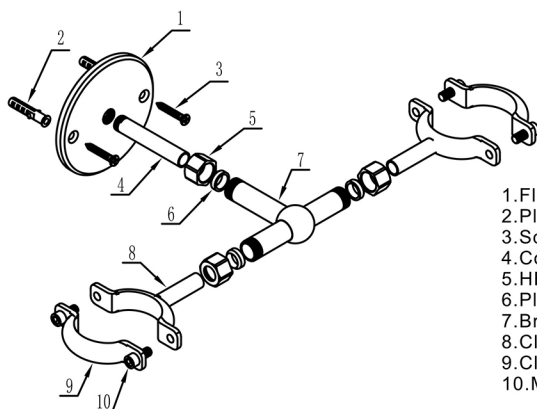


1.Flange	X 1
2.Plastic screw	X 2
3.Screw	X 2
4.Connector	X 1
5.HEX Nut	X 3
6.Plastic washer	X 3
7.Bracket body	X 1
8.Clamp B	X 2
9.Clamp A	X 2
10.M6 inner Hex Screw	X 4

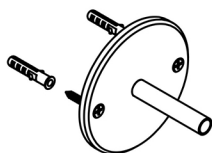

A. Use the Plastic screws (NO. 2) and Screws (NO. 3) fixing the Flange (NO. 1) on the wall. Install the Connector (NO. 4) on the Flange (NO. 1).

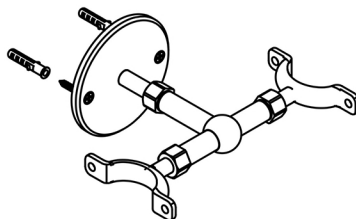

B. Assemble HEX Nut (NO. 5), Plastic washer (NO. 6), Bracket body (NO. 7) and Clamp B (NO. 8) together, then install the assembly on the Connector (NO. 4). Note that do not tighten the three Hex Nuts (NO. 5).

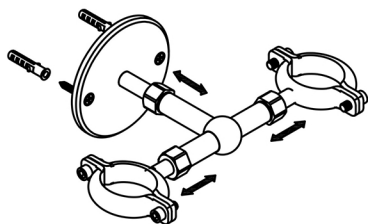

C. Adjust the Bracket body (NO. 7) and Clamp B (NO. 8) to the suitable length. Install the Clamp A (NO. 9) and M6 inner Hex Screws (NO. 10), tighten the Hex Nut (NO. 5).

Drawing

