


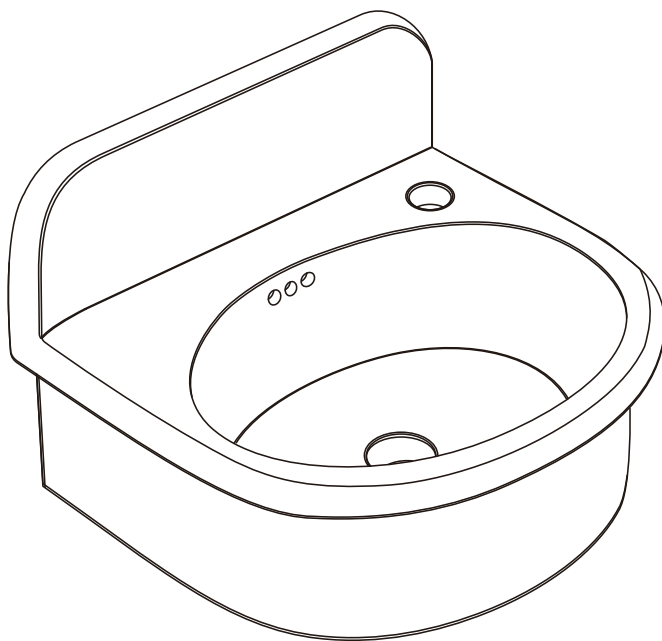

Traditional Wall Hung Basin - 1 Tap Hole




Fitting Instructions


Please follow them carefully and
leave this manual with end user

Before you begin:

- 1. **We recommend that this product is installed by a qualified tradesperson**, Victorian Plumbing Ltd. accept no liability for products incorrectly installed or any damage to the floor, walls, plumbing, basin, or personal injury during installation.
- 2. Observe all local plumbing and building codes & regulations.
- 3. **Attention: Recommended for solid walls only. If fixing to studded timber frame walls, ensure appropriate fixings are used.**
- 4. Ensure the incoming mains water supply is switched off prior to commencing the installation.
- 5. For the following instructions, it is assumed that the in-wall plumbing has already been prepared.
- 6. Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.

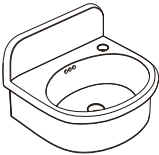No.	Description	Picture	Qty
A	Basin		1

Fittings:

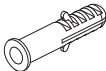
No.	Description	Picture	Qty
B	Fixing Bracket		2
C	Rawl Plugs		4
D	Screws		4

Tools Required (Not Included):


Ensure the appropriate PPE is used during installation



Pencil

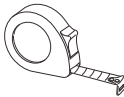

Tape Measure

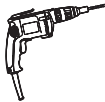

Power Drill



Spirit Level



Silicone Sealant




Damp Cloth

Installation

Note: Diagrams are for illustration purposes only. Your Basin may differ from these drawings however the installation guide steps still apply.


Step 1:

Measure the distance between the two back holes. Hold the 'Basin' (A) up at the desired height (ensuring that the basin is level), then mark across the top of the 'Basin'. Make another marking below the original for the 'Fixing Brackets' (B) and hole positions.

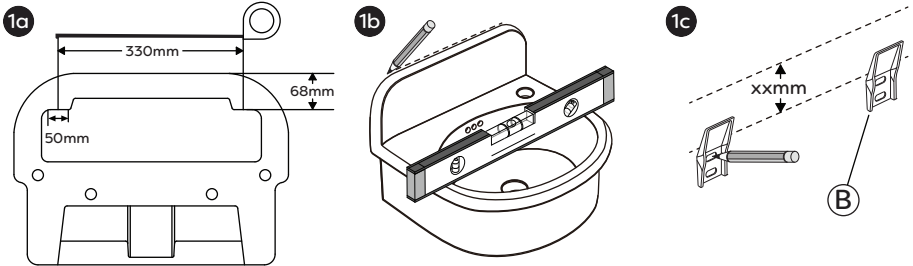


Step 2:

Carefully drill the holes in the wall (ensuring the correct sized masonry bit is used when drilling into a solid wall) and insert the 'Rawl Plugs' (C). Place the 'Fixing Brackets' (B) over the 'Rawl Plugs' and secure into place using the 'Screws' (D) provided. Check the brackets are level using a spirit level.

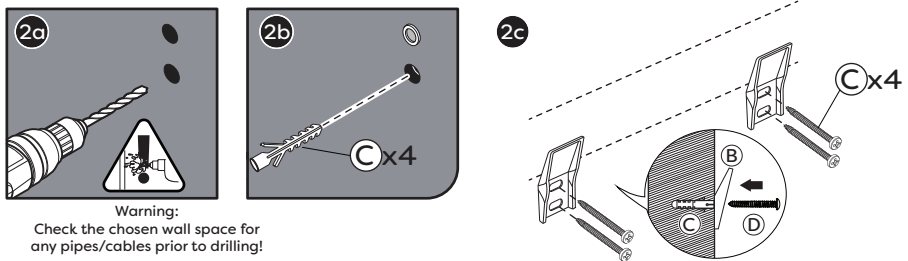


Step 3:

Before fitting the basin, it is recommended to install the waste and tap for ease of plumbing. Refer to the instructions for guidance if needed. Pipe a bead of good quality silicone sealant along the rear of the basin.

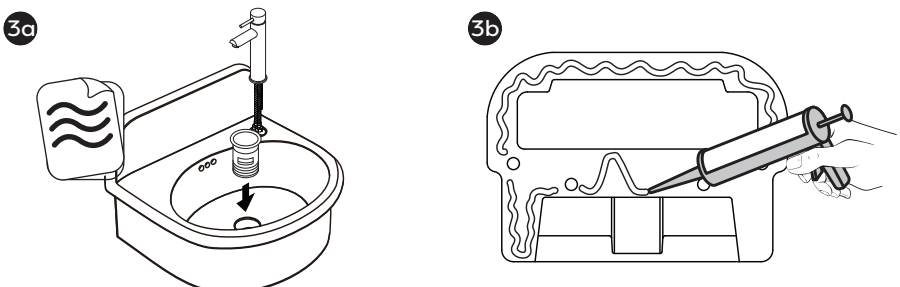


Step 4:

Carefully mount the basin to the wall, by slotting the 'Fixing Brackets' to the mounting holes at the back of the basin. Ensure that the basin is level using a spirit level. Wipe away any excess sealant with a damp cloth.

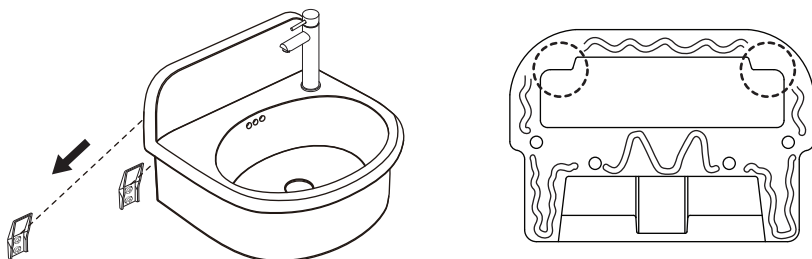

Step 5:

Proceed to the installation of the drain trap, water supply lines. Refer to their respective installation instructions for guidance if needed. Pipe a fine bead of good quality coloured sealant around the rear edge of the basin. Wipe away any excess sealant with a damp cloth and allow the sealant to fully dry for 24 hours.

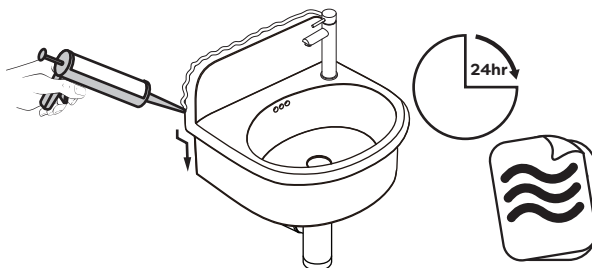

Cleaning and Maintenance:

We recommend that you regularly clean your basin with a mild dish detergent. After each use, wipe the basin dry with a soft cloth. Do not allow mineral deposits such as iron, salt, lime, or soap to build up on your basin. Refrain from using acidic household cleaners, wipes with harsh chemicals, or abrasives, as these will damage the basin.

Recycling and Disposal:

Please recycle the packaging in accordance with your local government regulations on waste handling and follow the same advice at the end of the products life.