

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

## **JODIE** fixed shower head

## INSTALLATION

Before installing the \*shower head flush the pipework through to remove any debris that may be in the system.


Insert the rubber \*O ring into the threaded fitting of the shower head.

Offer the shower head up to the outlet pipework and tighten using an appropriately sized spanner (fig.1) (take care not to over tighten).

Caution: It is not advised to use pipe grips as the finish on the fittings may be damaged.

## Cleaning

Clean the shower head with a suitable brush and warm soapy water. Make sure all traces of scale are removed and thoroughly rinse in clean water afterwards.

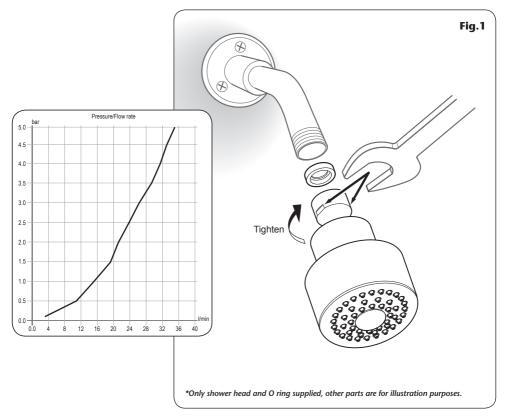

SPARES		
Ref.	Description	Part No.
_	Complete assembly only	88600011