

FIXING INSTRUCTIONS WALL HUNG BIDET


Twyford bathrooms


FIXING INSTRUCTIONS WALL HUNG BIDET

*Prior to installation, please establish the correct dimension for your particular WC / Bidet


Dimension - B

180mm *or 230mm

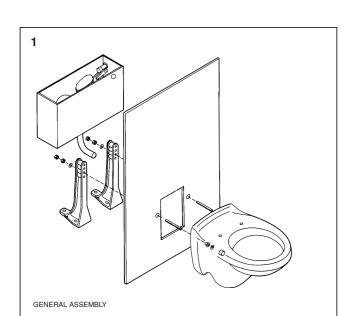


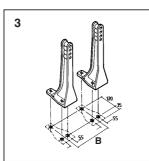


Drill holes for floor brackets as shown.
Secure brackets to floor using
M12 rawlbolts (not supplied).

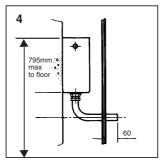


Fix cistern at maximum height shown above. Install cistern as per the instructions provided with the cistern

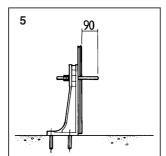

Assemble nuts and washers onto studding so that studding protrudes 90mm from front of panel. Nuts should then be locked tightly together.

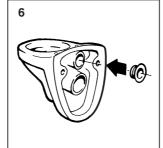

Fit flushbend seal provided into w.c. basir

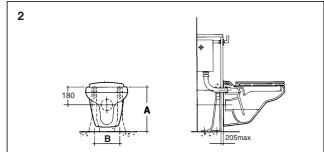


Normal height of w.c. basin (dimension A) is 400mm. Design of floor brackets also allows heights of 375mm, 425mm or 450mm.

Before fixing, ensure soil pipe installation will accommodate the height chosen.

Note 'Floor brackets may only be fixed to a solid floor.

*Access to cistern must be built into design of panels.

Ensure soil socket seal is in correct position and fit w.c. basin onto studs. Secure basin in position using fixings and instructions uspected with the visions.

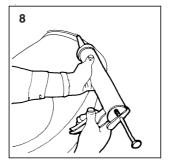


Seal around back and sides of w.c. with silicone building sealant.


*Prior to installation, please establish the correct dimension for your particular WC / Bidet

Dimension - B


180mm *or 230mm

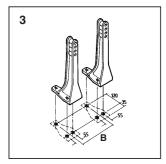


Drill holes for floor brackets as shown. Secure brackets to floor using M12 rawlbolts (not supplied).

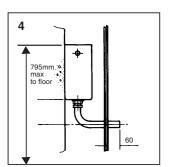


Fix cistern at maximum height shown above. Install cistern as per the instructions provided with the cistern.

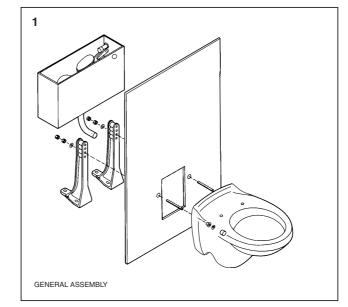


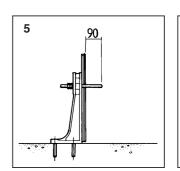

Assemble nuts and washers onto studding so that studding protrudes 90mm from front of panel. Nuts should then be locked tightly together.

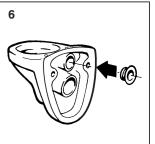

Fit flushbend seal provided into w.c. basir

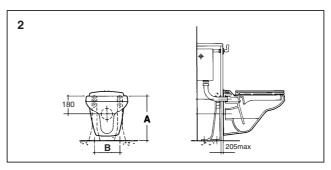


Normal height of w.c. basin (dimension A) is 400mm. Design of floor brackets also allows heights of 375mm, 425mm or 450mm. Before fixing, ensure soil pipe installation will accommodate the height chosen. Note *Floor brackets may only be fixed to a solid floor.

*Access to cistern must be built into design of panels.



Ensure soil socket seal is in correct position and fit w.c. basin onto studs. Secure basin in position using fixings and instructions supplied with the w.c.

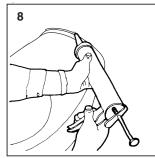

Seal around back and sides of w.c. with silicone building sealant.



Lawton Road, Alsager, Stoke-on-Trent ST7 2DF, UK
T: +44(0) 1270 879777 F: +44(0) 1270 873864
www.twyfordbathrooms.com Part of the Sanitec Group

Twyford bathrooms

Lawton Road, Alsager, Stoke-on-Trent ST7 2DF, UK
T: +44(0) 1270 879777 F: +44(0) 1270 873864
www.twyfordbathrooms.com Part of the Sanitec Group

ZE 7760 XX 04/05 ZE 7760 XX 04/05