Lagoon Spa Shower Set
Fitting instructions

Main Stream by aqualona

Pack contents

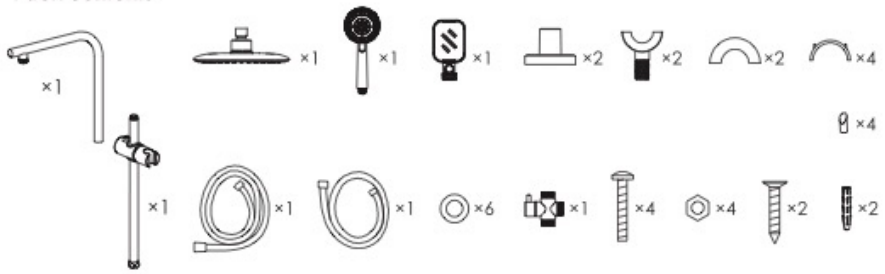

Tools required

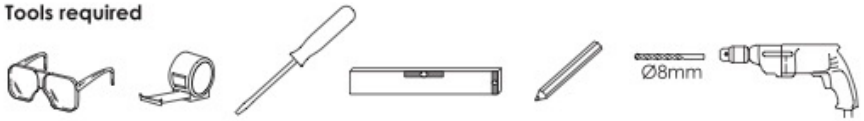

KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN

SAFETY ADVICE

- Do check for hidden cables and pipework before drilling.
- Do make sure the area is dry and take special care when using power tools in the bathroom.
- Do use a ceramic drill bit if drilling into ceramic tiled walls.
- Do use suitable safety eye protection when drilling.
- Do use masking tape to cover the area you are going to drill.

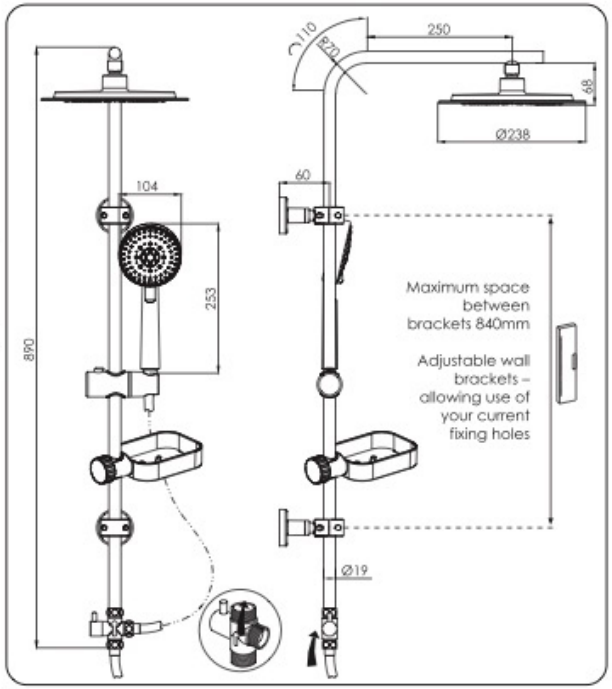

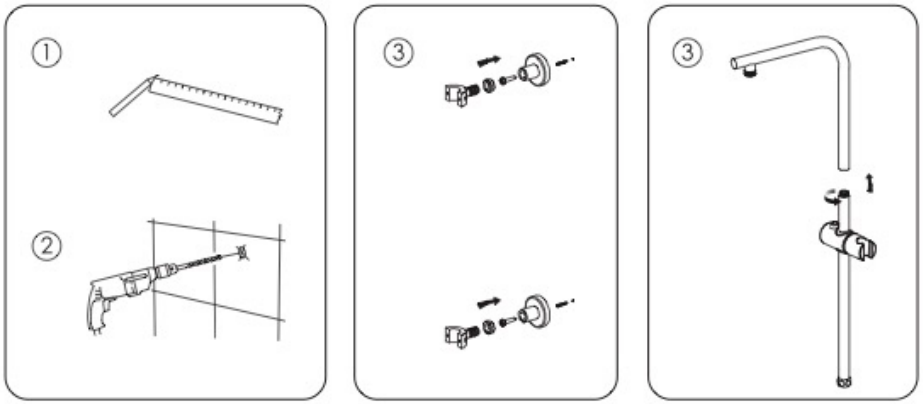

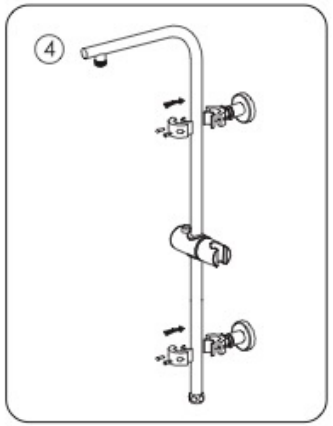

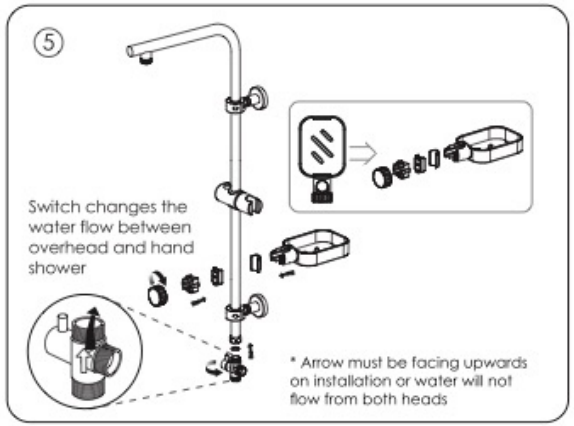

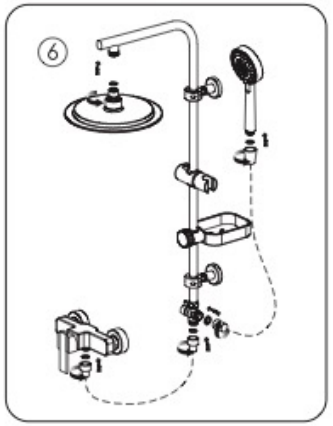

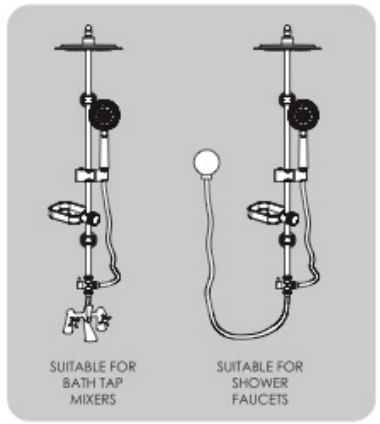

NEED HELP?
see our installation video below

Aqualona Products Ltd The Transmitting House, Great North Road, Brookmans Park, Herts, AL9 6NE Tel: 01707 641 929 Fax 01707 642 948 www.aqualona.com