
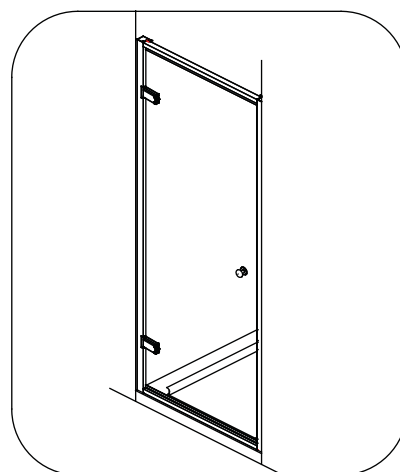


Beautifully  
Traditional


A R C A D E™

Arcade 800mm Hinge Door - nickel  
Arcade 900mm Hinge Door - nickel  
Arcade 800mm Side Panel - nickel  
Arcade 900mm Side Panel - nickel

ARC50  
ARC51  
ARC52  
ARC53

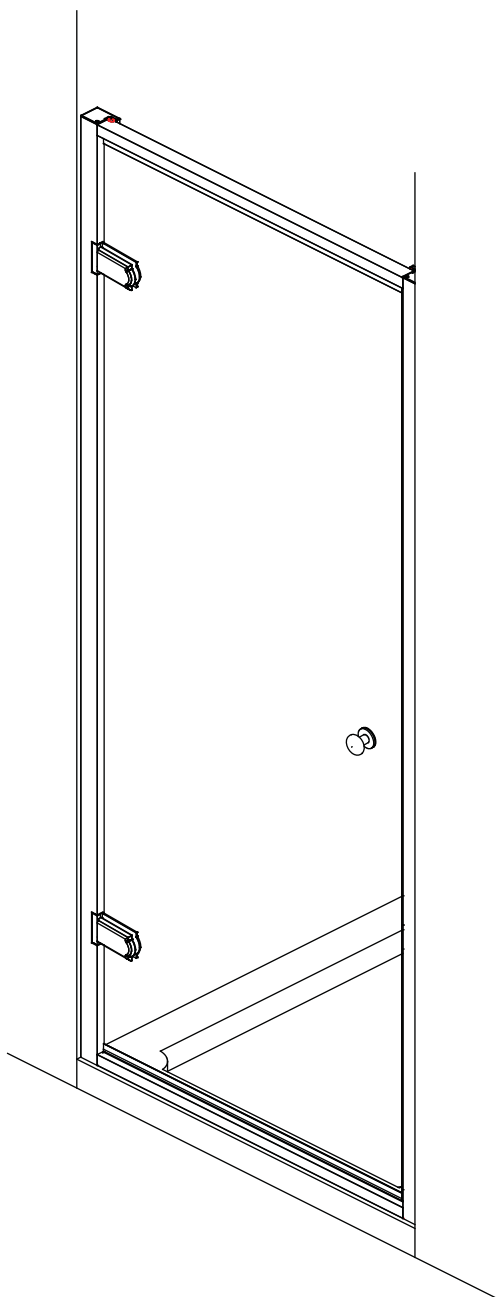

Hinged door in alcove

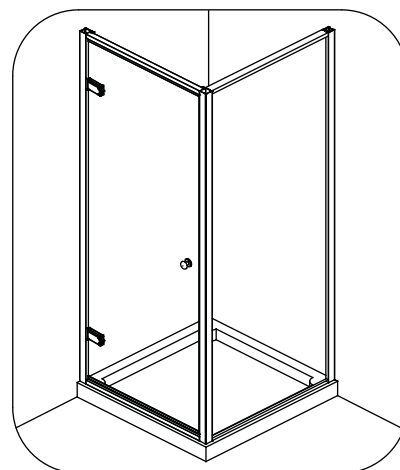

Hinged door & side panel

## INSTALLATION INSTRUCTIONS

### IMPORTANT - Please read before installation

Please read these instructions carefully before starting installation and keep in a safe place for future reference.

Check the contents of the pack carefully before installation. Arcade will not be held responsible for any de-fit / re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:


1. Full details are supplied to the manufacturer;
2. The enclosure has not been modified or tampered with;
3. The manufacturer is informed of any damage/shortages prior to installation.

We do not accept responsibility for any problems that may occur through incorrect installation.


The success of the installation and operation of any shower enclosure is, of course, dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

#### VERY IMPORTANT

You must complete all tiling and grouting, and the shower tray MUST be level and fully sealed to the tiles before installation. If you do not fit the enclosure onto a tiled surface, or seal the tiles to the tray before installation, water may soak into the wall behind the wall profiles.

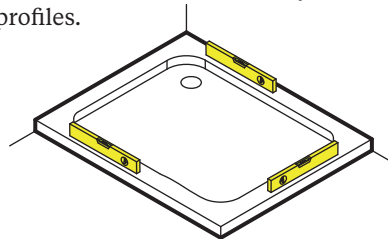

Yellow protective plastic film has been placed on the metal profiles. This film should not be removed until installation is complete. This is to protect the plating finish and prevent profiles being scratched during fitting.

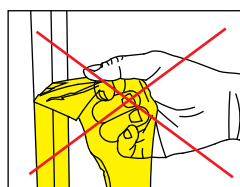

A pair of gloves are also provided to wear during installation, this will reduce oils and silicon stains being transferred during installation.

### INSTALLATION - Advice and safety

These products come with the two wall channels pushed onto each side of the glass panel frame. The side panels do NOT come with wall channels, you must use one of the channels from the door.

The installation instructions are based on typical use and conditions.

The hinged door is designed to open outwards only.

Please follow the installation instructions relevant to your enclosure.

These hints have been prepared for your guidance, you must exercise due care at all times.

For Health and Safety 2 people must carry out the installation of this enclosure.

Handle glass with care. Although the glass supplied is toughened safety glass (EN12150), impacts can damage both the glass and the frame.

#### Warning!

Please check for any hidden pipes or cables before drilling holes in the wall.

To stop the drill bit slipping, masking tape can be applied to the tiles when preparing the holes.

When using power tools always follow the manufacturers user instructions.

Do not sit the enclosure on a bed of silicone, as this will also stop any water from draining back into the tray.

**DO NOT SEAL THE ENCLOSURE TO THE TRAY ON THE INSIDE.**

If the enclosure is sealed to the tray on the inside, any water that may get into the framework will not be able to drain back into the tray, this may cause the enclosure to leak.

Leave the silicone sealant to dry for 24 hours before using the enclosure.





### CARE AND CLEANING

Do not use solvents or abrasive material or chemicals to clean the enclosure.

Only clean using soapy water and a soft cloth, rinse thoroughly afterwards.

### INSTALLATION - left & right


These products are reversible for left or right hand fitting, simply turn the door or panel up side down.

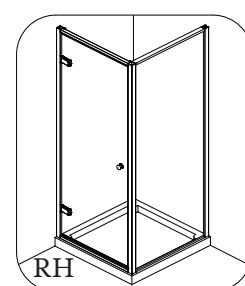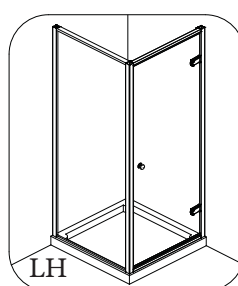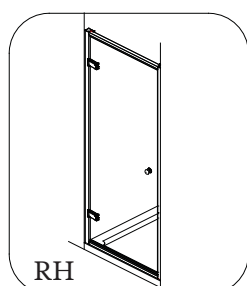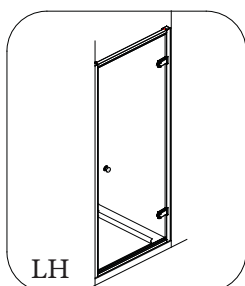

CONTENTS


HINGED DOOR IN ALCOVE

See pages 3 - 6

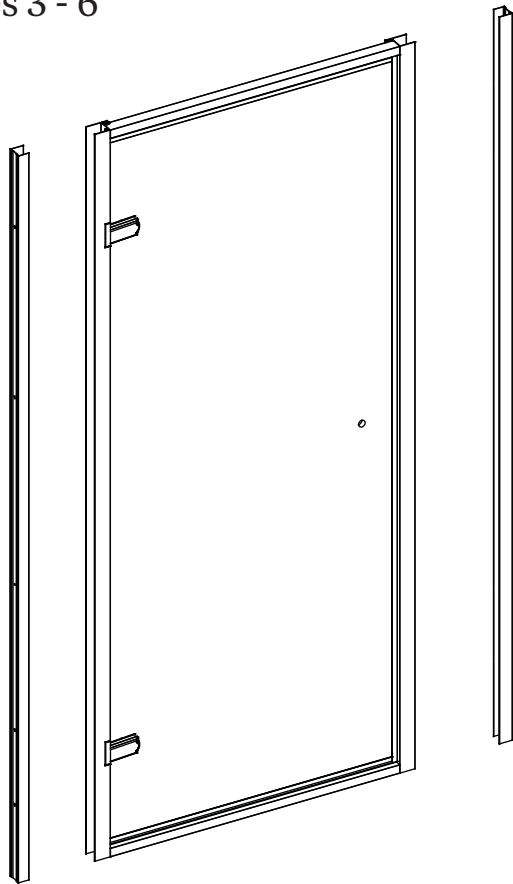

HINGED DOOR & SIDE PANEL

See pages 7 - 10

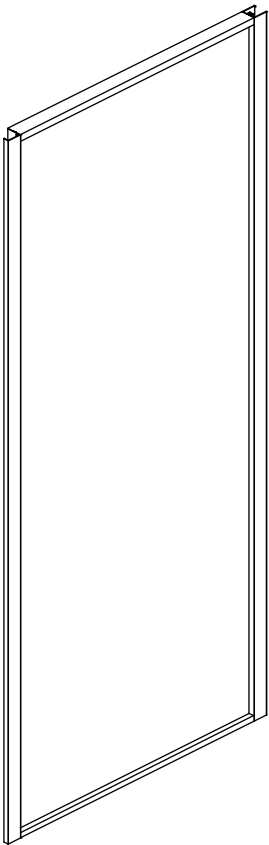


A



ST3.9\*45mm Screw x 8

B

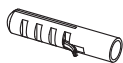

Wall Plug x 8

C



ST3.9\*13mm Screw x 8

D



Washer x 8

E




Cover x 8

F



Cap x 8

G

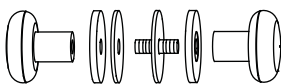

Handle x 1

H



3mm Allen key x 1

I



Gloves x 1

C



ST3.9\*13mm Screw x 4

D



Washer x 4

E




Cover x 4

Tools and equipment needed

Drill, 6mm Masonry drill bit, 2.8mm General drill bit, Philips screwdriver, Spirit level, Pencil, Tape measure, Silicone sealant.

## HINGED DOOR IN ALCOVE

### Step 1 - FITTING AND POSITIONING WALL CHANNEL

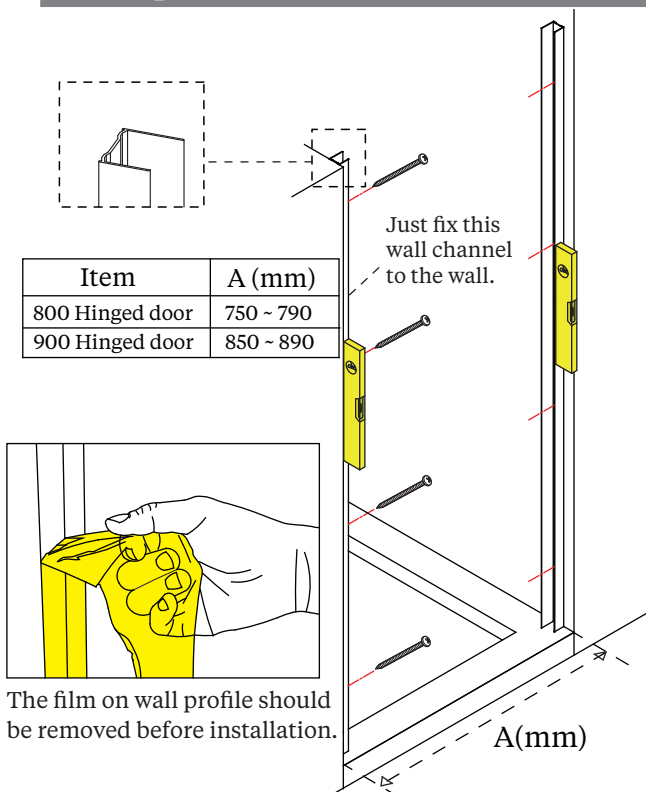


Remove both wall channels from the glass panel frame. Note: Ensure the longer leg of each wall channel is on the inside of the enclosure when fixing. Place each wall channel in position on the tray (10 - 15mm in from the outer edge of the tray), use a spirit level to ensure that they are vertical and mark all 8 fixing holes onto the wall.

Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into all of the holes (beyond the thickness of the tile).


On Hinged side only: Fix the wall channel to the wall using screws (A).

Note: Inject silicone sealant into the holes before inserting the screws to seal the holes.

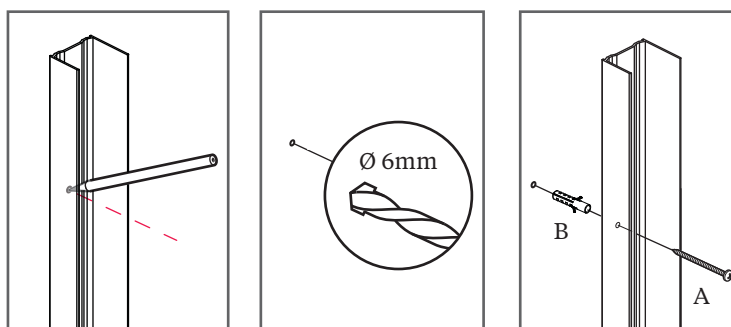


### Step 2

Push the remaining wall channel back onto the glass panel frame on the opening/handle side of the door (with the longer leg on the inside of the enclosure).

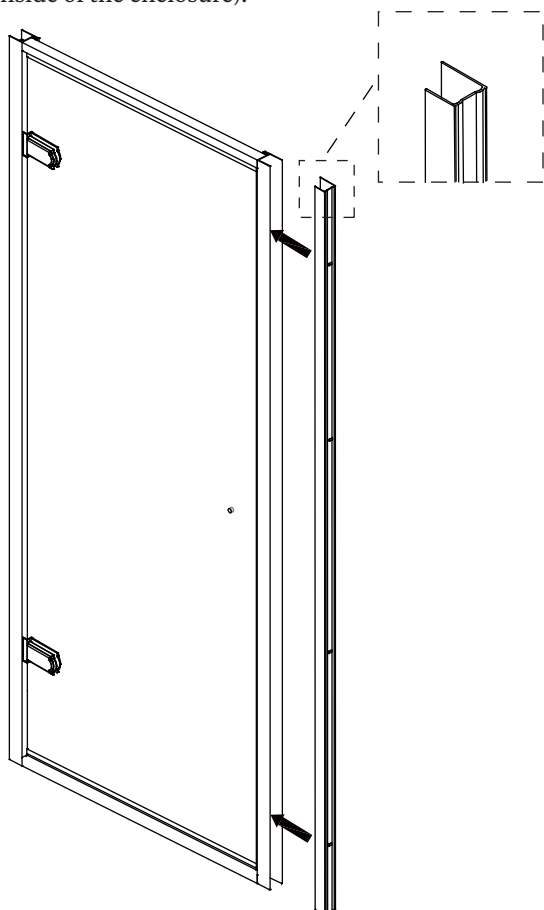

### Step 3


Insert the door into the 'fixed' wall channel and swing the free end into position on the opposite wall.

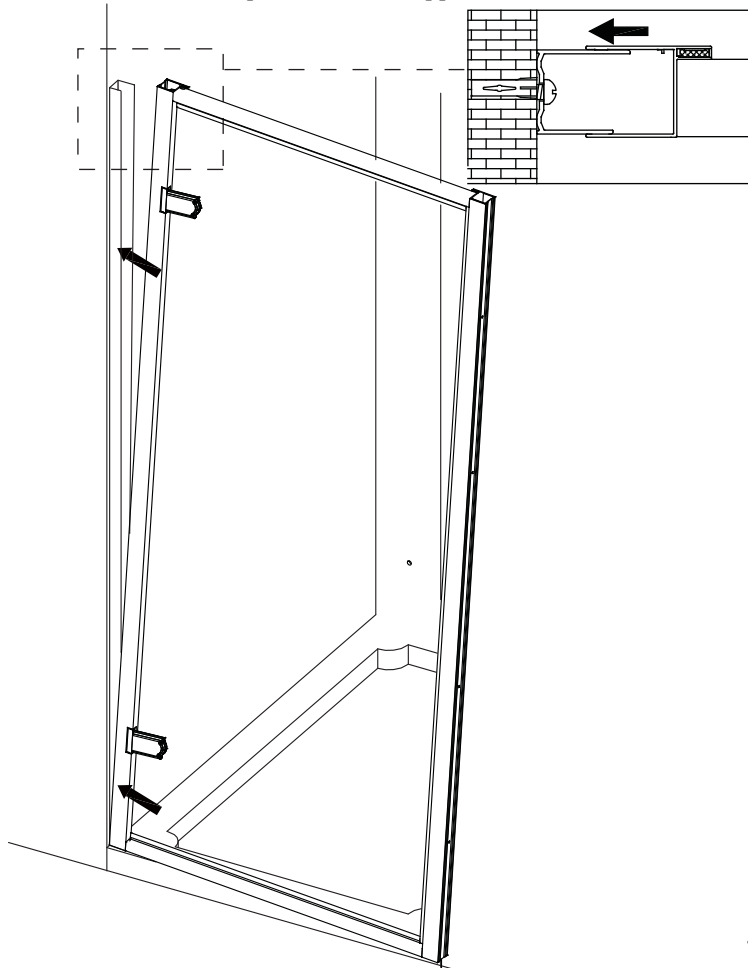

## Step 4

Line up the fixing holes on the second wall channel with those on the wall and fix through the frame using screws (A) and push on all 8 hole caps (F).


Note: inject silicone sealant into the holes before inserting the screws to seal the holes.

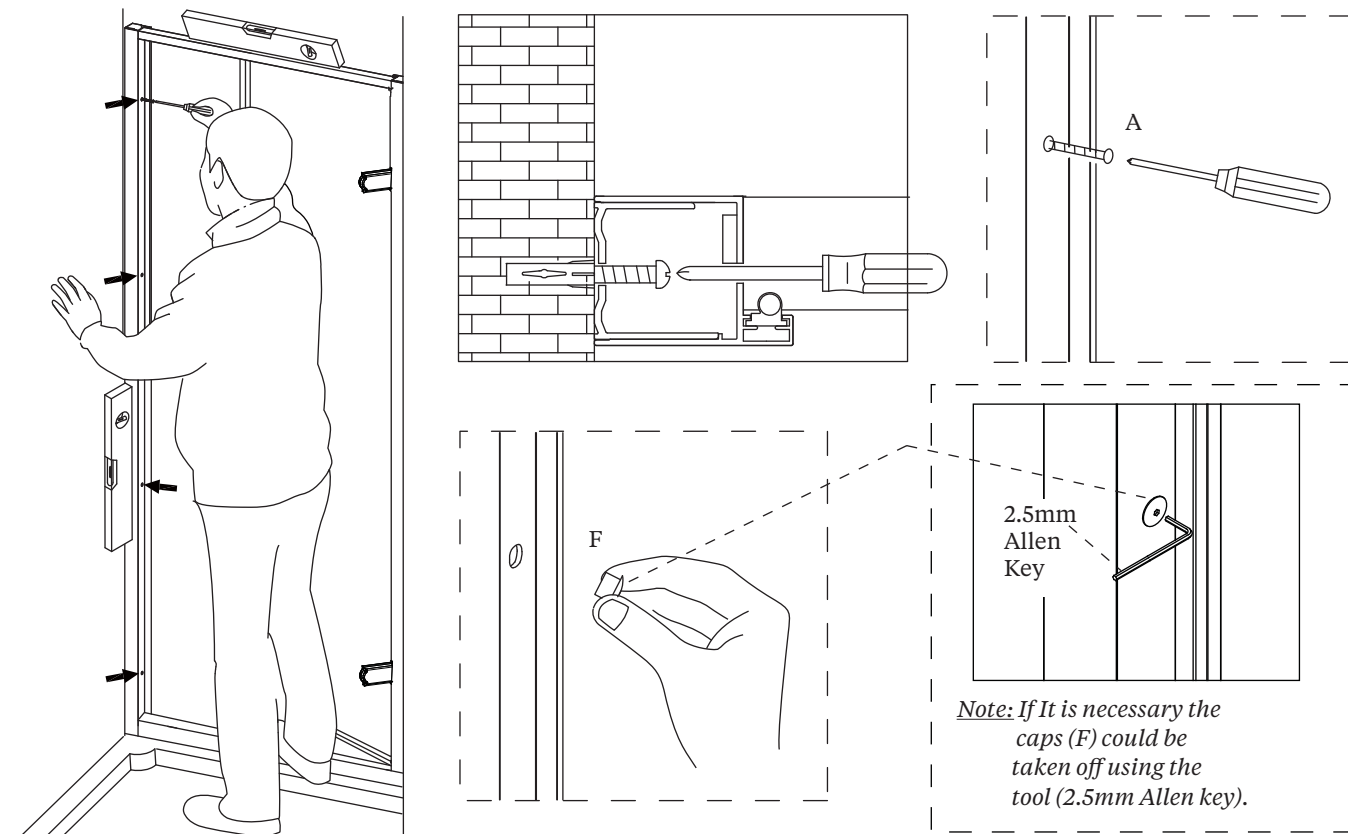


## Step 5

Once you have checked that the glass panel frames centred between the wall channels and also sit horizontally and vertically, fix the glass panel frames to the wall channels.



From inside, drill 4 holes through the glass panel frame ( in the marked positions) into the wall channels using a 2.8mm drill bit. Fix using washers (D), screws (C) and screw on the covers (E).

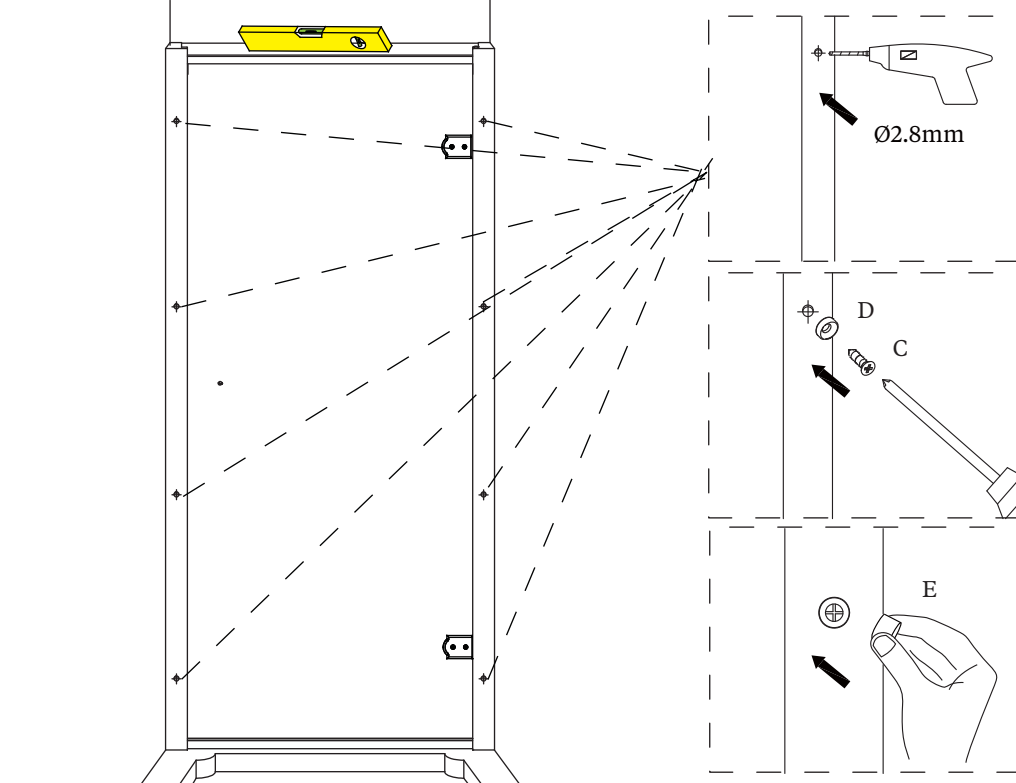



Step 6 - CHECK THAT IF THE DOOR IS VERTICAL OR HORIZONTAL

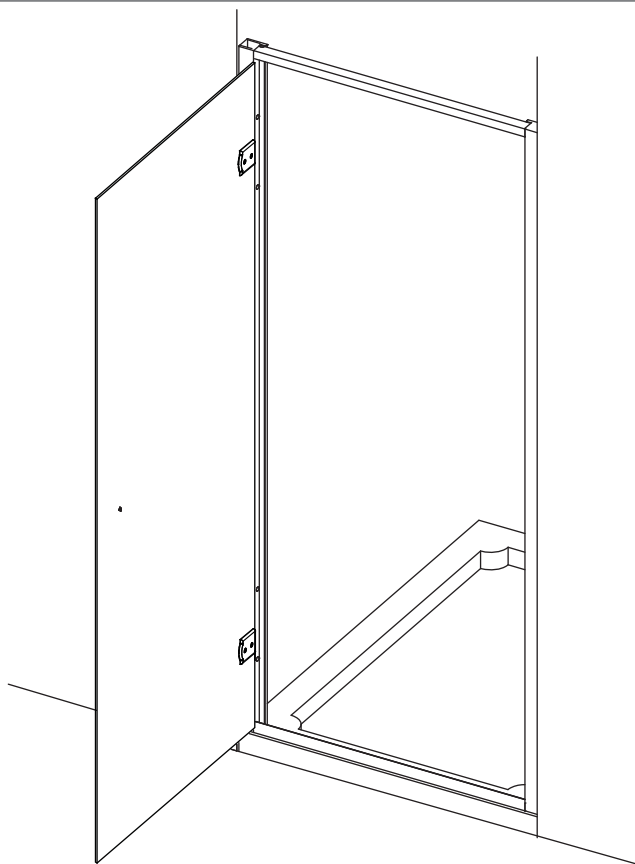

⚠ Only if adjustment is required.

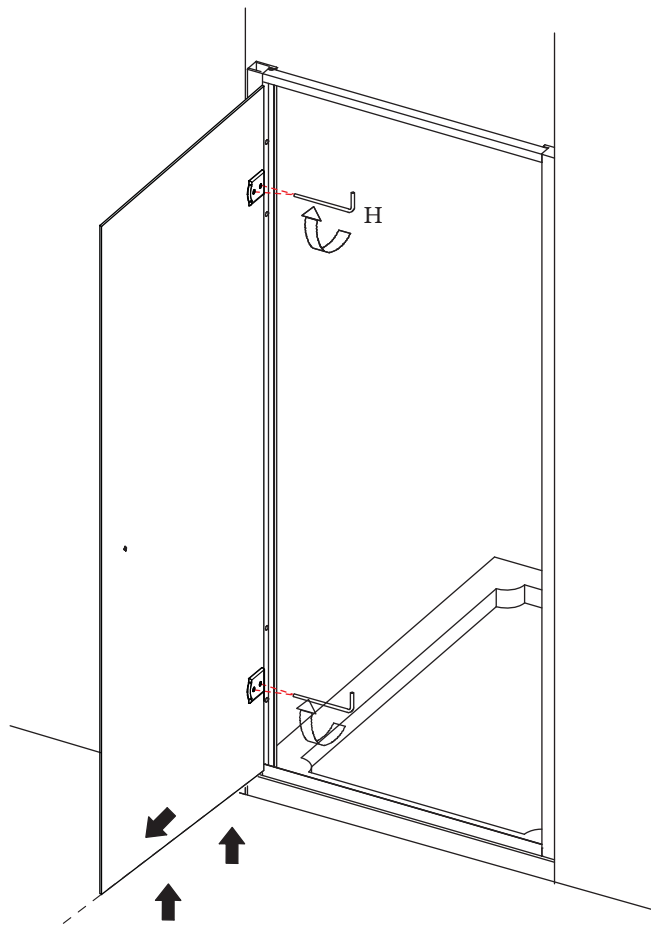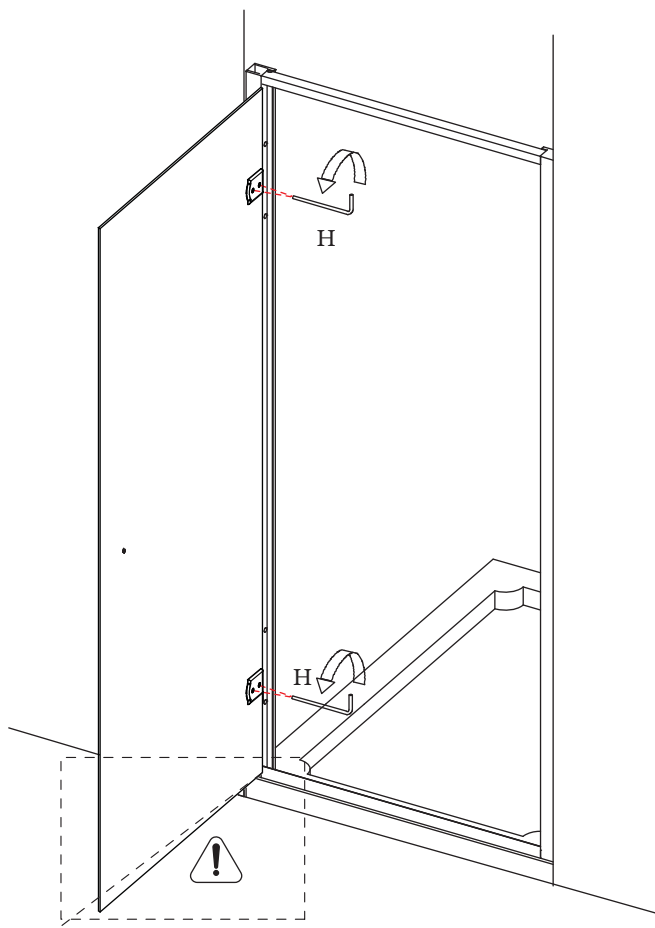


## Step 7

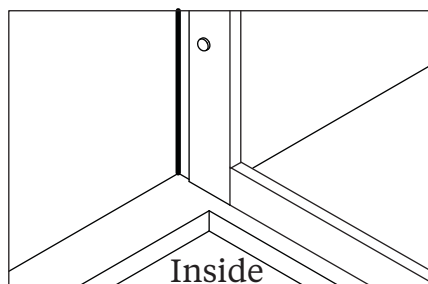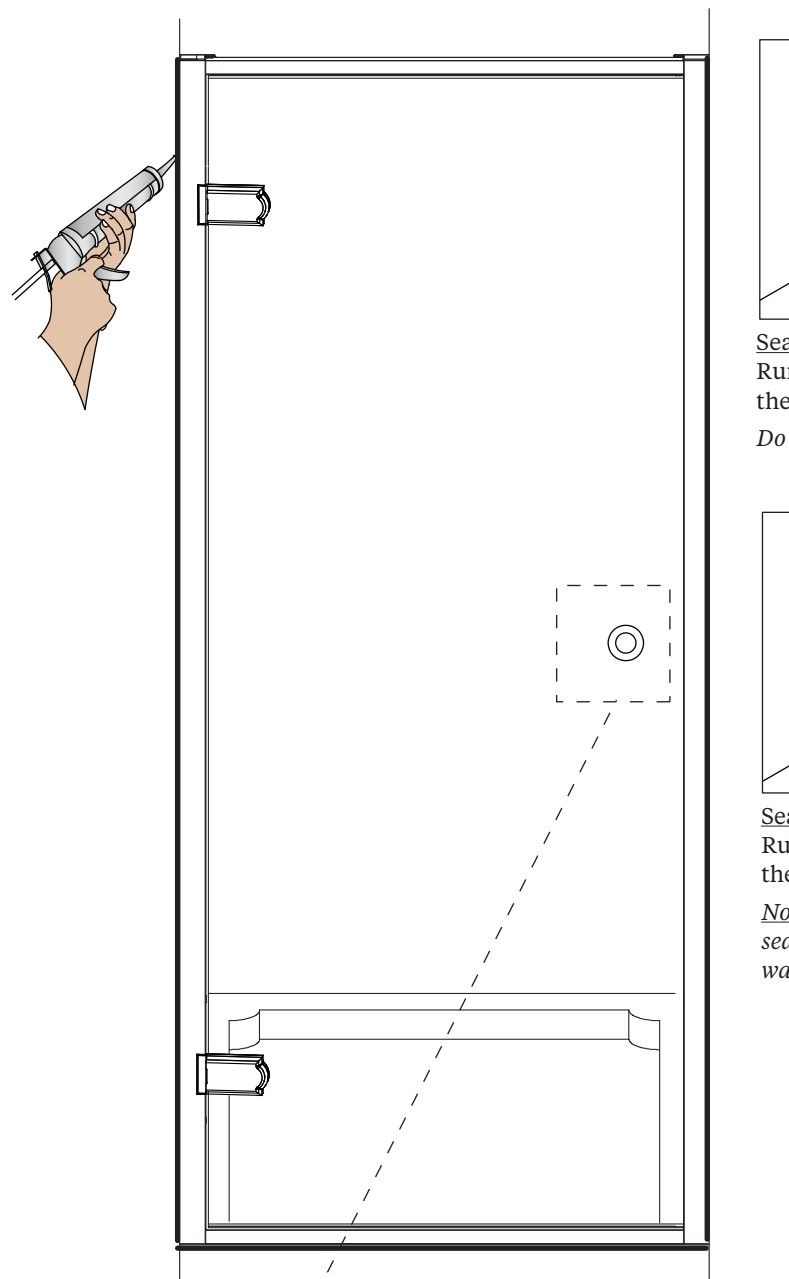

### Sealing inside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Do not seal the enclosure to the tray on the inside.*

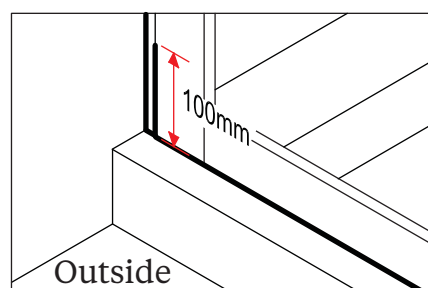

### Sealing Outside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Note: If required you can also run a line of silicone sealant 100mm up the joint where the door slots onto the wall channels.*

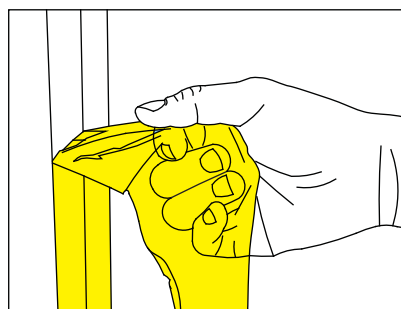

### Remove protecting film


Yellow protective plastic film on profiles are used to protect the plating finish to avoid scratching during installation.

Please remove them before sealing.

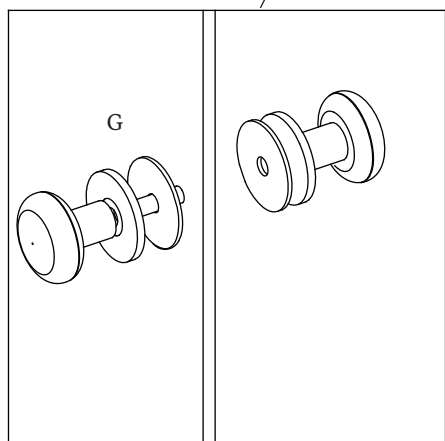

## HINGED DOOR & SIDE PANEL

### Step 1

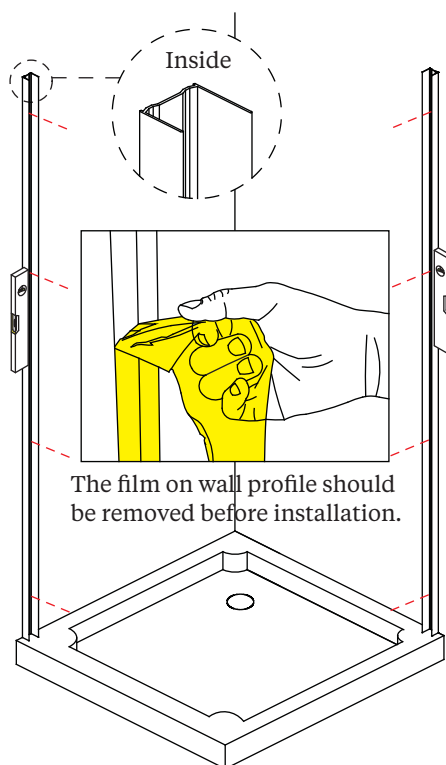


Remove both wall channels from the glass panel frame. *Note: Ensure the longer leg of each wall channel is on the inside of the enclosure when fixing.* Place each wall channel in position on the tray (10 - 15mm in from the outer edge of the tray), use a spirit level to ensure that they are vertical and mark all 8 fixing holes onto the wall.

Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into all of the holes (beyond the thickness of the tile).


Fix the wall channels to the wall using screws (A).

Note: Inject silicone sealant into the holes before inserting the screws to seal the holes.

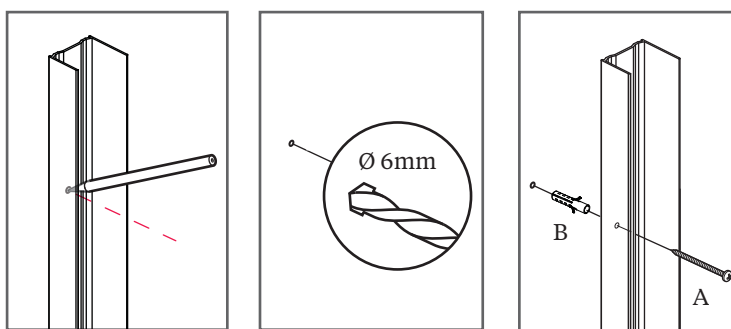

### Step 2


Fit the side panel into the wall channel and position correctly on the tray.

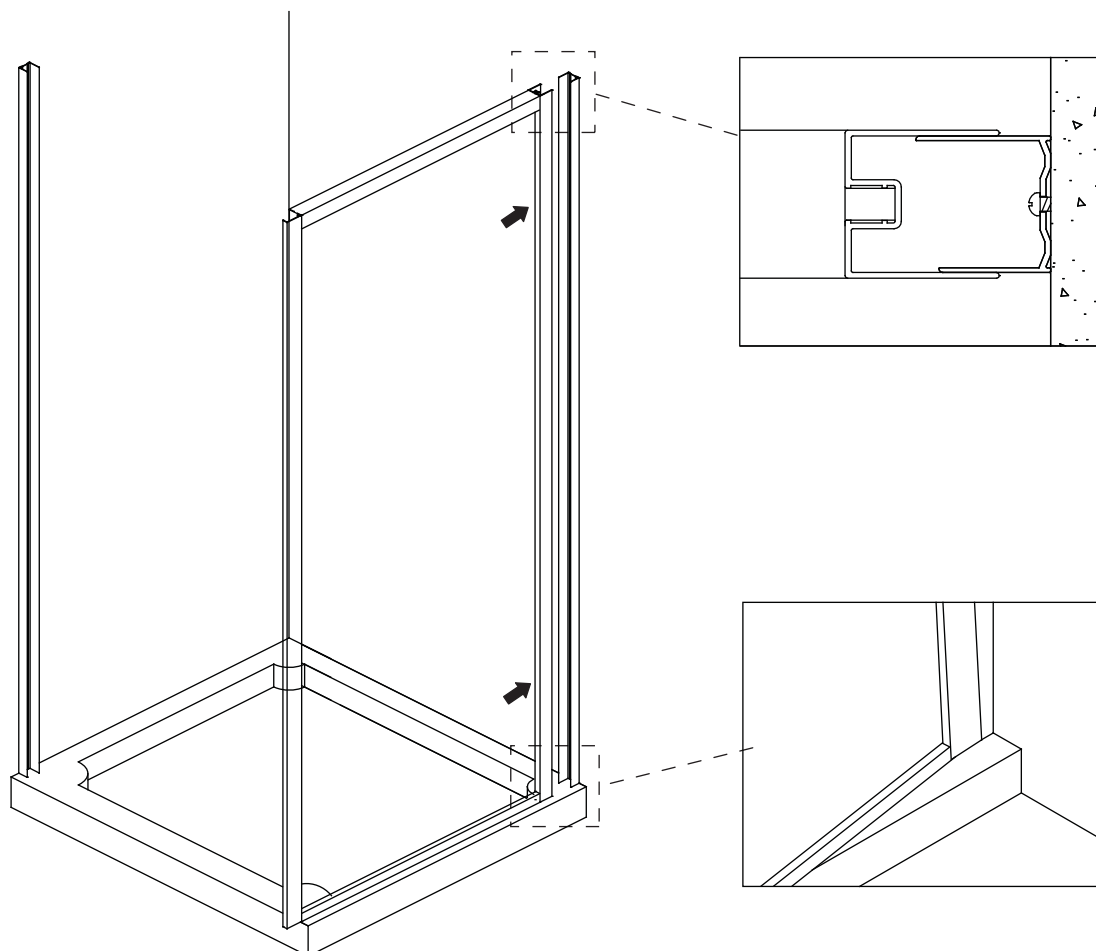



### Step 3


Fit the hinged side frame onto the other wall channel and swing the free end into position on the tray. Push the other frame of door, make it into the frame of side panel. Attach the handle (G) into position.

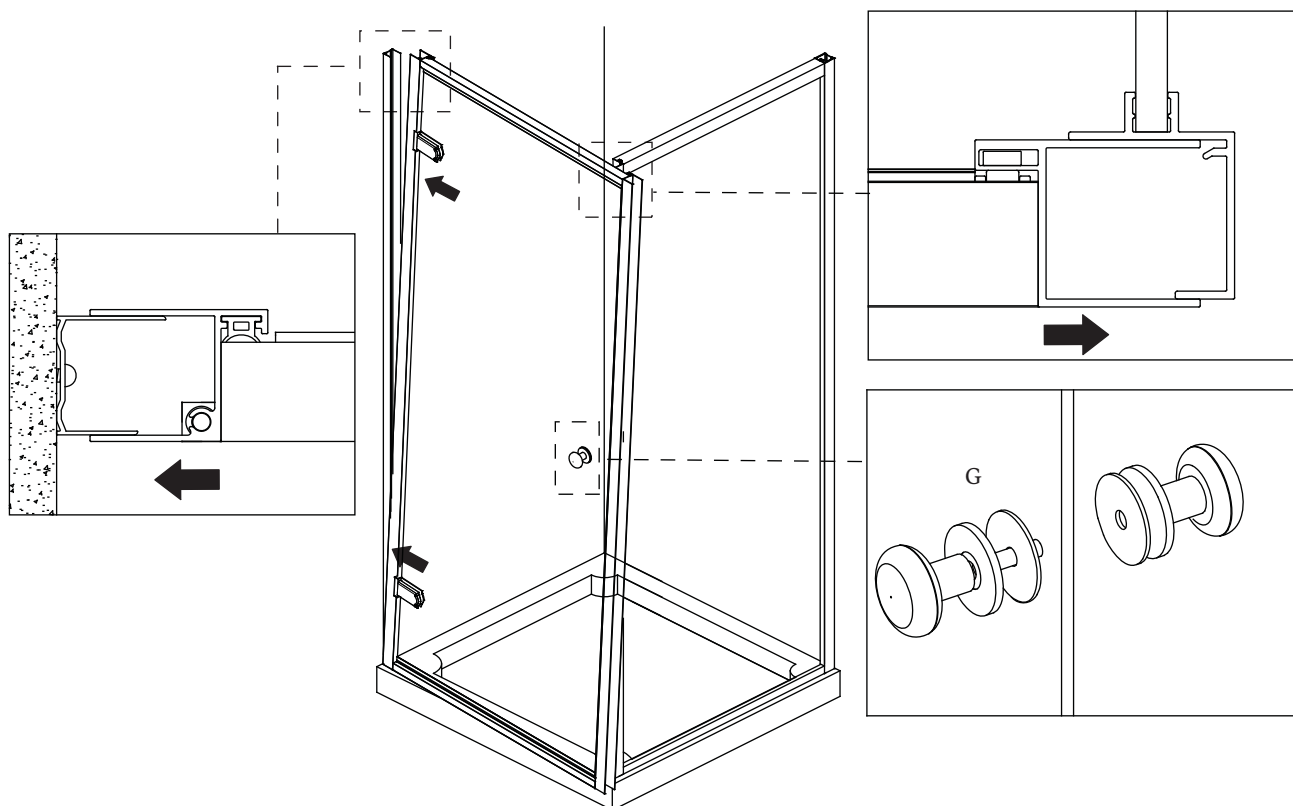

### Step 4


Once you have checked that the glass panel frames centred between the wall channels and also sit horizontally and vertically, fix the glass panel frames to the wall channels.

From inside, drill 4 holes through the glass panel frame (*in the marked positions*) into the wall channels using a 2.8mm drill bit. Fix using washers (D), screws (C) and screw on the covers (E).

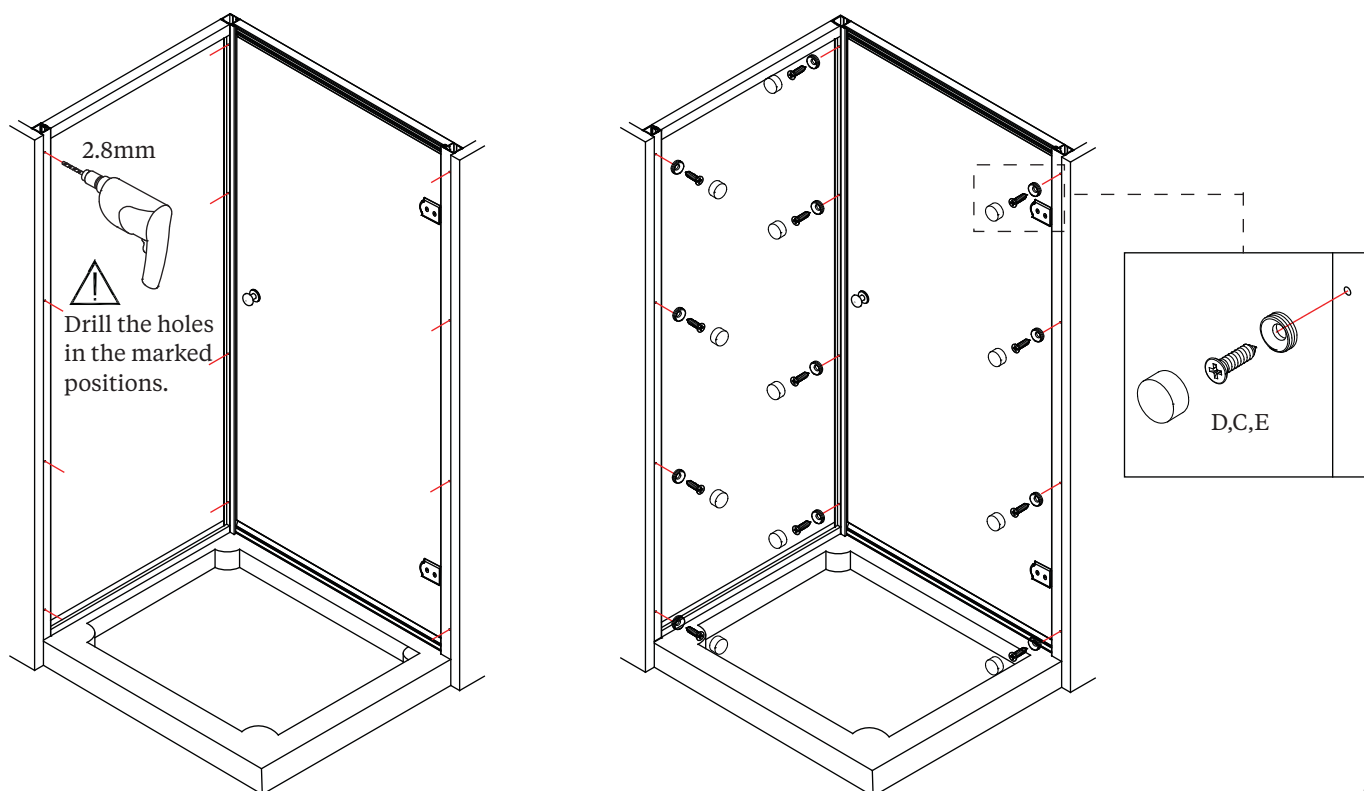


## Step 5



Push on the 8 hole caps (F).

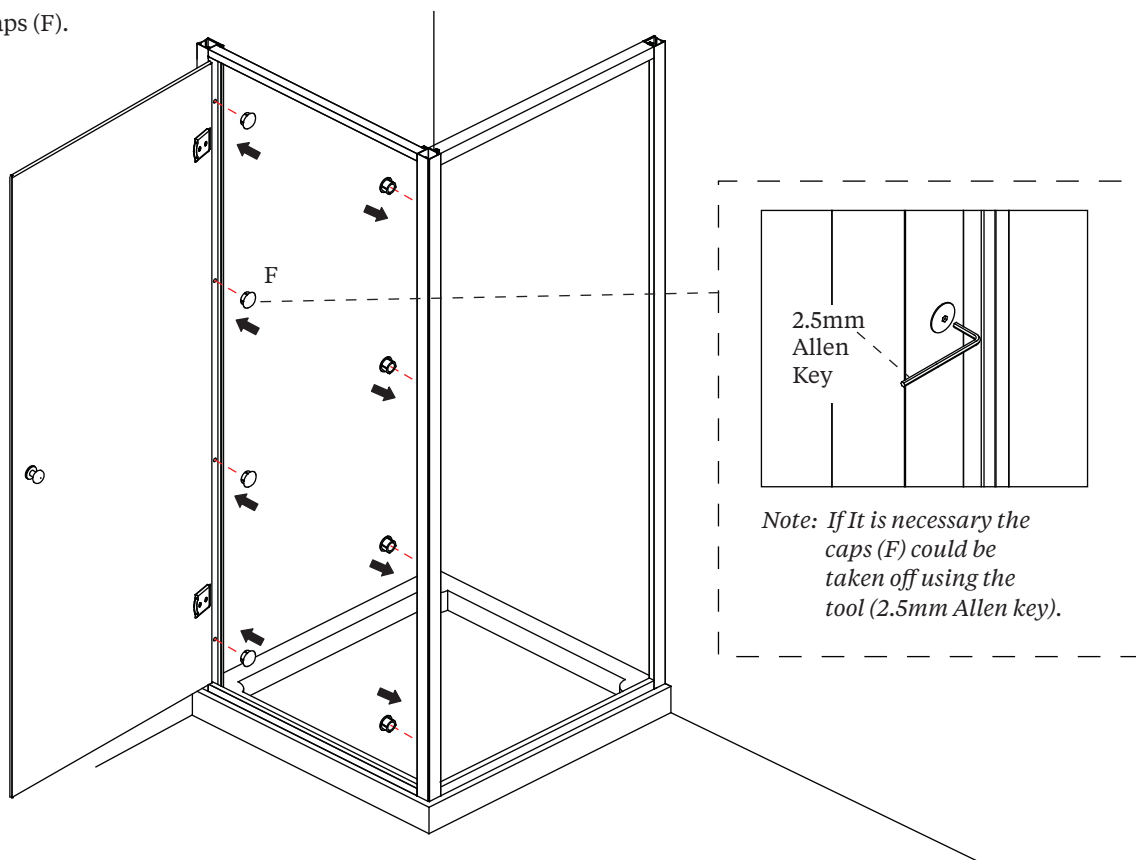

⚠ Only if adjustment is required.

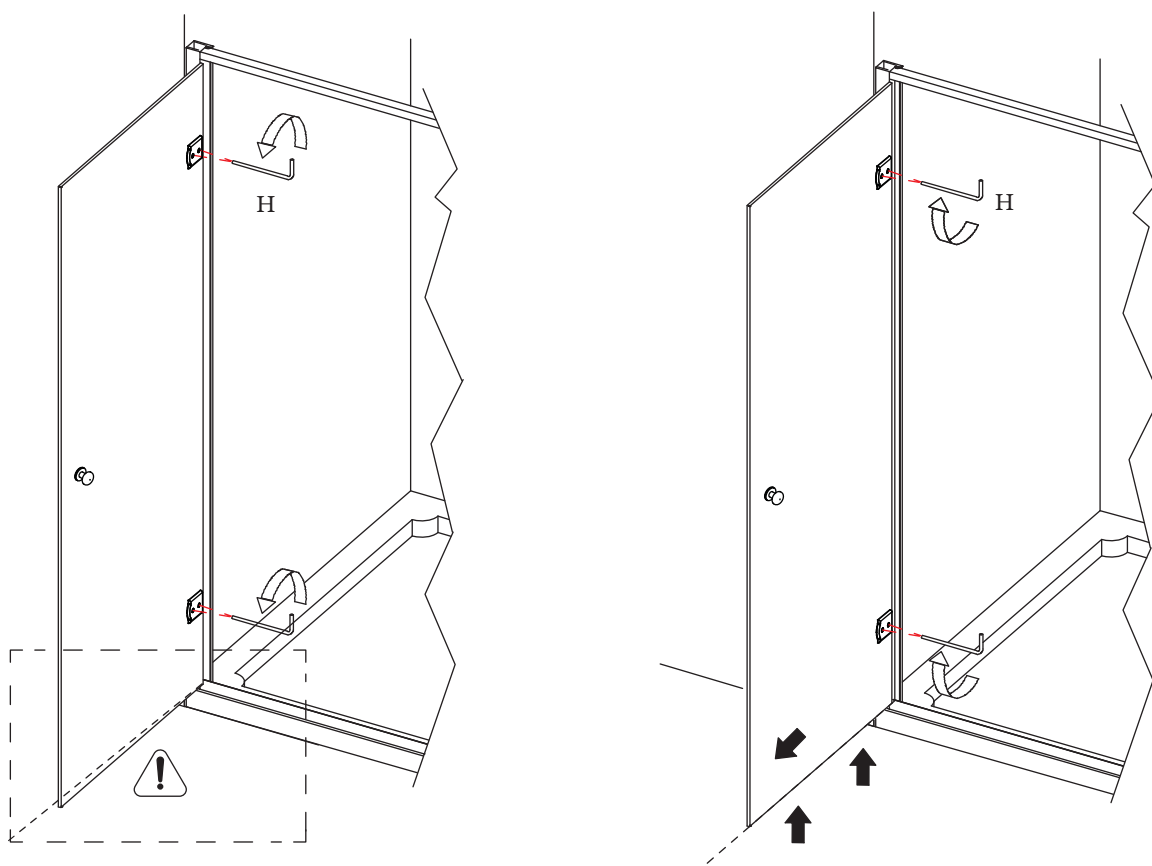


Step 6

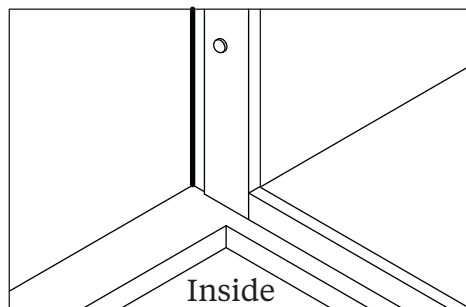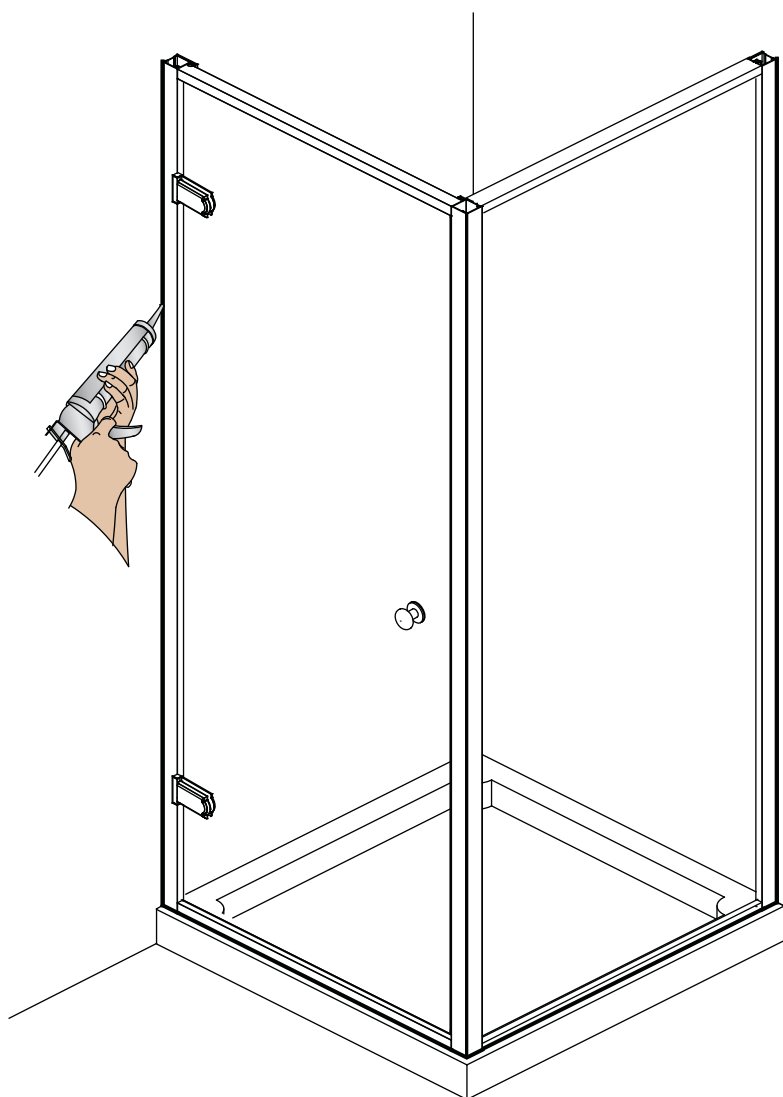

Sealing inside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Do not seal the enclosure to the tray on the inside.*

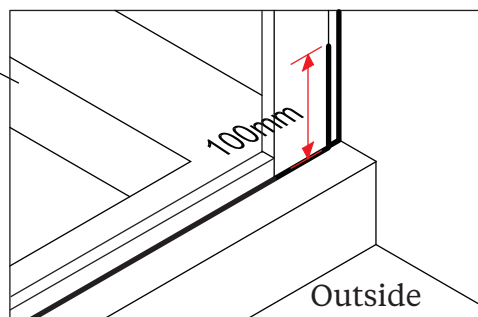

Sealing Outside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.

*Note: If required you can also run a line of silicone sealant 100mm up the joint where the door slots onto the wall channels.*

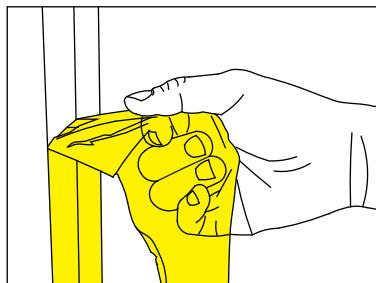

Remove protecting film

Yellow protective plastic film on profiles are used to protect the plating finish to avoid scratching during installation.

Please remove them before sealing.





Beautifully  
Traditional


ARCADE™

Arcade 800mm Hinge Door - nickel  
Arcade 900mm Hinge Door - nickel  
Arcade 800mm Side Panel - nickel  
Arcade 900mm Side Panel - nickel

ARC50  
ARC51  
ARC52  
ARC53

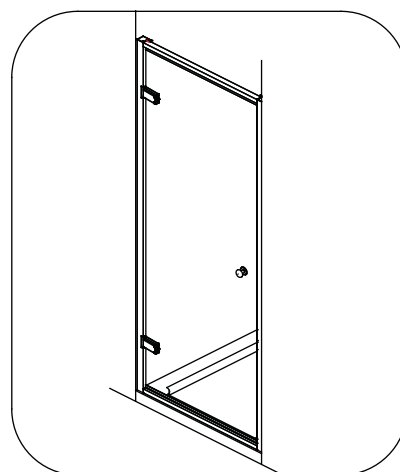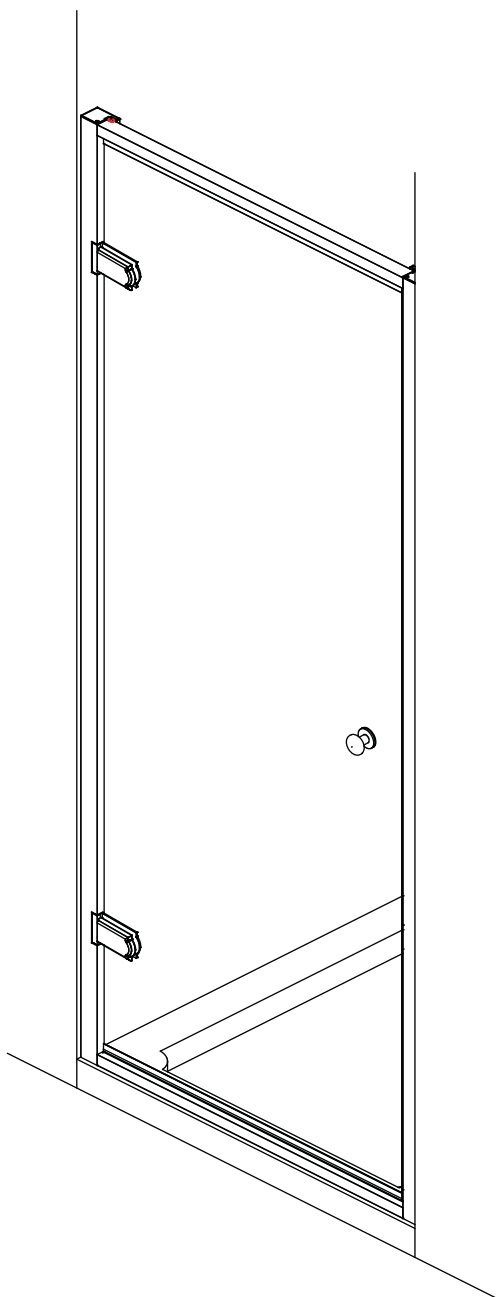

Hinged door in alcove

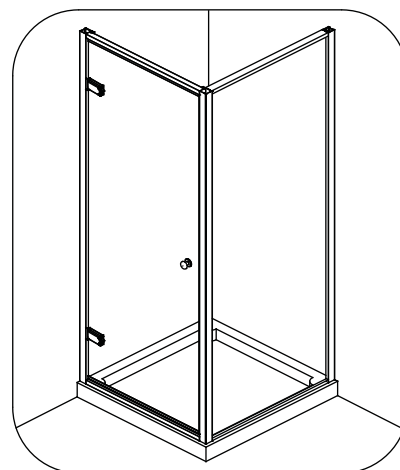

Hinged door & side panel

## INSTALLATION INSTRUCTIONS

### IMPORTANT - Please read before installation

Please read these instructions carefully before starting installation and keep in a safe place for future reference.

Check the contents of the pack carefully before installation. Arcade will not be held responsible for any de-fit / re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:


1. Full details are supplied to the manufacturer;
2. The enclosure has not been modified or tampered with;
3. The manufacturer is informed of any damage/shortages prior to installation.

We do not accept responsibility for any problems that may occur through incorrect installation.


The success of the installation and operation of any shower enclosure is, of course, dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

#### VERY IMPORTANT

You must complete all tiling and grouting, and the shower tray MUST be level and fully sealed to the tiles before installation. If you do not fit the enclosure onto a tiled surface, or seal the tiles to the tray before installation, water may soak into the wall behind the wall profiles.

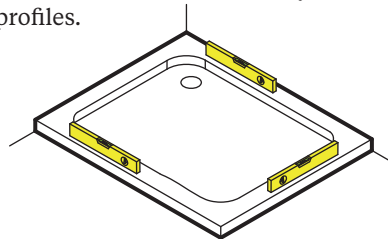

Yellow protective plastic film has been placed on the metal profiles. This film should not be removed until installation is complete. This is to protect the plating finish and prevent profiles being scratched during fitting.

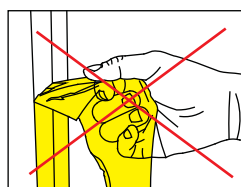

A pair of gloves are also provided to wear during installation, this will reduce oils and silicon stains being transferred during installation.

### INSTALLATION - Advice and safety

These products come with the two wall channels pushed onto each side of the glass panel frame. The side panels do NOT come with wall channels, you must use one of the channels from the door.

The installation instructions are based on typical use and conditions.

The hinged door is designed to open outwards only.

Please follow the installation instructions relevant to your enclosure.

These hints have been prepared for your guidance, you must exercise due care at all times.

For Health and Safety 2 people must carry out the installation of this enclosure.

Handle glass with care. Although the glass supplied is toughened safety glass (EN12150), impacts can damage both the glass and the frame.

#### Warning!

Please check for any hidden pipes or cables before drilling holes in the wall.

To stop the drill bit slipping, masking tape can be applied to the tiles when preparing the holes.

When using power tools always follow the manufacturers user instructions.

Do not sit the enclosure on a bed of silicone, as this will also stop any water from draining back into the tray.

**DO NOT SEAL THE ENCLOSURE TO THE TRAY ON THE INSIDE.**

If the enclosure is sealed to the tray on the inside, any water that may get into the framework will not be able to drain back into the tray, this may cause the enclosure to leak.

Leave the silicone sealant to dry for 24 hours before using the enclosure.





### CARE AND CLEANING

Do not use solvents or abrasive material or chemicals to clean the enclosure.

Only clean using soapy water and a soft cloth, rinse thoroughly afterwards.

### INSTALLATION - left & right


These products are reversible for left or right hand fitting, simply turn the door or panel up side down.

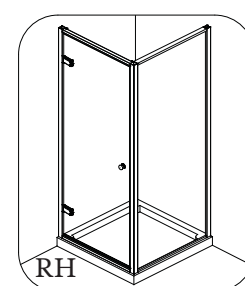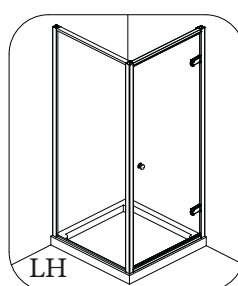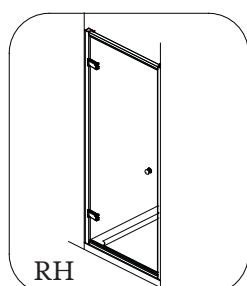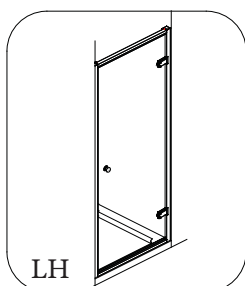

CONTENTS


HINGED DOOR IN ALCOVE

See pages 3 - 6

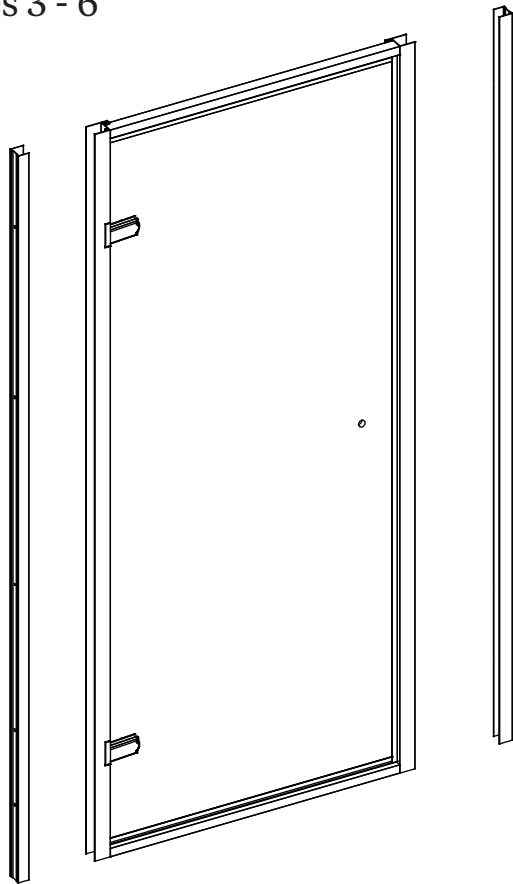

HINGED DOOR & SIDE PANEL

See pages 7 - 10

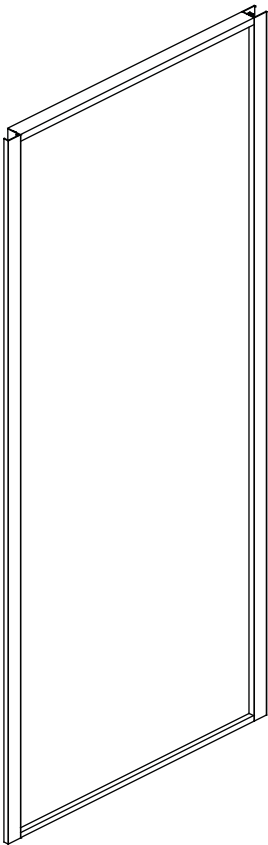


A



ST3.9\*45mm Screw x 8

B

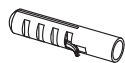

Wall Plug x 8

C



ST3.9\*13mm Screw x 8

D



Washer x 8

E




Cover x 8

F



Cap x 8

G

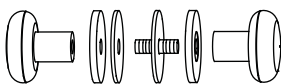

Handle x 1

H



3mm Allen key x 1

I



Gloves x 1

C



ST3.9\*13mm Screw x 4

D



Washer x 4

E




Cover x 4

Tools and equipment needed

Drill, 6mm Masonry drill bit, 2.8mm General drill bit, Philips screwdriver, Spirit level, Pencil, Tape measure, Silicone sealant.

## HINGED DOOR IN ALCOVE

### Step 1 - FITTING AND POSITIONING WALL CHANNEL

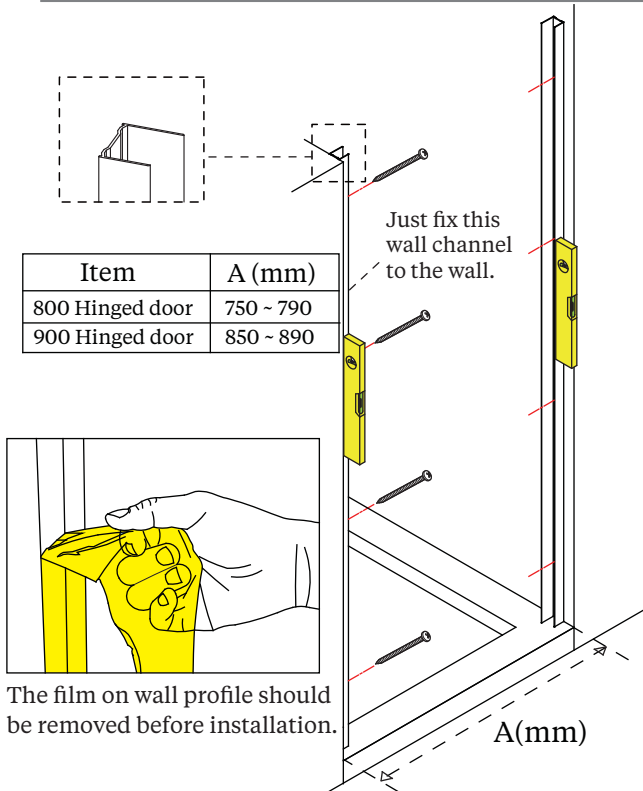


Remove both wall channels from the glass panel frame. Note: Ensure the longer leg of each wall channel is on the inside of the enclosure when fixing. Place each wall channel in position on the tray (10 - 15mm in from the outer edge of the tray), use a spirit level to ensure that they are vertical and mark all 8 fixing holes onto the wall.

Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into all of the holes (beyond the thickness of the tile).


On Hinged side only: Fix the wall channel to the wall using screws (A).

Note: Inject silicone sealant into the holes before inserting the screws to seal the holes.

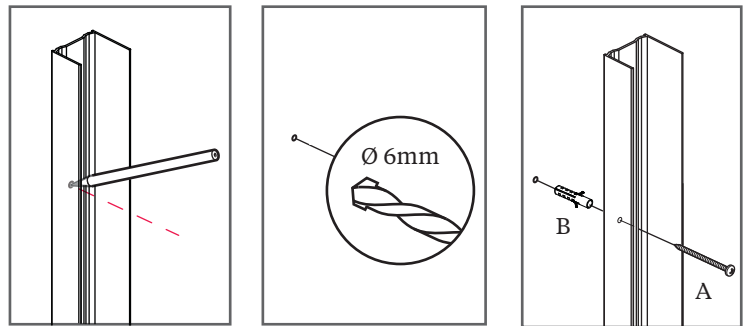


### Step 2

Push the remaining wall channel back onto the glass panel frame on the opening/handle side of the door (with the longer leg on the inside of the enclosure).

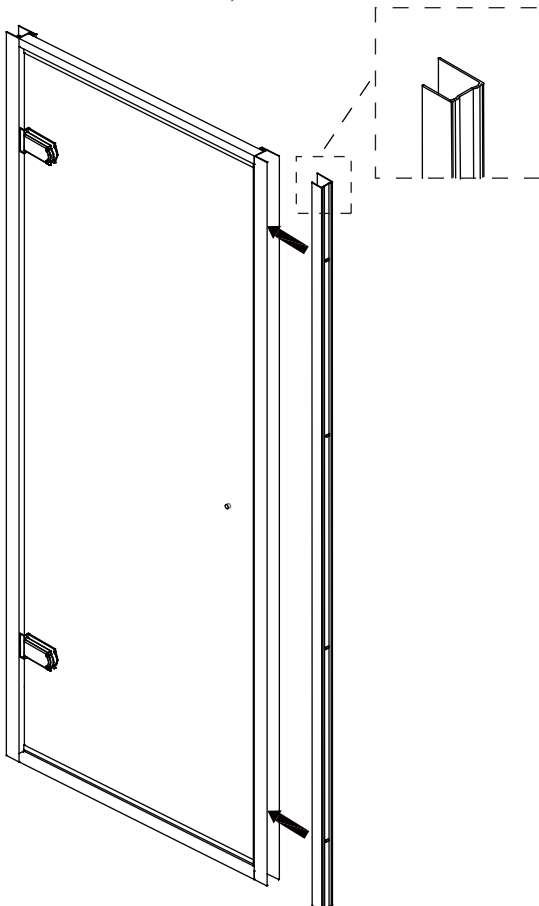

### Step 3


Insert the door into the 'fixed' wall channel and swing the free end into position on the opposite wall.

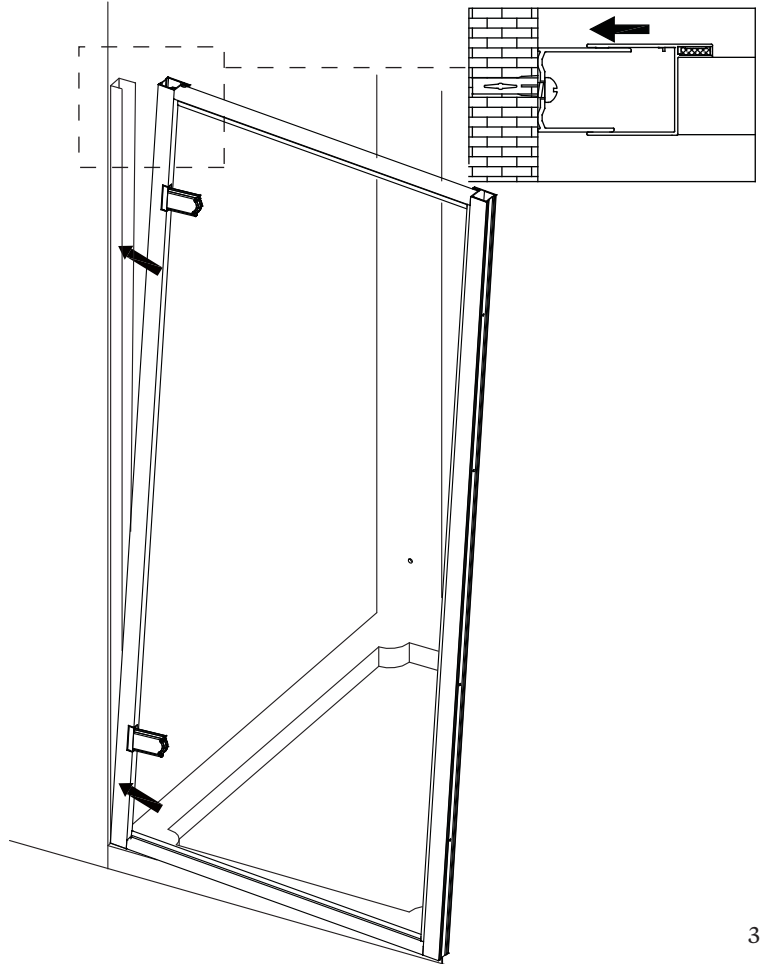

## Step 4

Line up the fixing holes on the second wall channel with those on the wall and fix through the frame using screws (A) and push on all 8 hole caps (F).


Note: inject silicone sealant into the holes before inserting the screws to seal the holes.

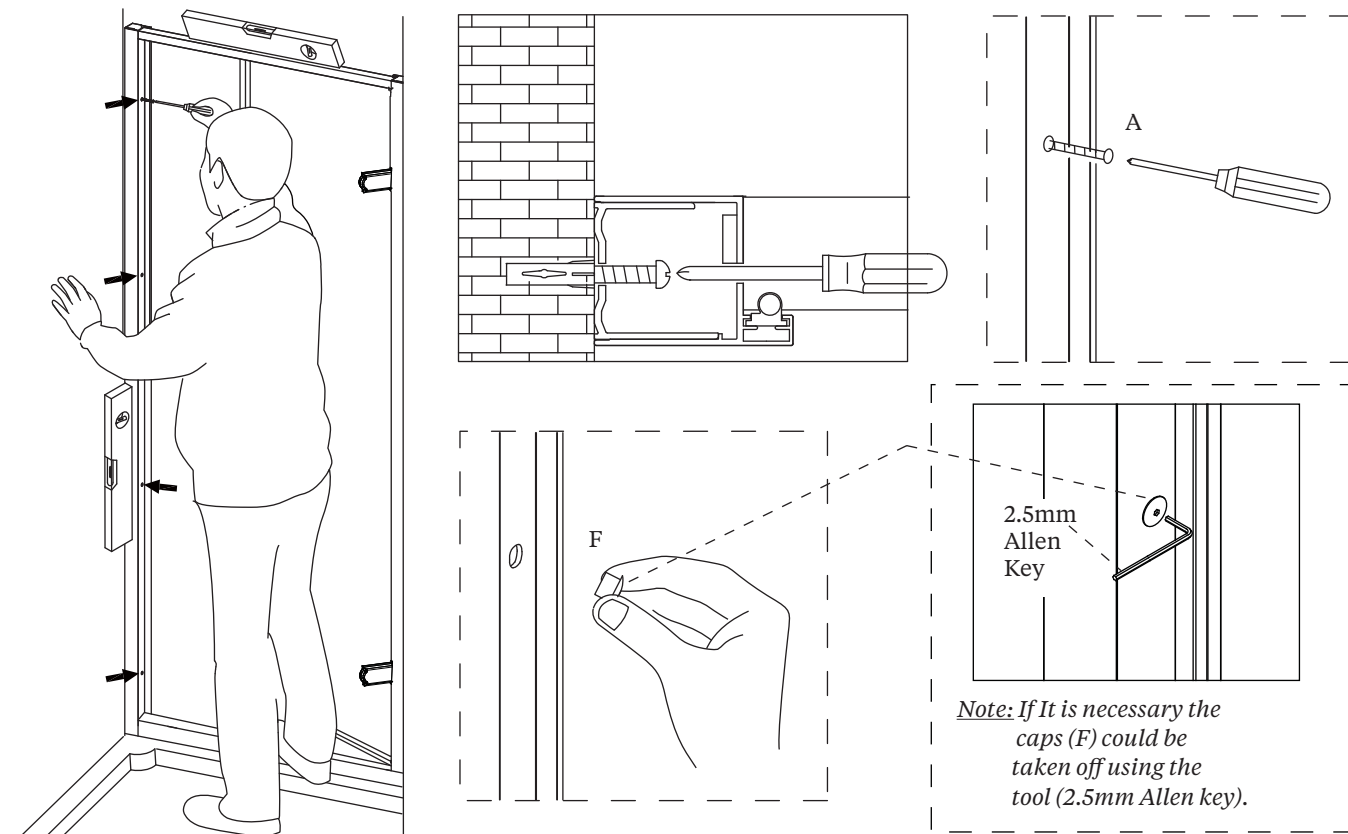

## Step 5


Once you have checked that the glass panel frames centred between the wall channels and also sit horizontally and vertically, fix the glass panel frames to the wall channels.

From inside, drill 4 holes through the glass panel frame ( in the marked positions) into the wall channels using a 2.8mm drill bit. Fix using washers (D), screws (C) and screw on the covers (E).


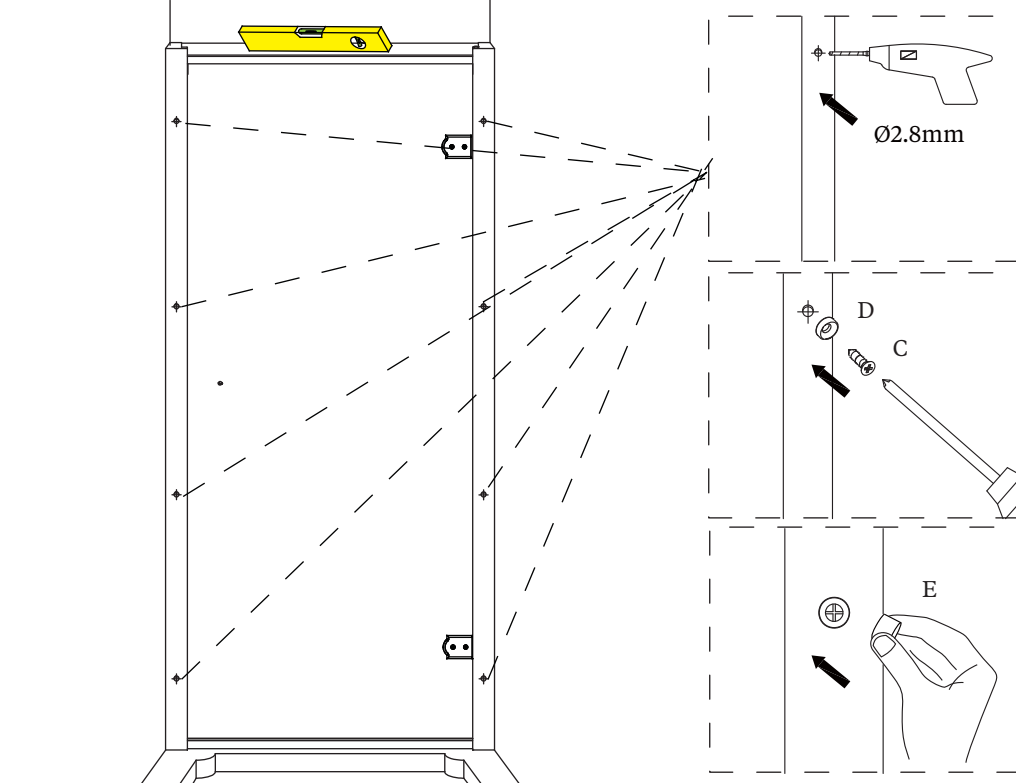






Step 6 - CHECK THAT IF THE DOOR IS VERTICAL OR HORIZONTAL

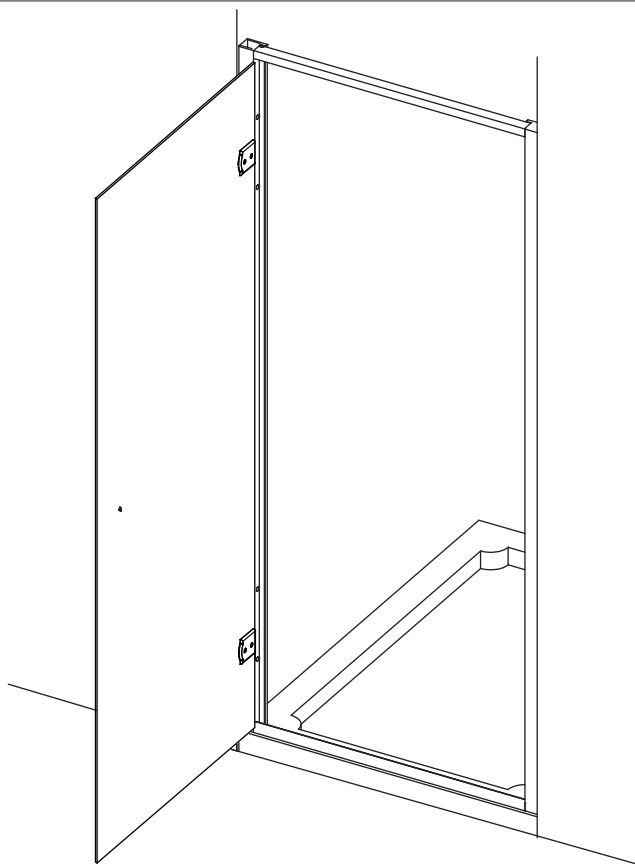

⚠ Only if adjustment is required.

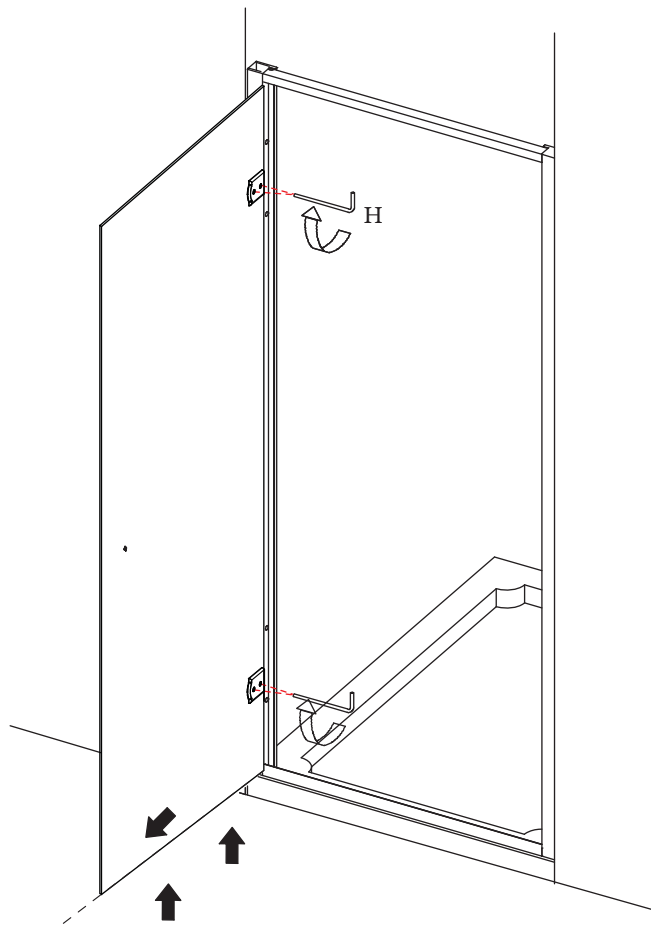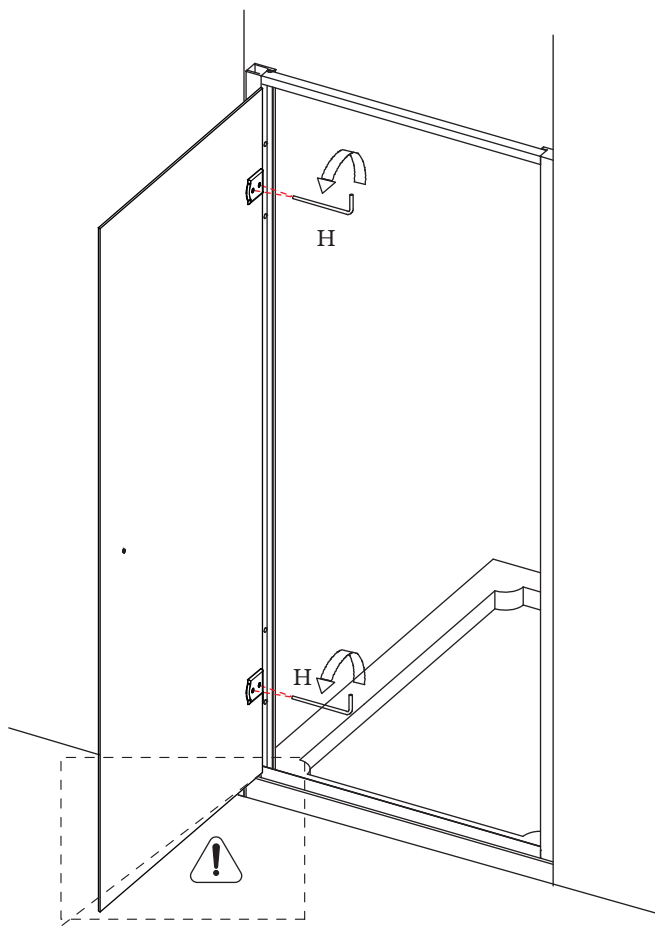


## Step 7

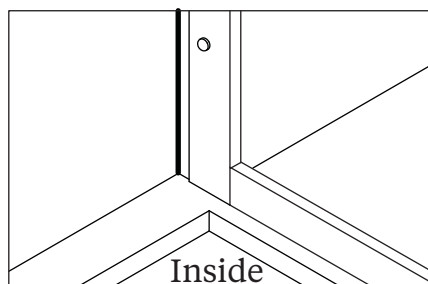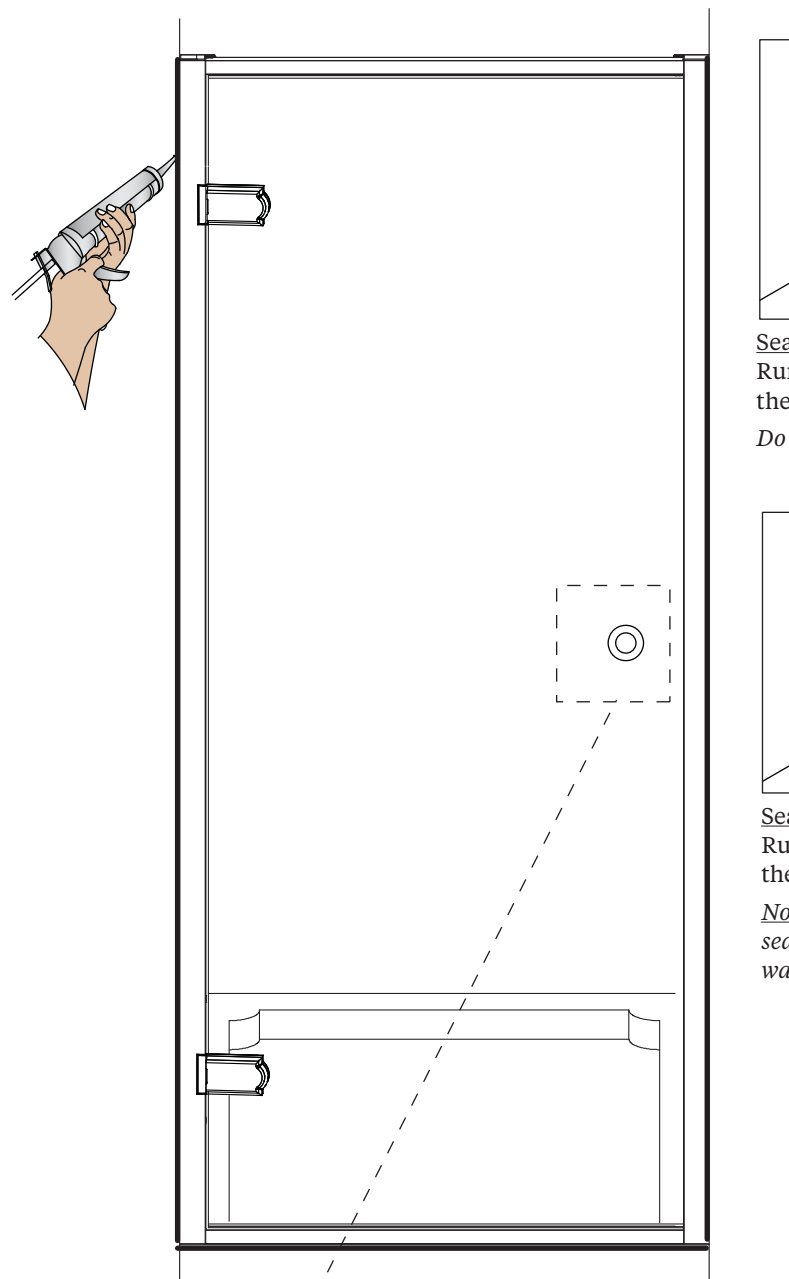

### Sealing inside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Do not seal the enclosure to the tray on the inside.*

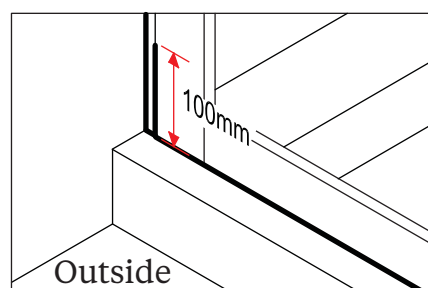

### Sealing Outside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Note: If required you can also run a line of silicone sealant 100mm up the joint where the door slots onto the wall channels.*

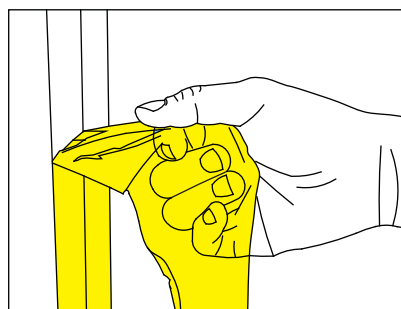

### Remove protecting film


Yellow protective plastic film on profiles are used to protect the plating finish to avoid scratching during installation.

Please remove them before sealing.

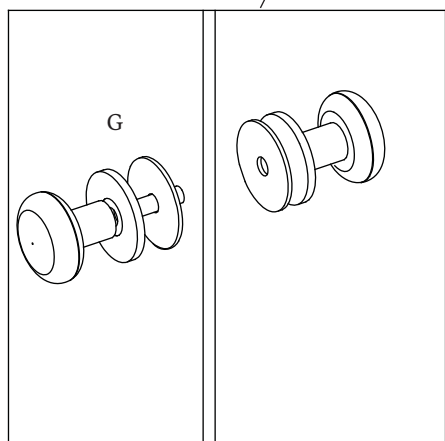

## HINGED DOOR & SIDE PANEL

### Step 1

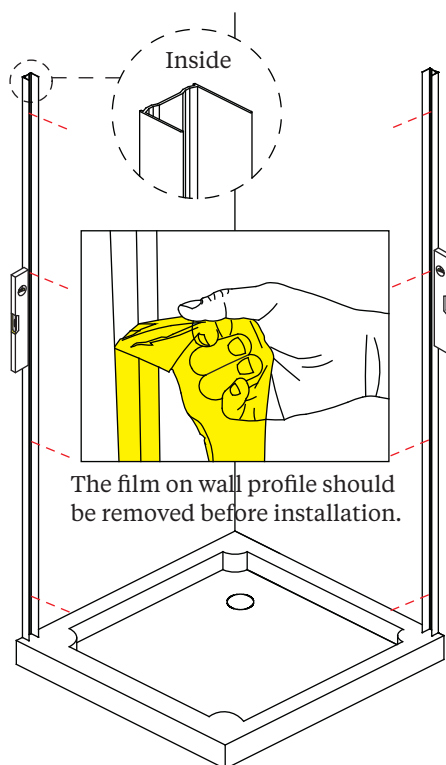


Remove both wall channels from the glass panel frame. *Note: Ensure the longer leg of each wall channel is on the inside of the enclosure when fixing.* Place each wall channel in position on the tray (10 - 15mm in from the outer edge of the tray), use a spirit level to ensure that they are vertical and mark all 8 fixing holes onto the wall.

Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into all of the holes (beyond the thickness of the tile).


Fix the wall channels to the wall using screws (A).

Note: Inject silicone sealant into the holes before inserting the screws to seal the holes.

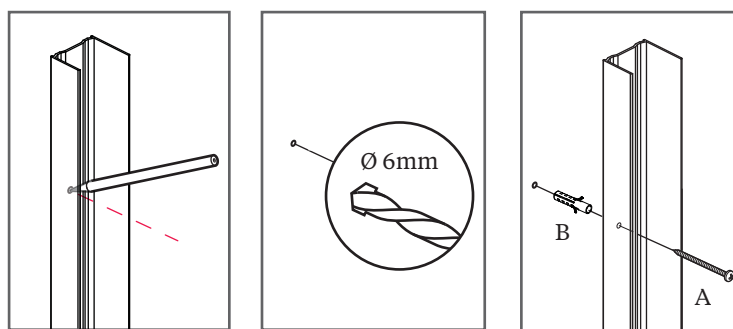


### Step 2

Fit the side panel into the wall channel and position correctly on the tray.

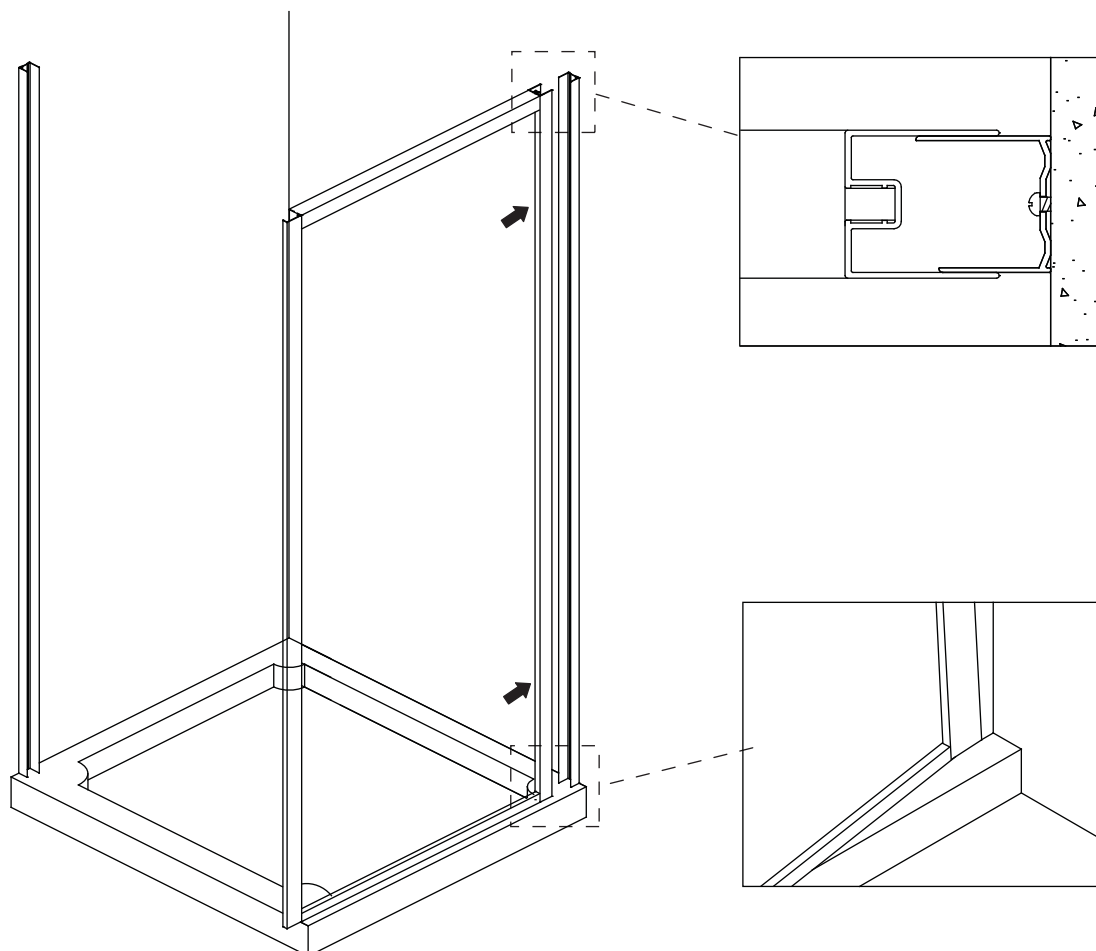

### Step 3


Fit the hinged side frame onto the other wall channel and swing the free end into position on the tray. Push the other frame of door, make it into the frame of side panel. Attach the handle (G) into position.

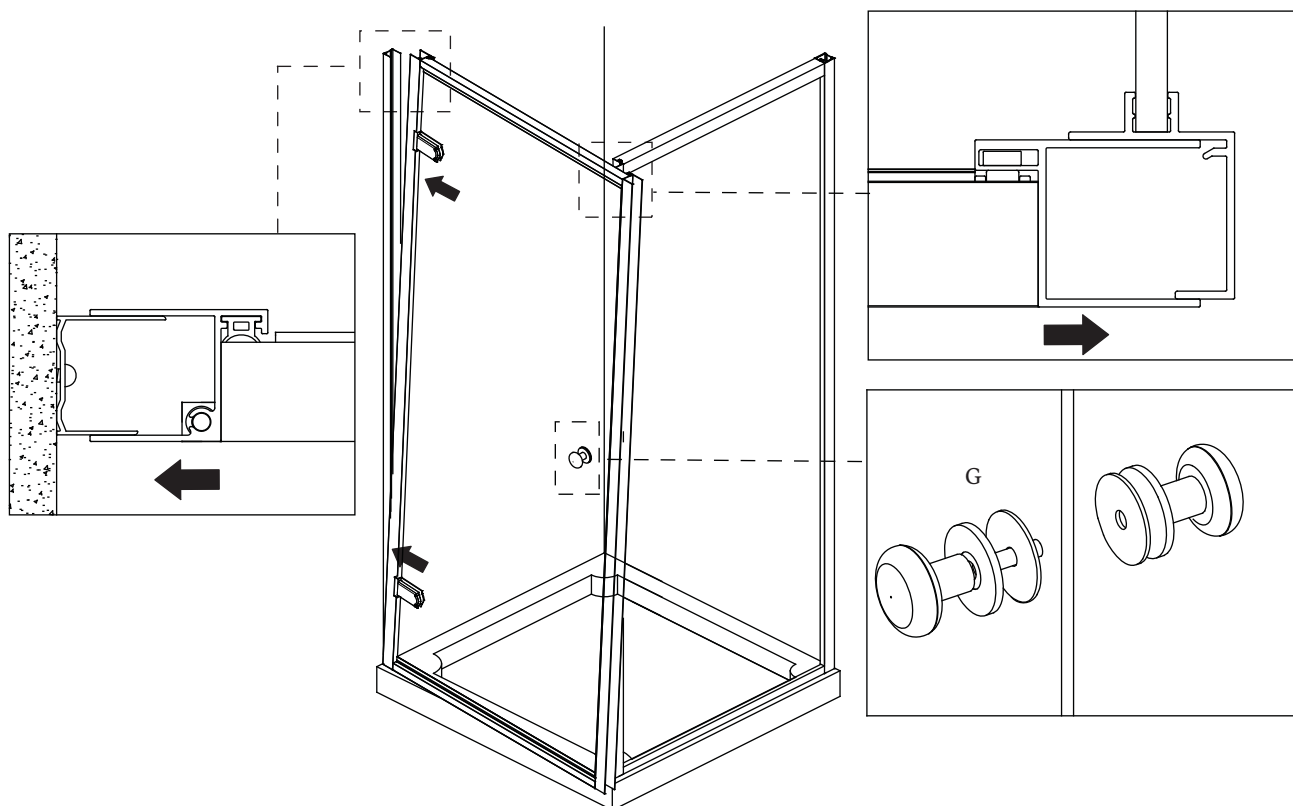

### Step 4


Once you have checked that the glass panel frames centred between the wall channels and also sit horizontally and vertically, fix the glass panel frames to the wall channels.

From inside, drill 4 holes through the glass panel frame (*in the marked positions*) into the wall channels using a 2.8mm drill bit. Fix using washers (D), screws (C) and screw on the covers (E).

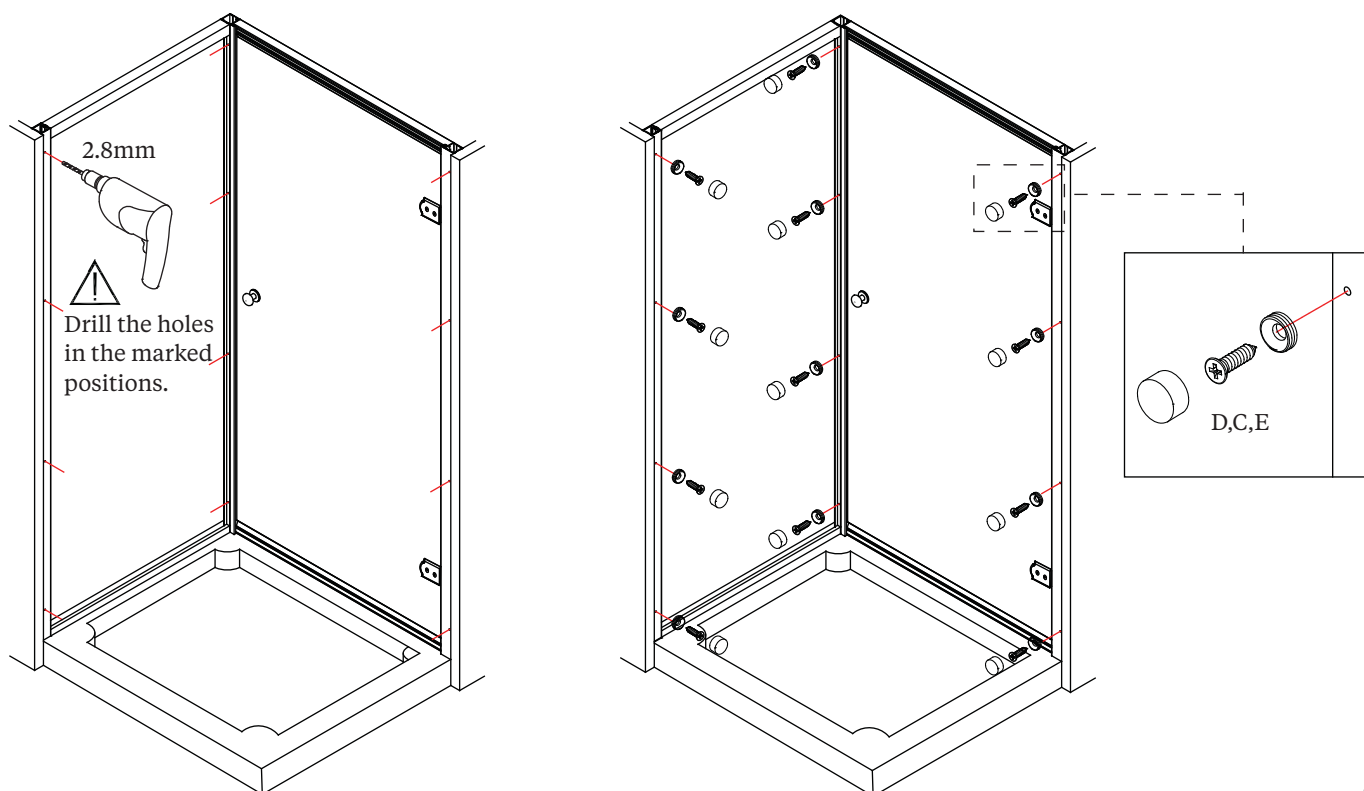


## Step 5



Push on the 8 hole caps (F).

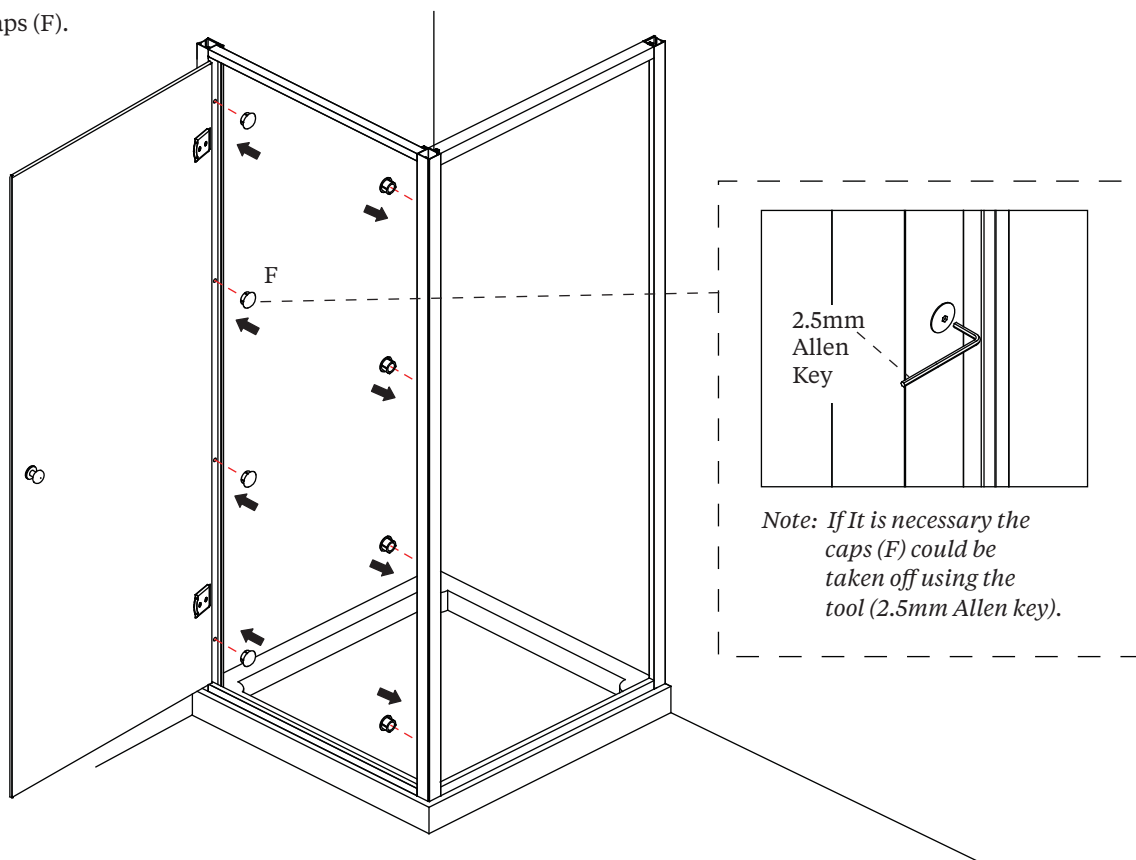

⚠ Only if adjustment is required.

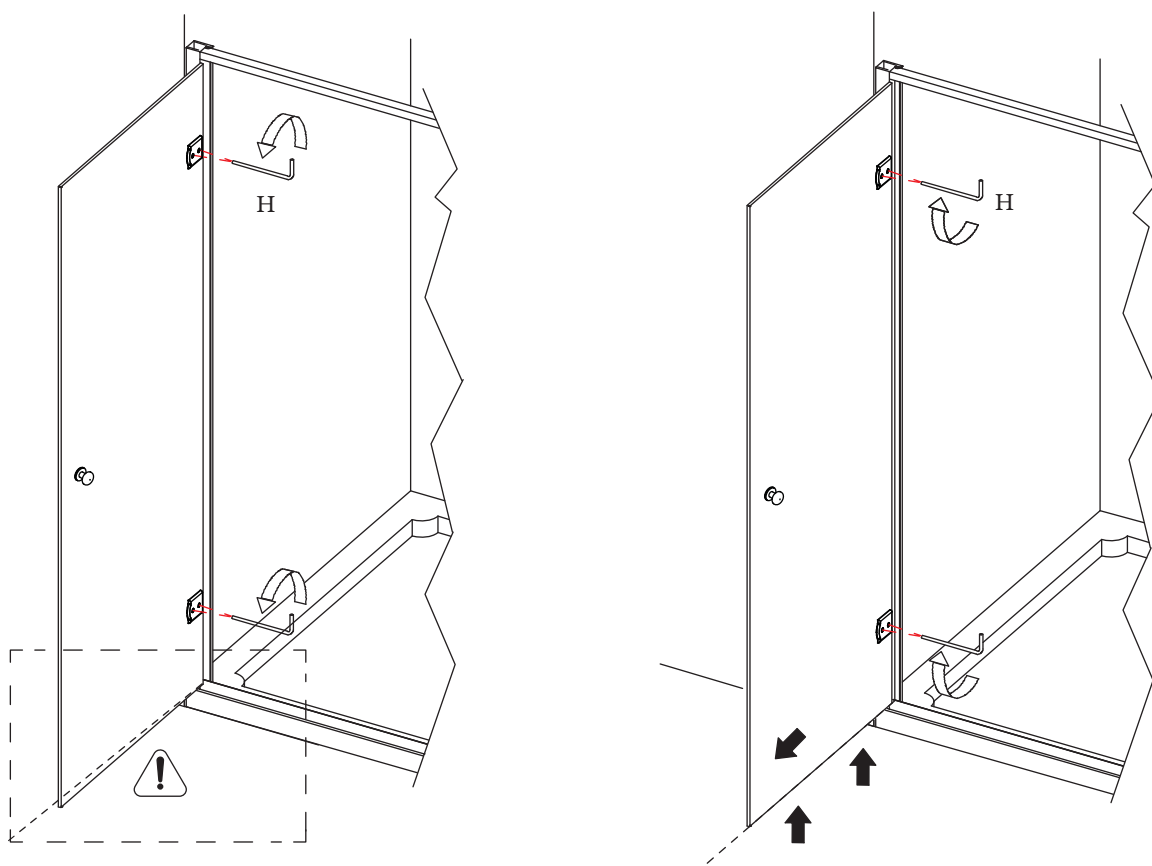


Step 6

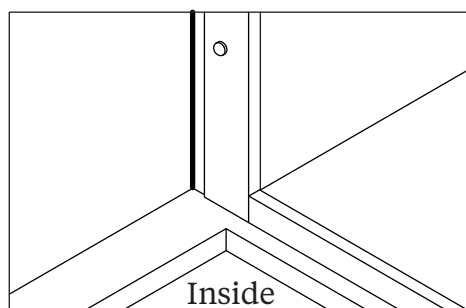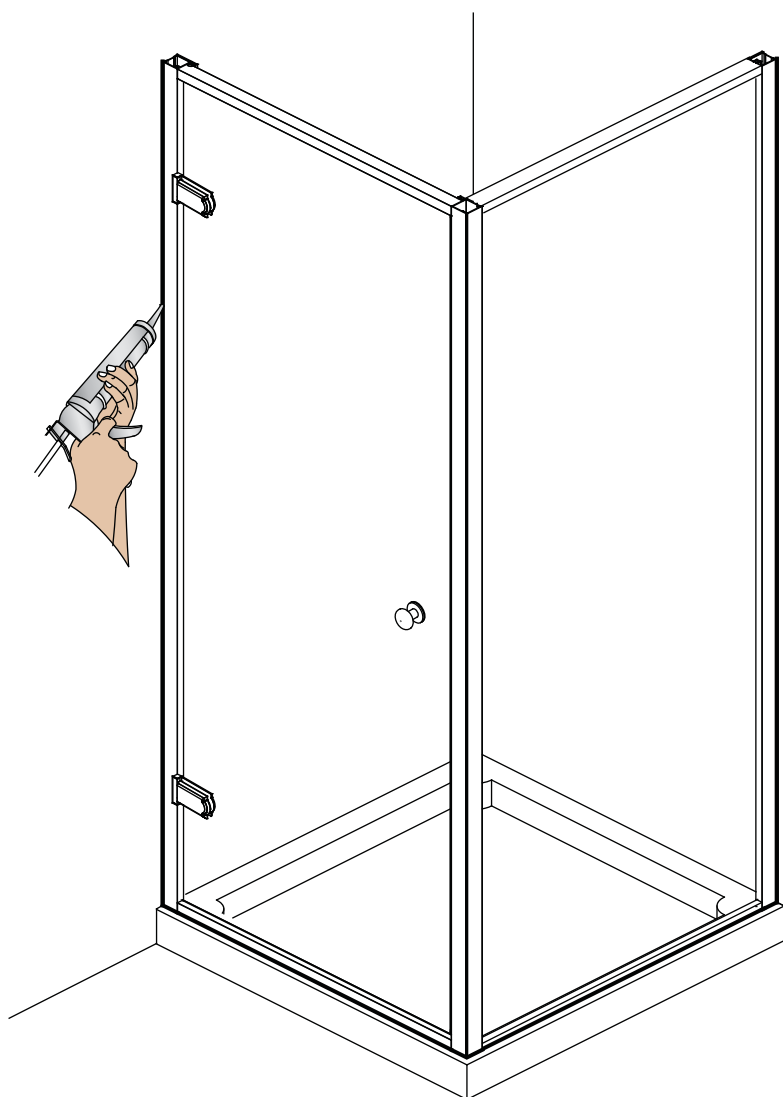

Sealing inside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.


*Do not seal the enclosure to the tray on the inside.*

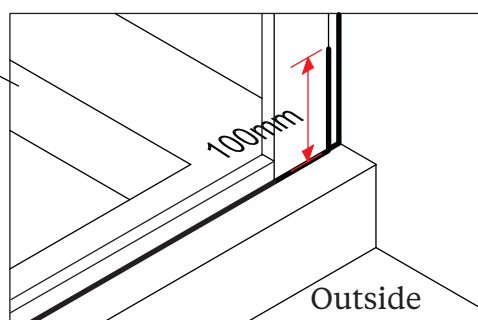

Sealing Outside:

Run a line of silicone sealant from top to bottom down the joint between the wall channels and tiles.

*Note: If required you can also run a line of silicone sealant 100mm up the joint where the door slots onto the wall channels.*

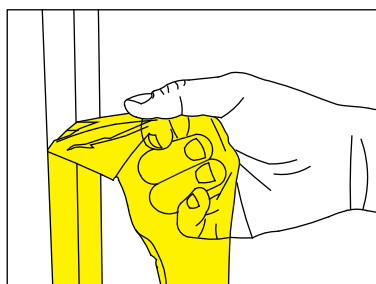

Remove protecting film

Yellow protective plastic film on profiles are used to protect the plating finish to avoid scratching during installation.

Please remove them before sealing.

