

INSTALLATION INSTRUCTIONS

1 x ALBANY SLIMLINE LED MIRROR IP44




CODE: SE30496C0

IMPORTANT: Please read these instructions before commencing installation and retain for furture reference.

Components

Tools required

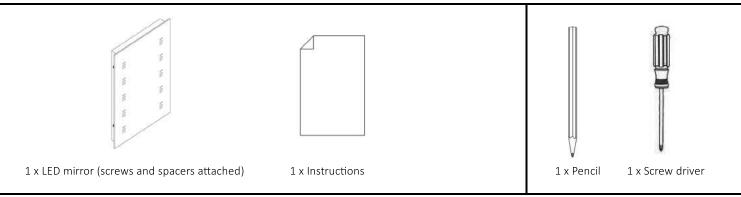

Important Safety Information

Please read these instructions carefully before attempting to install this product. It is advisable to keep these instructions in a safe place for future reference.

We recommend that you consult a qualified electrician. All electrical installation must be carried out in accordance with current IEE wiring regulations (BS7671).

These products must not be modified, if any modification are made, it may invalidate the warranty and may render the product unsafe.

This product should be used indoors.

• If in doubt installation must be carried out by a qualified electrician.

RoHS CE

- Install on smooth flat surface(s) only.
- Do not exceed or stretch the cable length of each LED wire.
- There are 60 x 0.07W high power LED's in this mirror.
- (W)500mm x (H)700mm x (D)30mm.
- Please make sure the LED's are working correctly before commencing installation.

Safety Instructions

- 1. Before commencing installation or maintenance, isolate the main electrical supply for the appropriate circuit at the fuse board.
- 2. This product is only suitable for connecting to a 240V 50Hz supply.
- 3. The mirror should be mounted onto a secure surface.
- 4. When installing please take care to avoid water pipes, joints and electrical cables.

Waste Electrical & Electronic Equipment (WEEE)


The symbol on the product, or on the document accompanying the product, the crossed out wheelie bin symbol, indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic waste.

Sensio House, Unit 7, Speedwell Road, Whitwood, Castleford, West Yorkshire, WF10 5PY


www.sensio.co.uk

Technical drawings for illustration purposes only, Sensio had the right to change any information without prior notice. Make sure you check all hole cut outs before work commences.




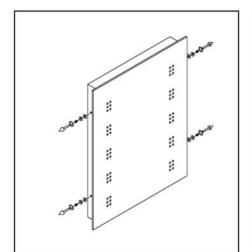


Lay the mirror on a flat surface with the front glass facing upwards. Using a Philips screwdriver, remove the four screws, along with the metal and white spacers on the sides of the mirror as shown above. Carefully lift the mirror off the back box and position it onto a soft flat surface to avoid scratching the mirror. Pierce the small protective IP rated rubber grommet (this will isolate and trap any steam to ensure maximum safety use).

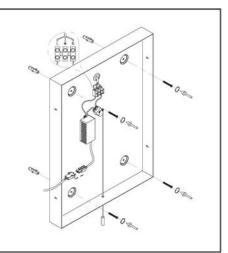

Insert a 3-core cable through the pierced hole in the protective cover, then thread the cable through from behind the back box into the power supply. Mark the position of the fixing holes in the metal back box onto the wall, carefully avoiding any wiring or water pipes. Next, drill and prepare the holes for the screws ensuring that the wall is a solid material. Mount the metal back box of the mirror onto the wall and secure tightly.

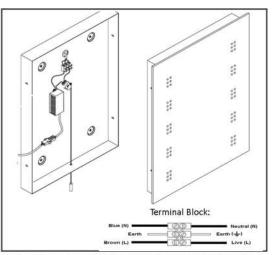

Using a flat-bed screwdriver, securely connect to the main supply using the terminal block (incoming Neutral (blue/black) to Neutral blue and incoming Live (brown/red) to Live brown). Connect the male and female connectors together. Attach the front glass panel safely onto the metal back box mounted on the wall. Secure tightly using the 4 screws, including the metal and white spacer. Switch on the mains electrical supply. Activate the mirror via the pull cord.

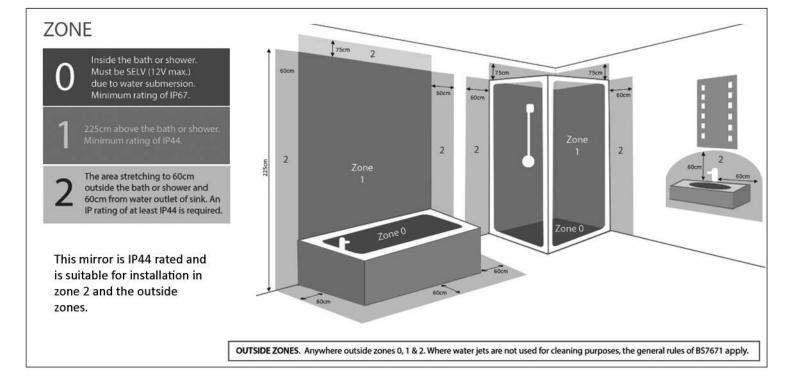

Maintenance & Care

- Ensure that the power is disconnected prior to cleaning.
- To keep the finish of this product, wipe over with soft cloth periodically.
- Do not use harsh chemical solvents, this may dis-colour or damage the finish.

Sensio House, Unit 7, Speedwell Road, Whitwood, Castleford, West Yorkshire, WF10 5PY WWW.Sensio.co.uk Visit our website for online instructions.

Technical drawings for illustration purposes only. Sensio had the right to change any information without prior notice. Make sure you check all hole cut outs before work commences.

